


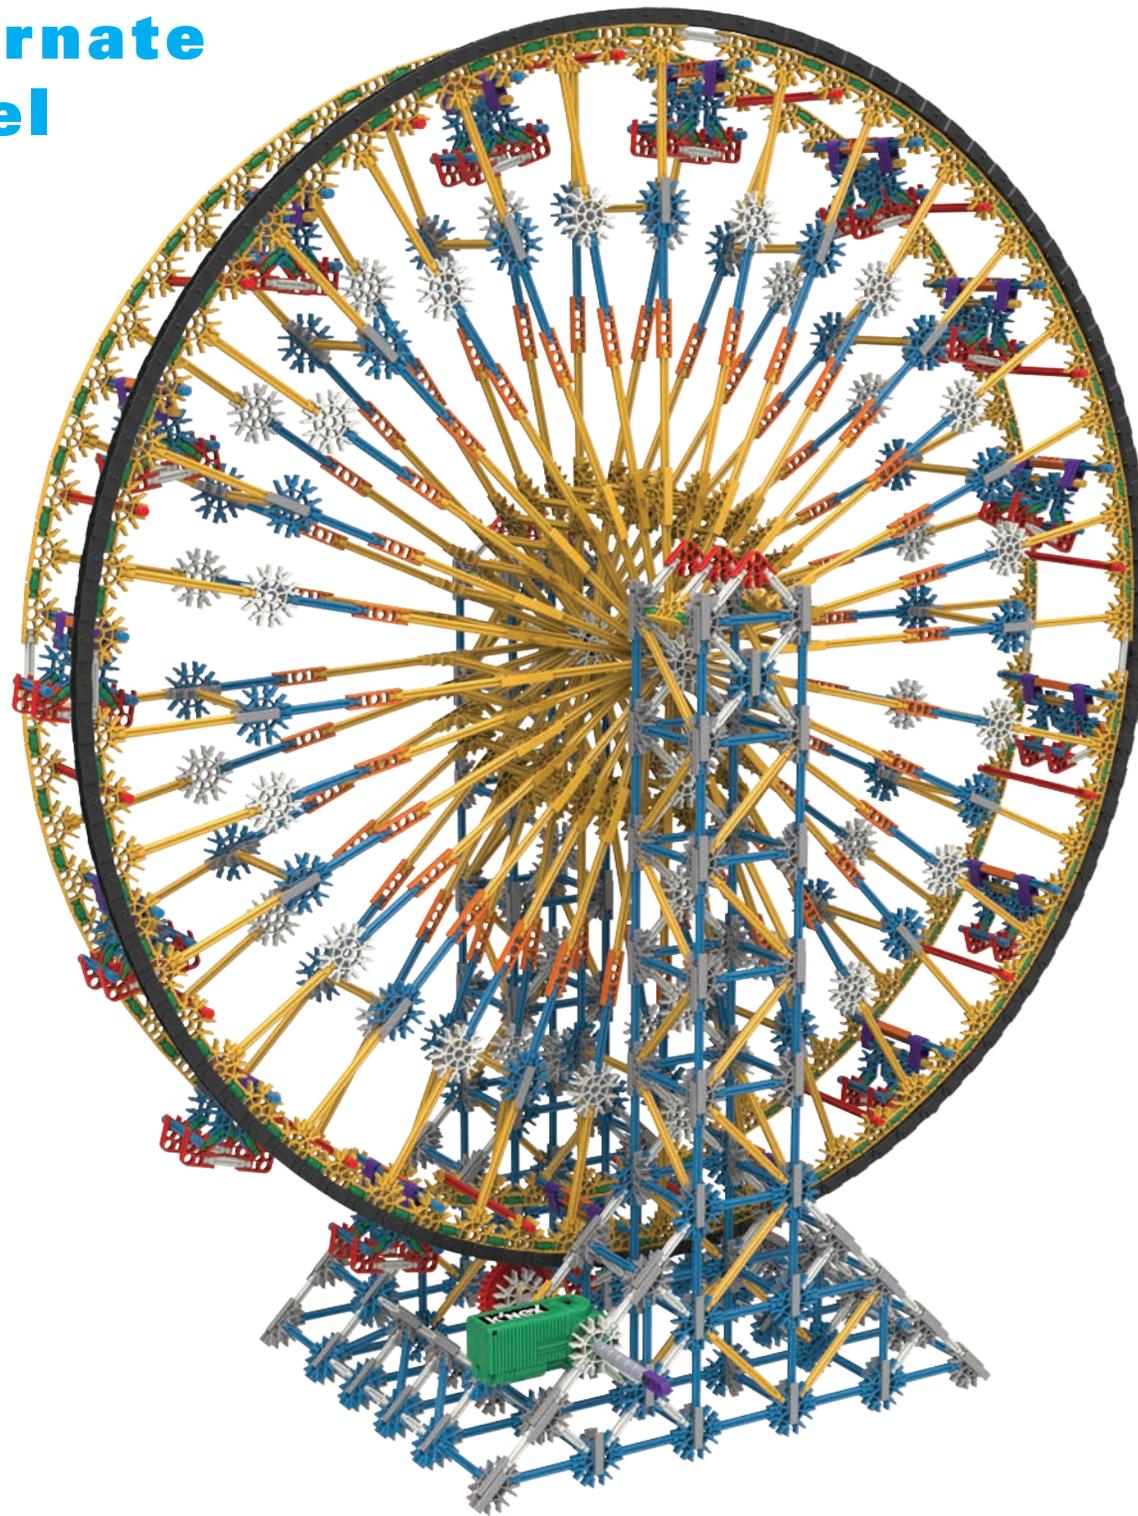
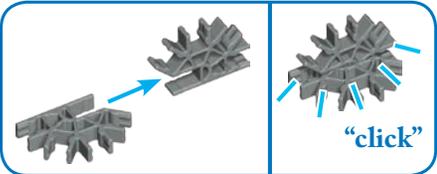
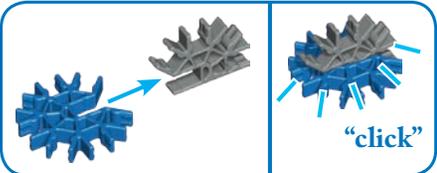


52443 Alternate Ferris Wheel

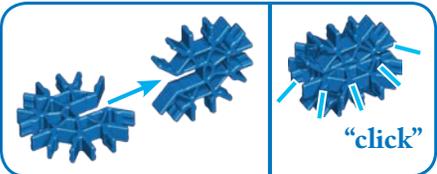


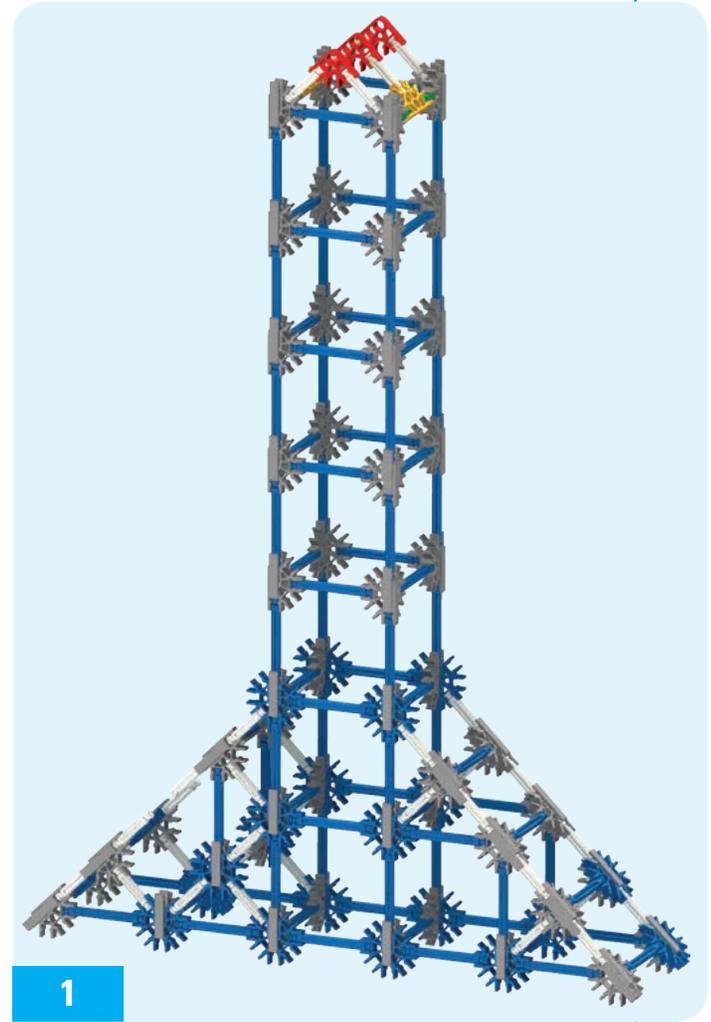





1

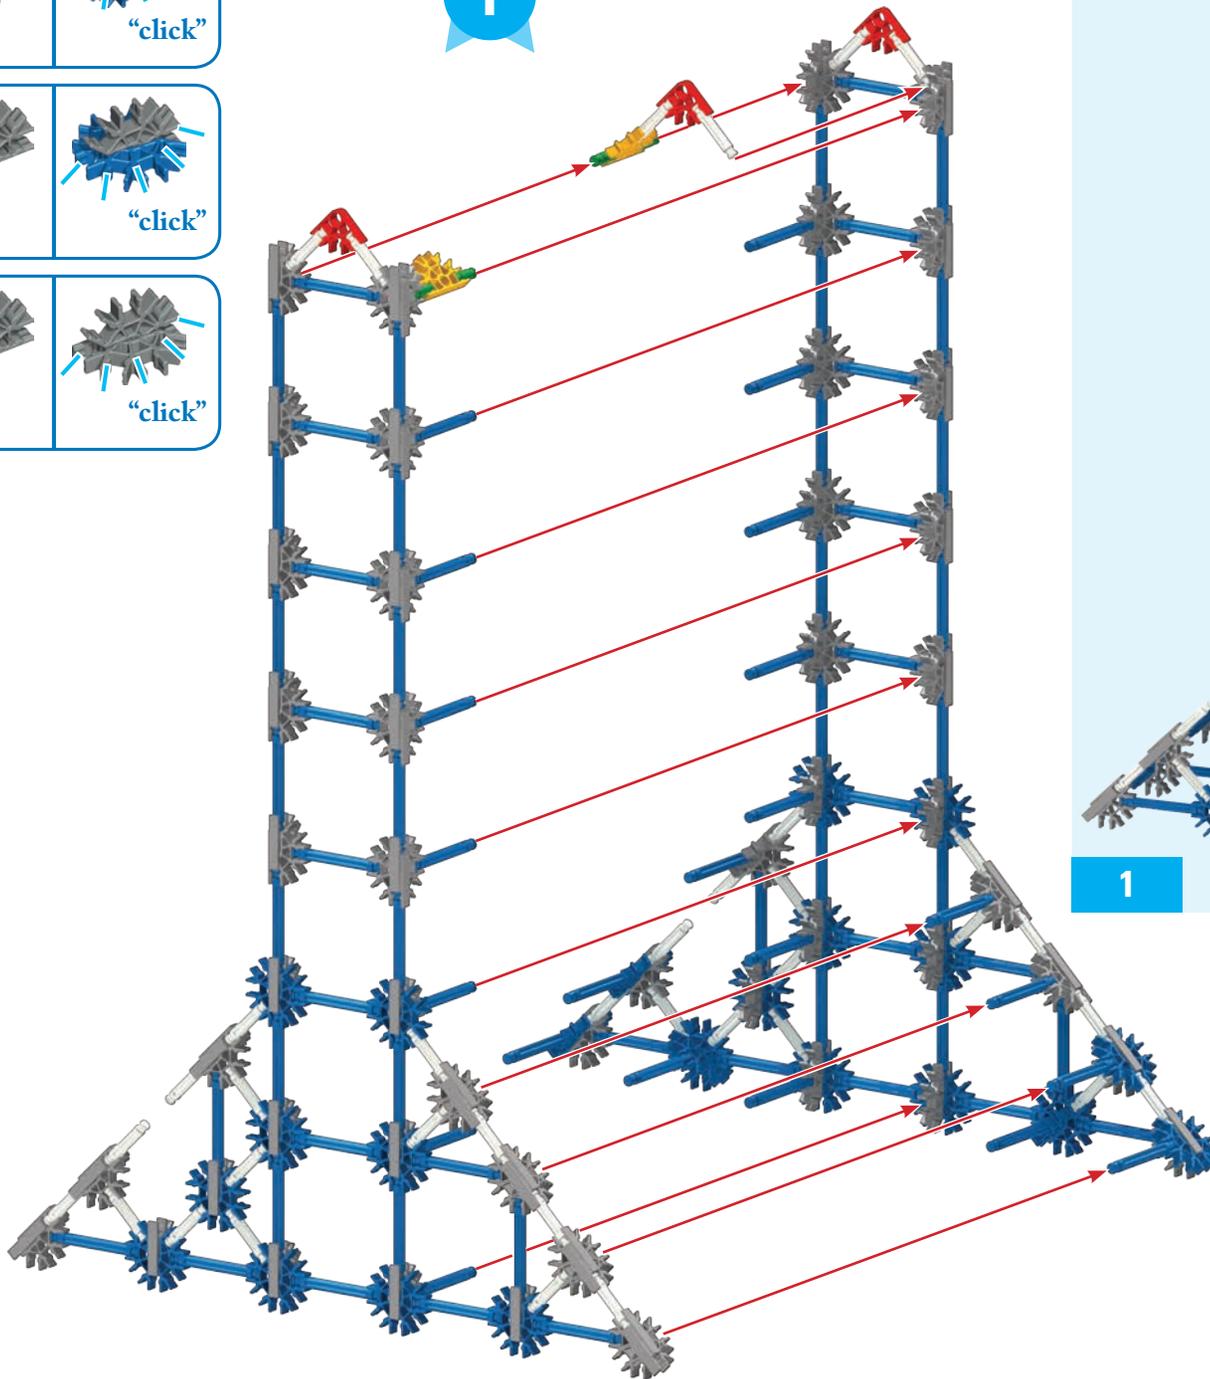



3		24		2	
4					
36					
81				80	

Did you install 2 AA (or LR6) batteries in the motor?

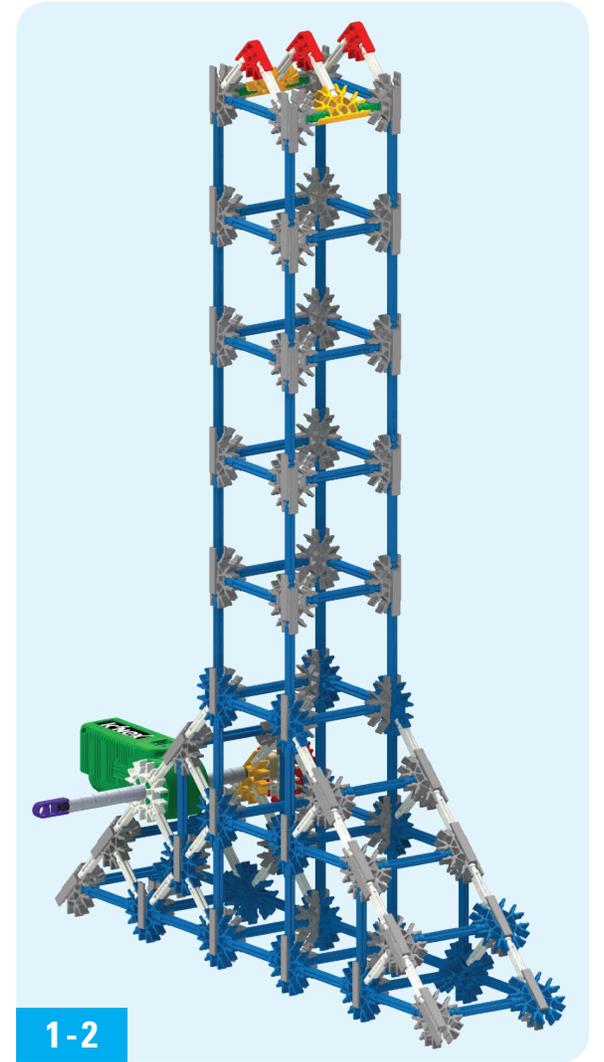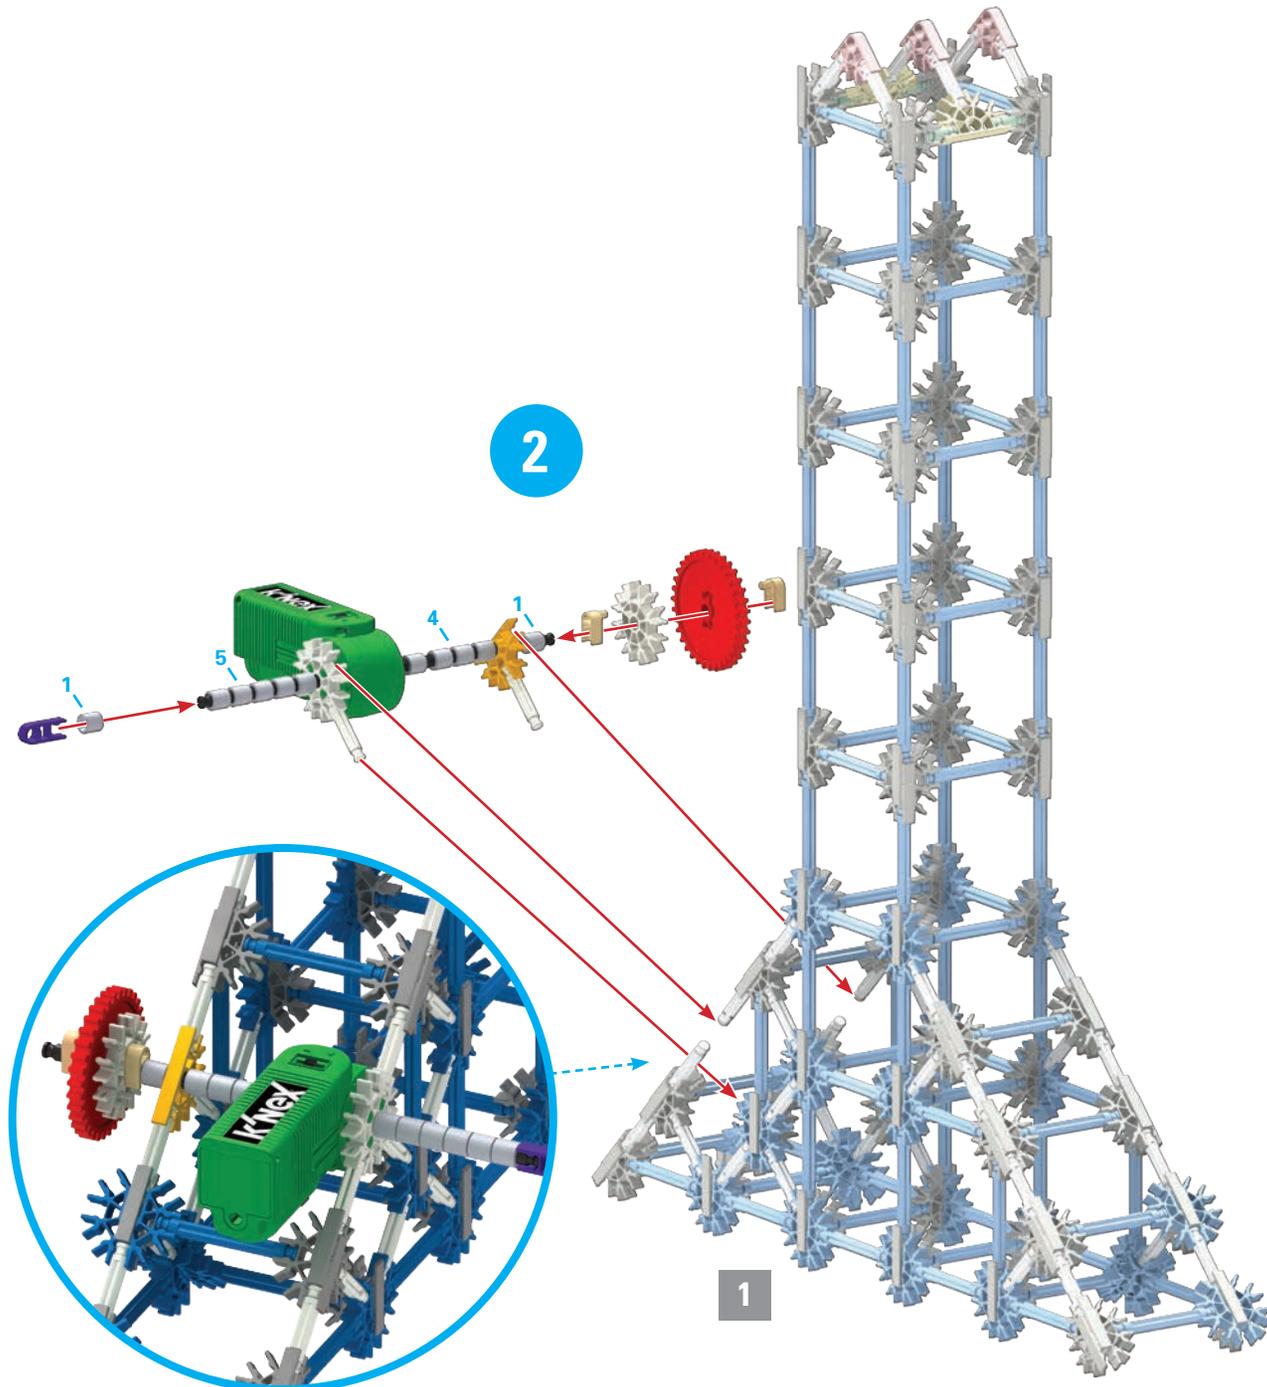

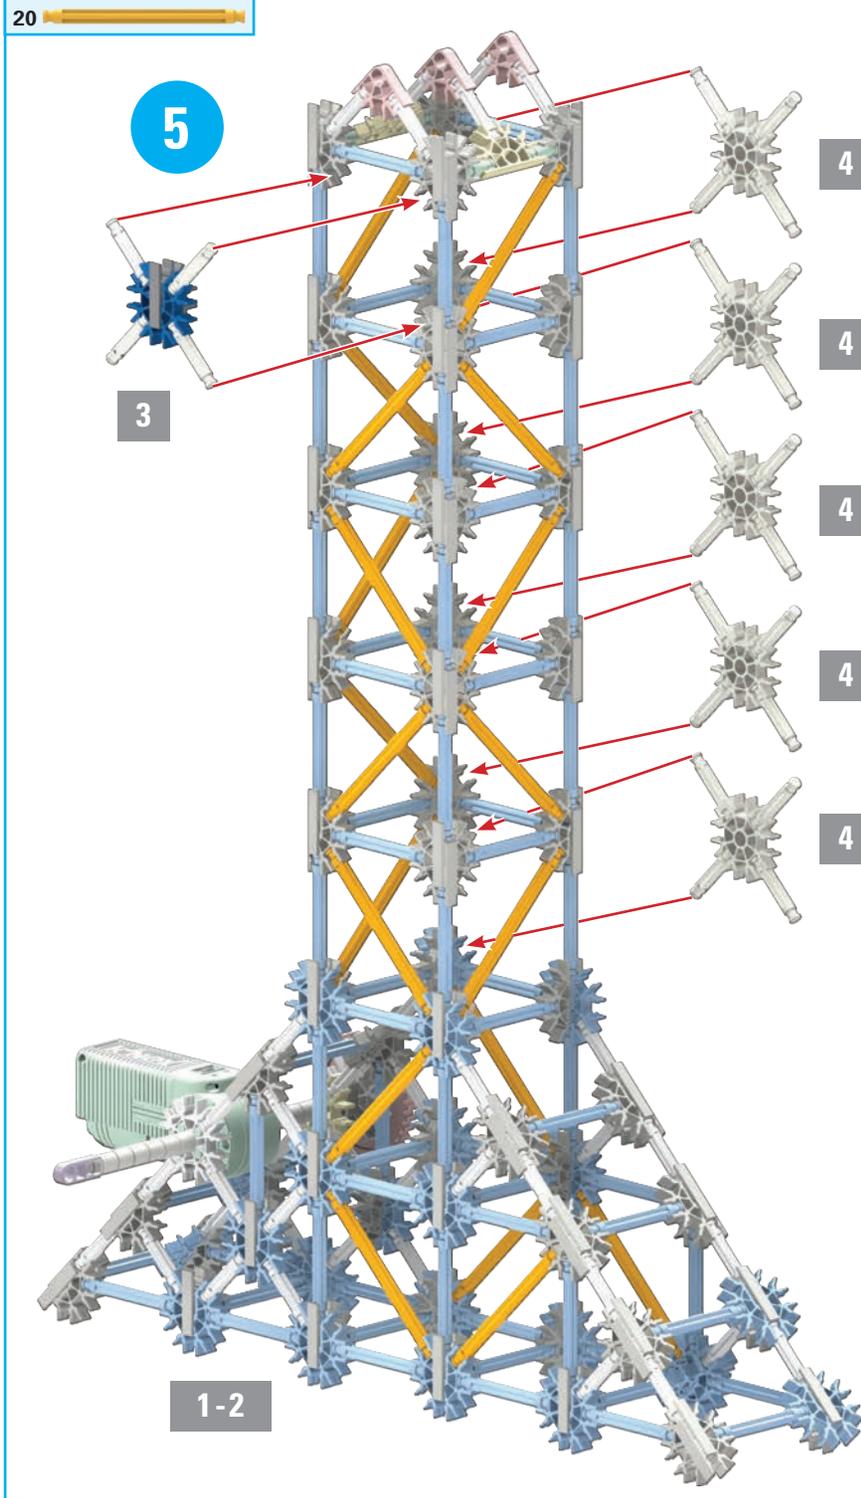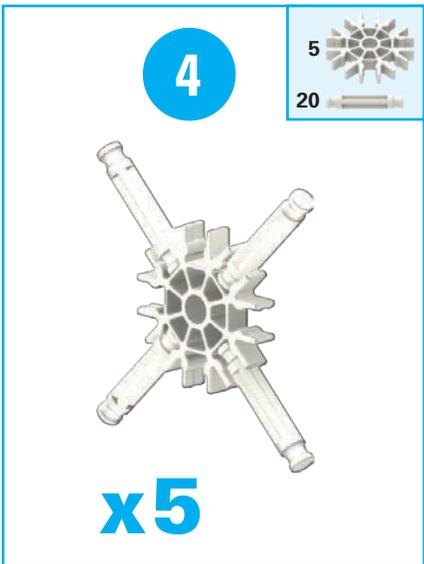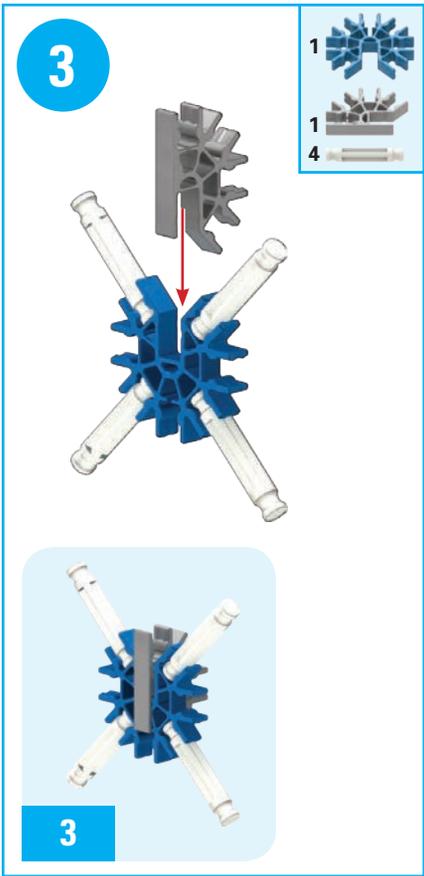


6

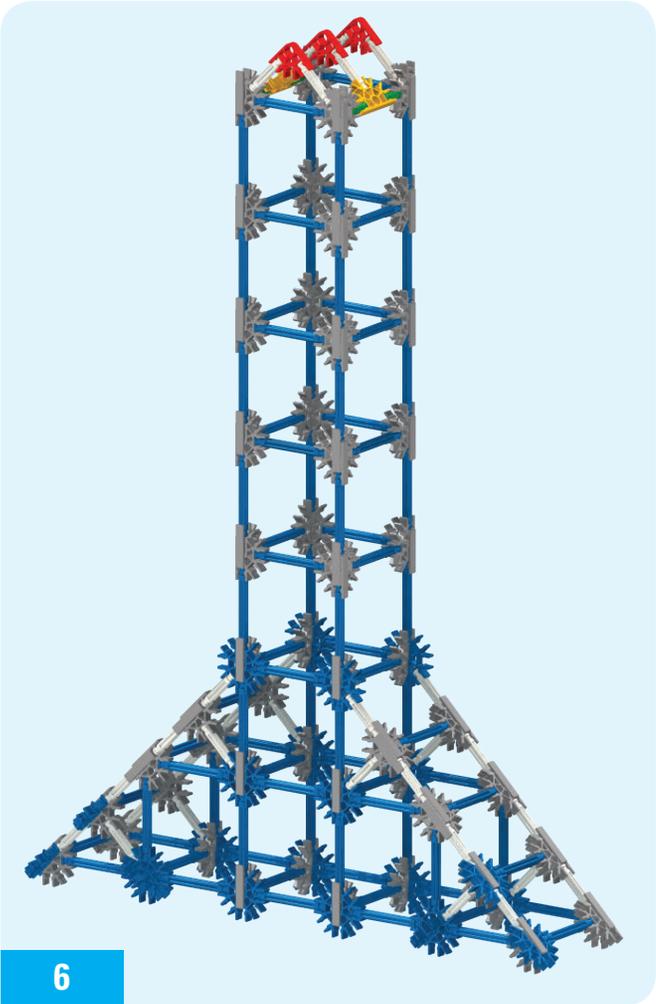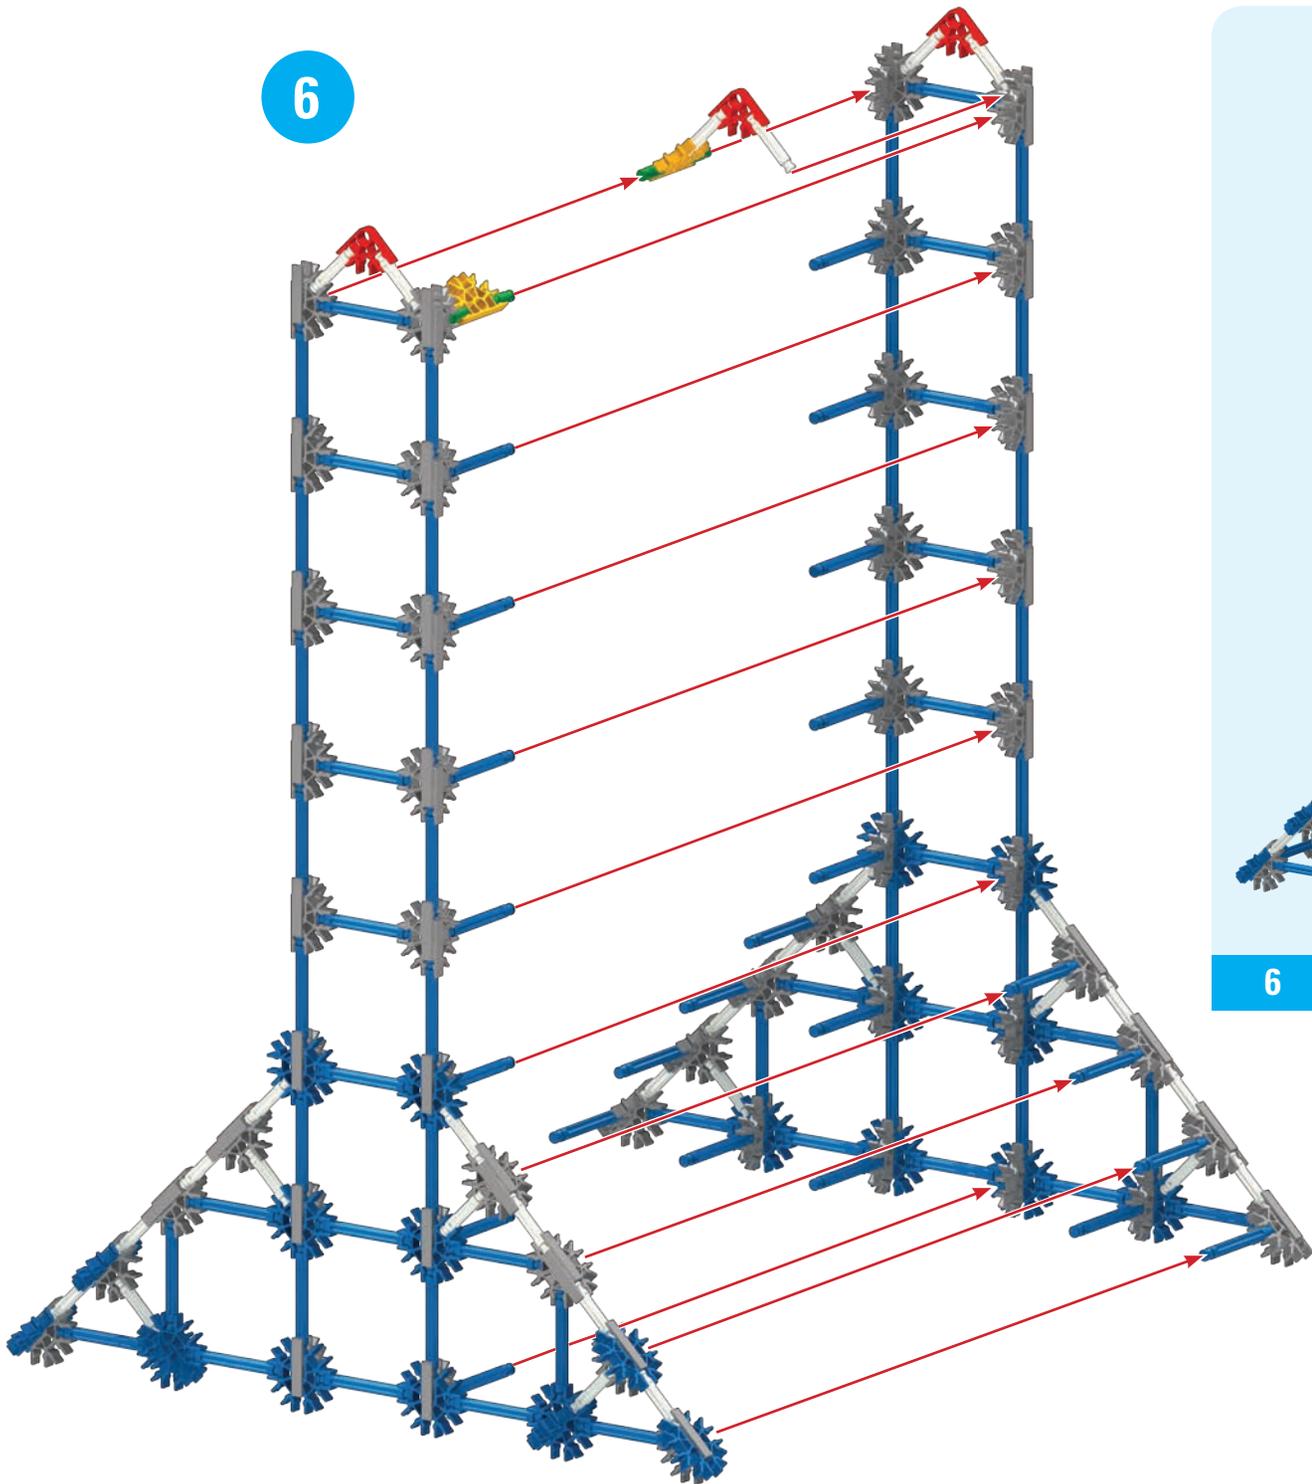



- | | | | | | |
|----|--|----|--|---|--|
| 3 | | 22 | | 2 | |
| 4 | | | | | |
| 30 | | | | | |
| 84 | | 82 | | | |

10

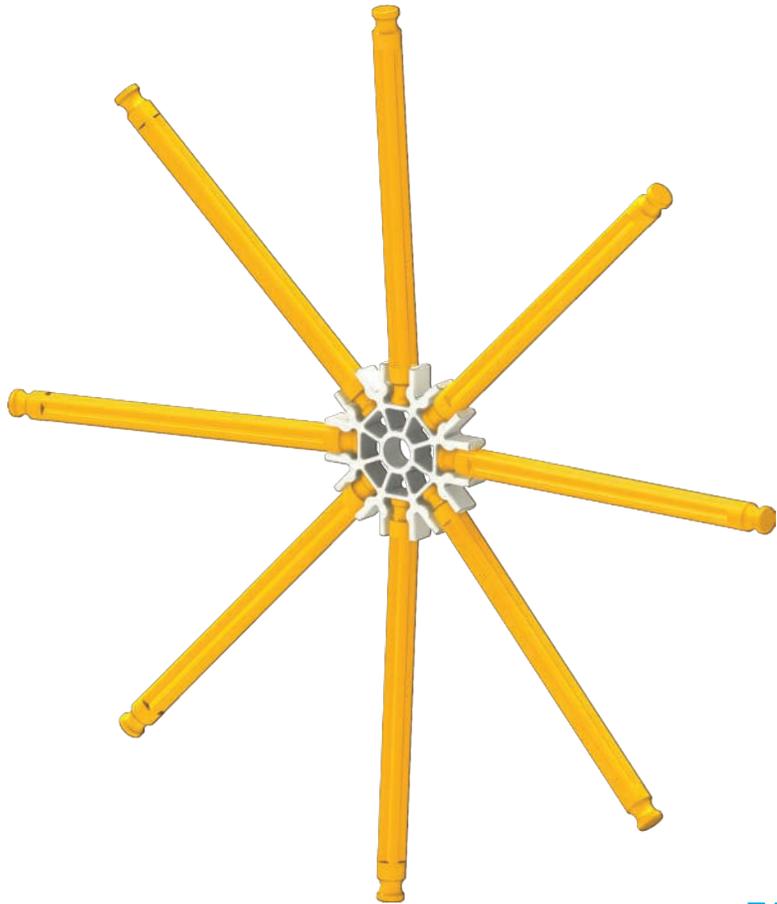

x8

11

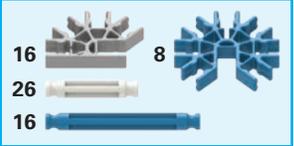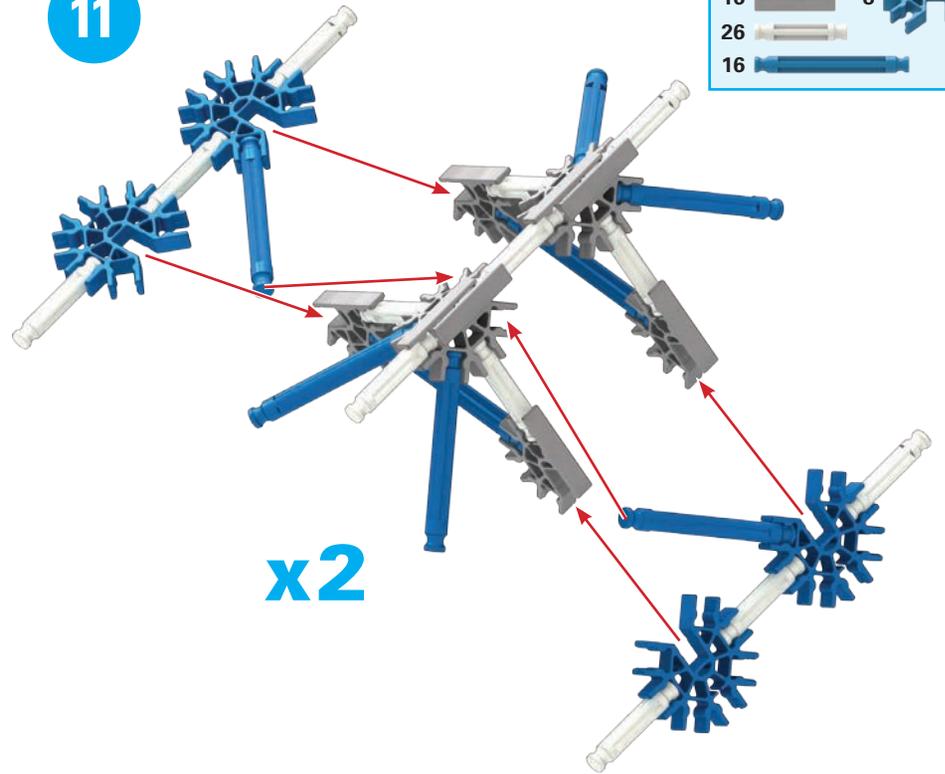

x2




11

x2

- 1  3  1 
- 2 



12

10


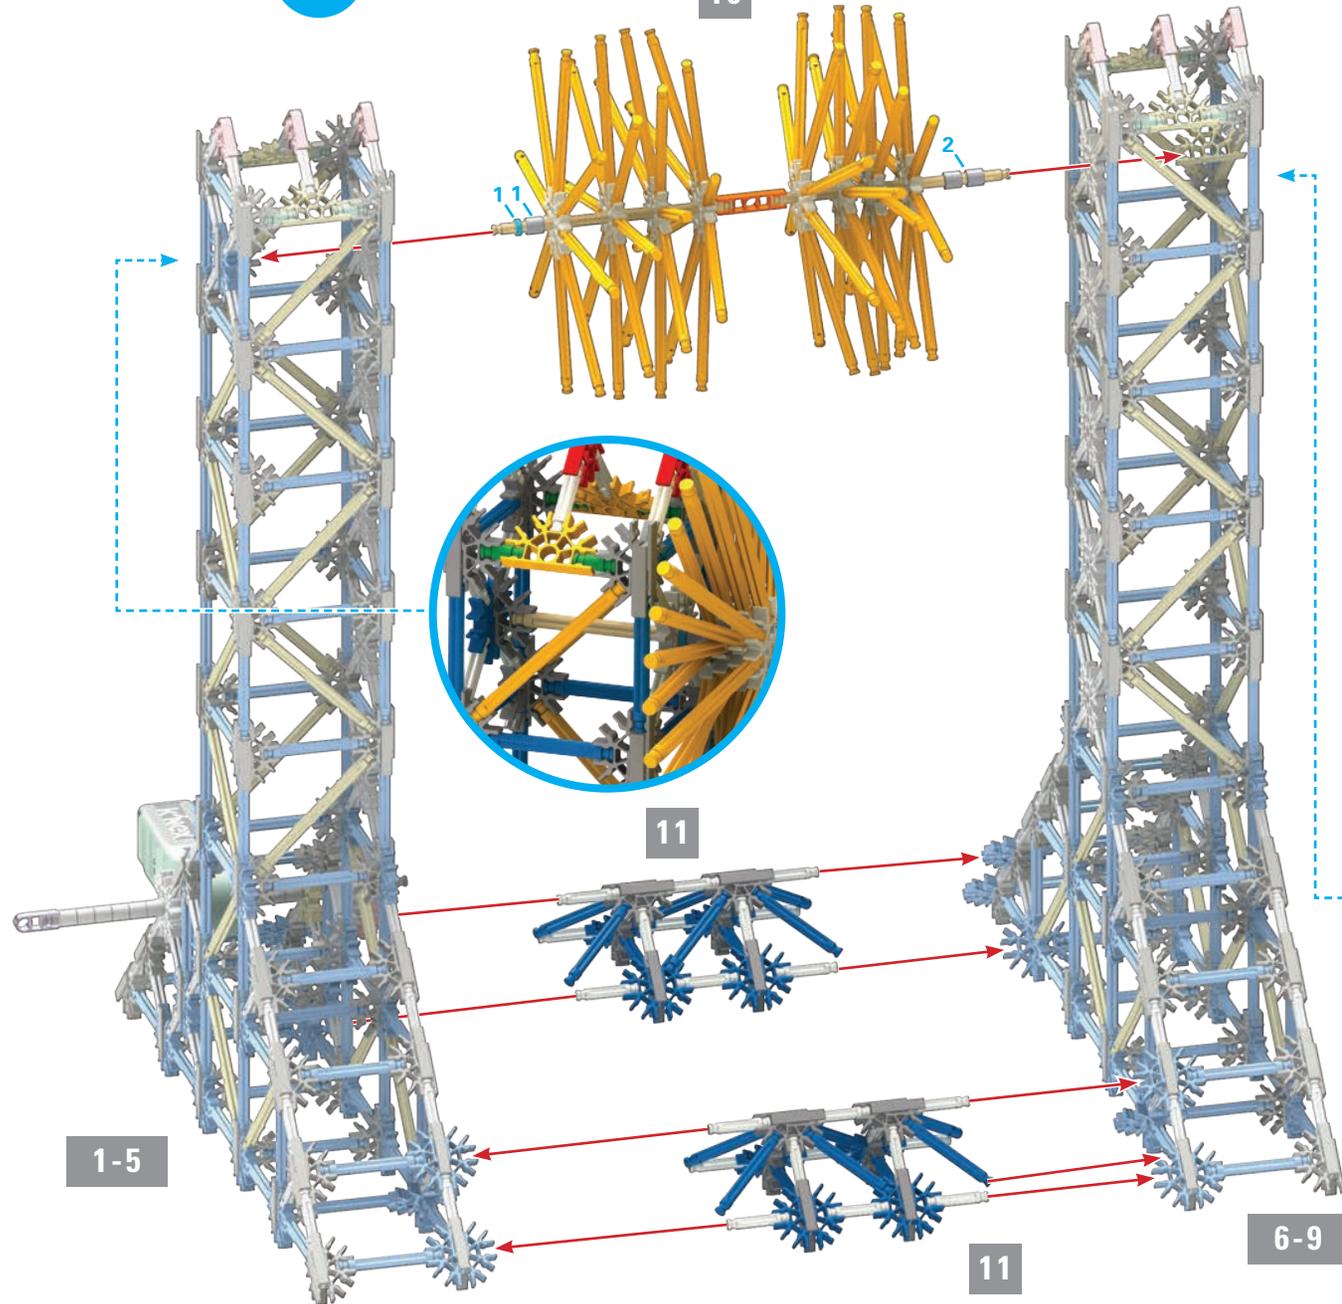


1-12



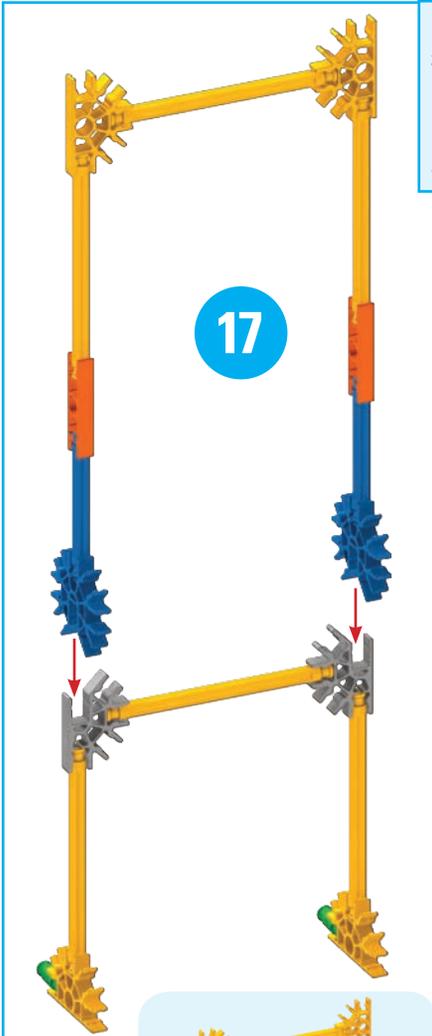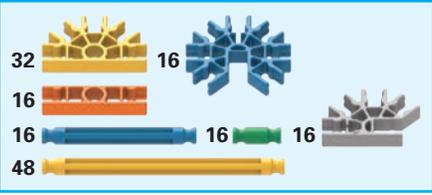


x8

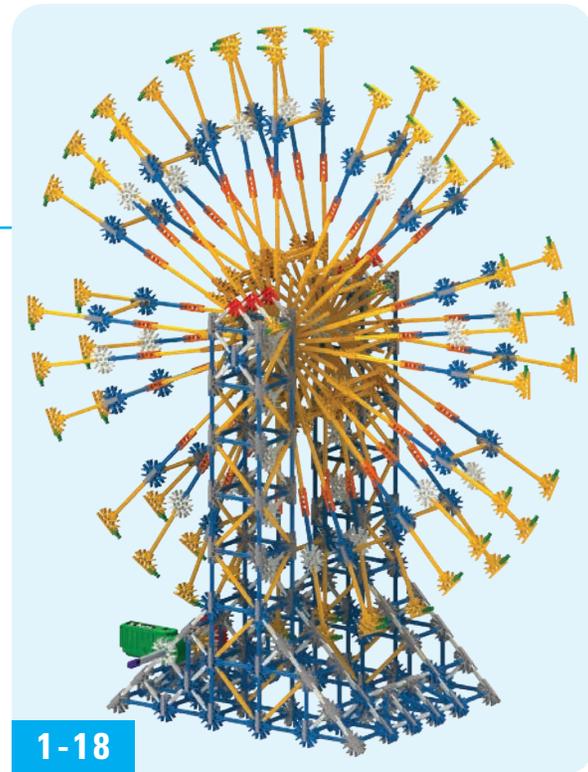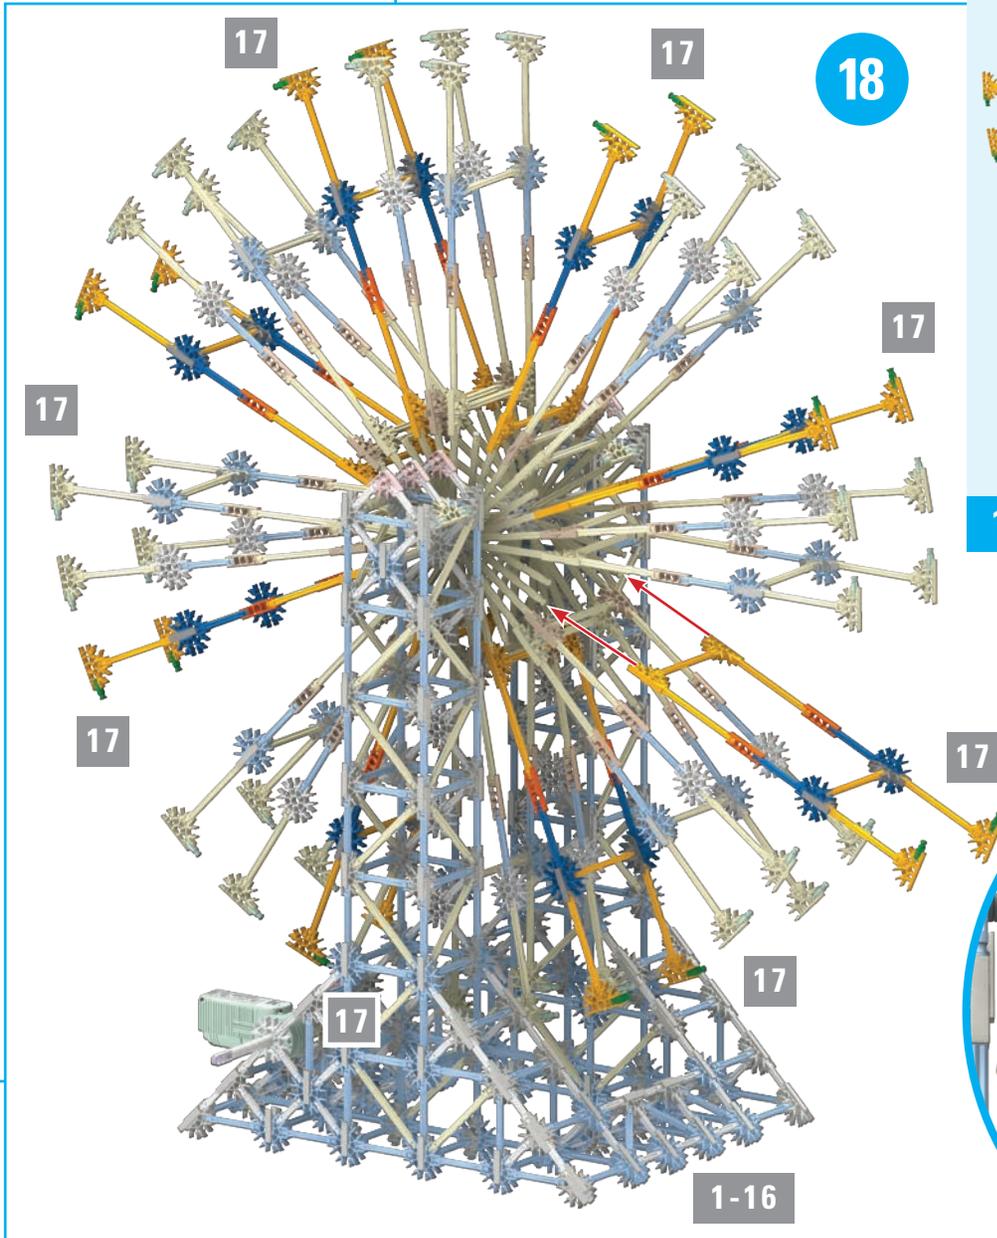



1-18



19

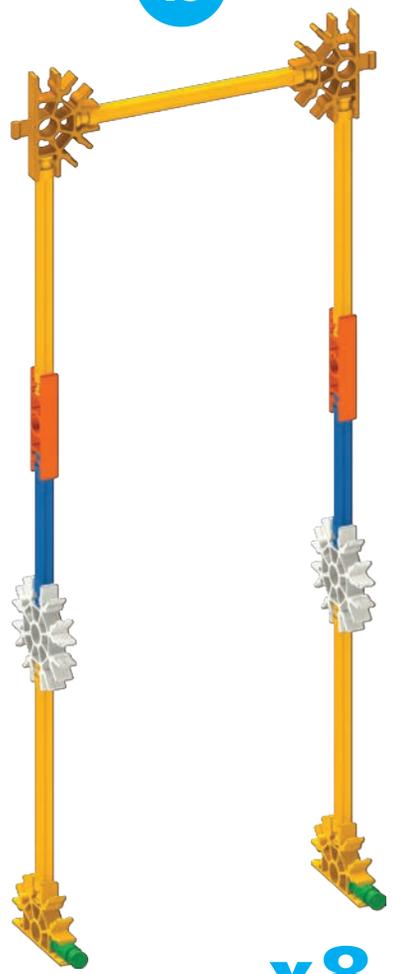


x8

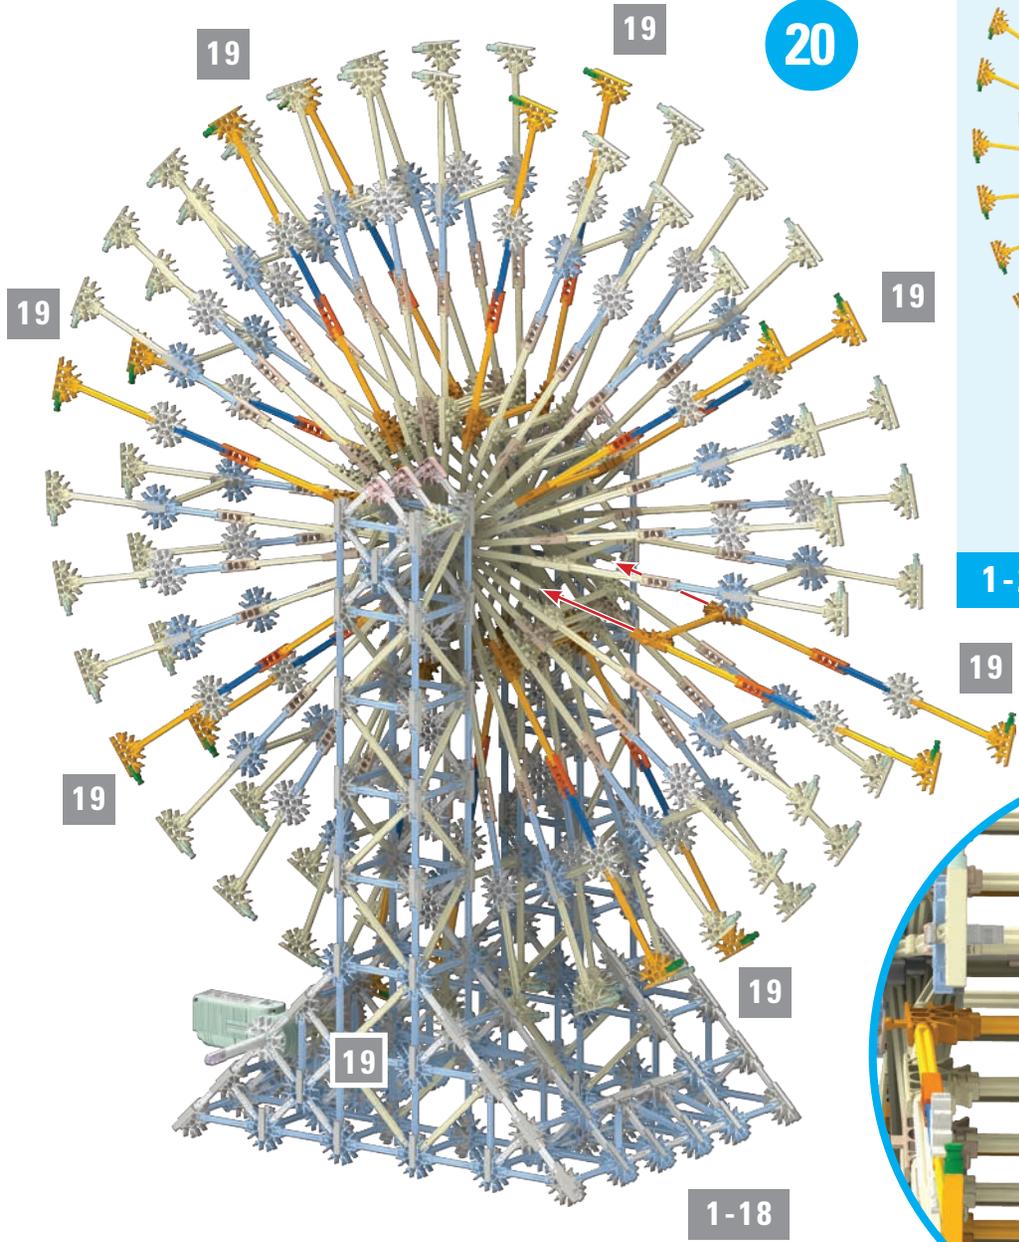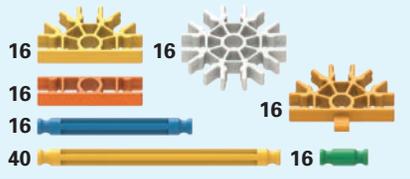


20




1-20

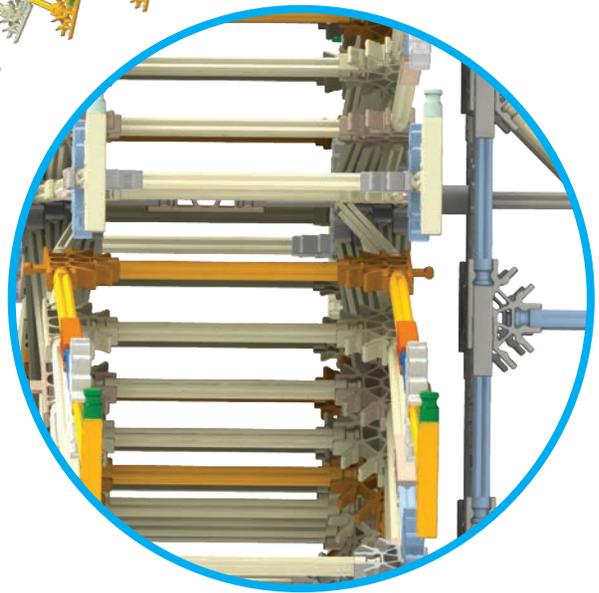

21

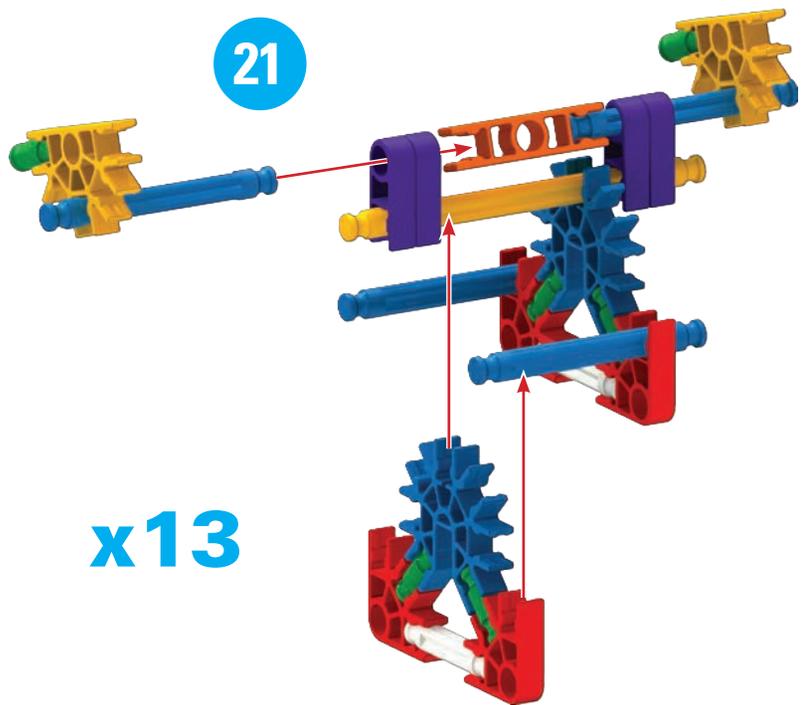


x13

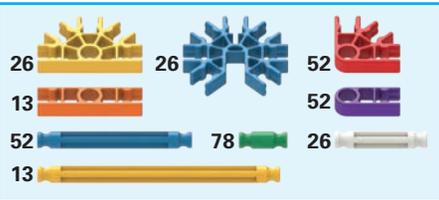

21

x13

22

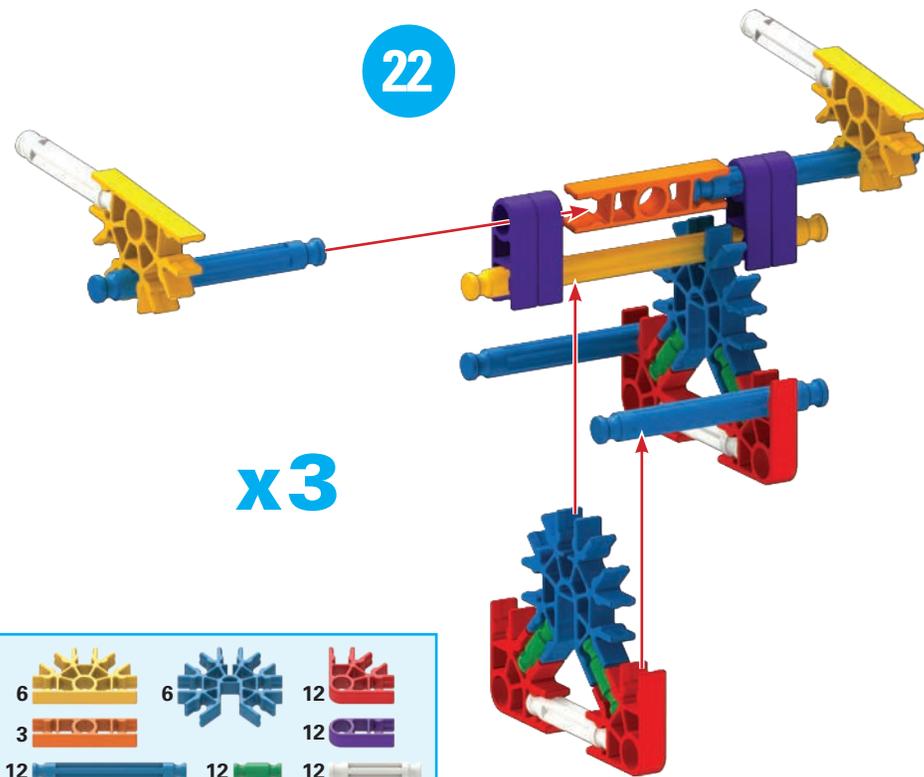

x3



22

x3




1 - 28

Tip: Make sure the indents of the outside of the chain sit in the grooves of the red gear.



If the motor is not working properly:

- Check to see if you have fresh batteries and that they are installed correctly.
- If it is still not working, call our Consumer Hotline at 1-800-KID-KNEX (USA and Canada only). See the back cover of the instruction book for other ways to contact K'NEX.

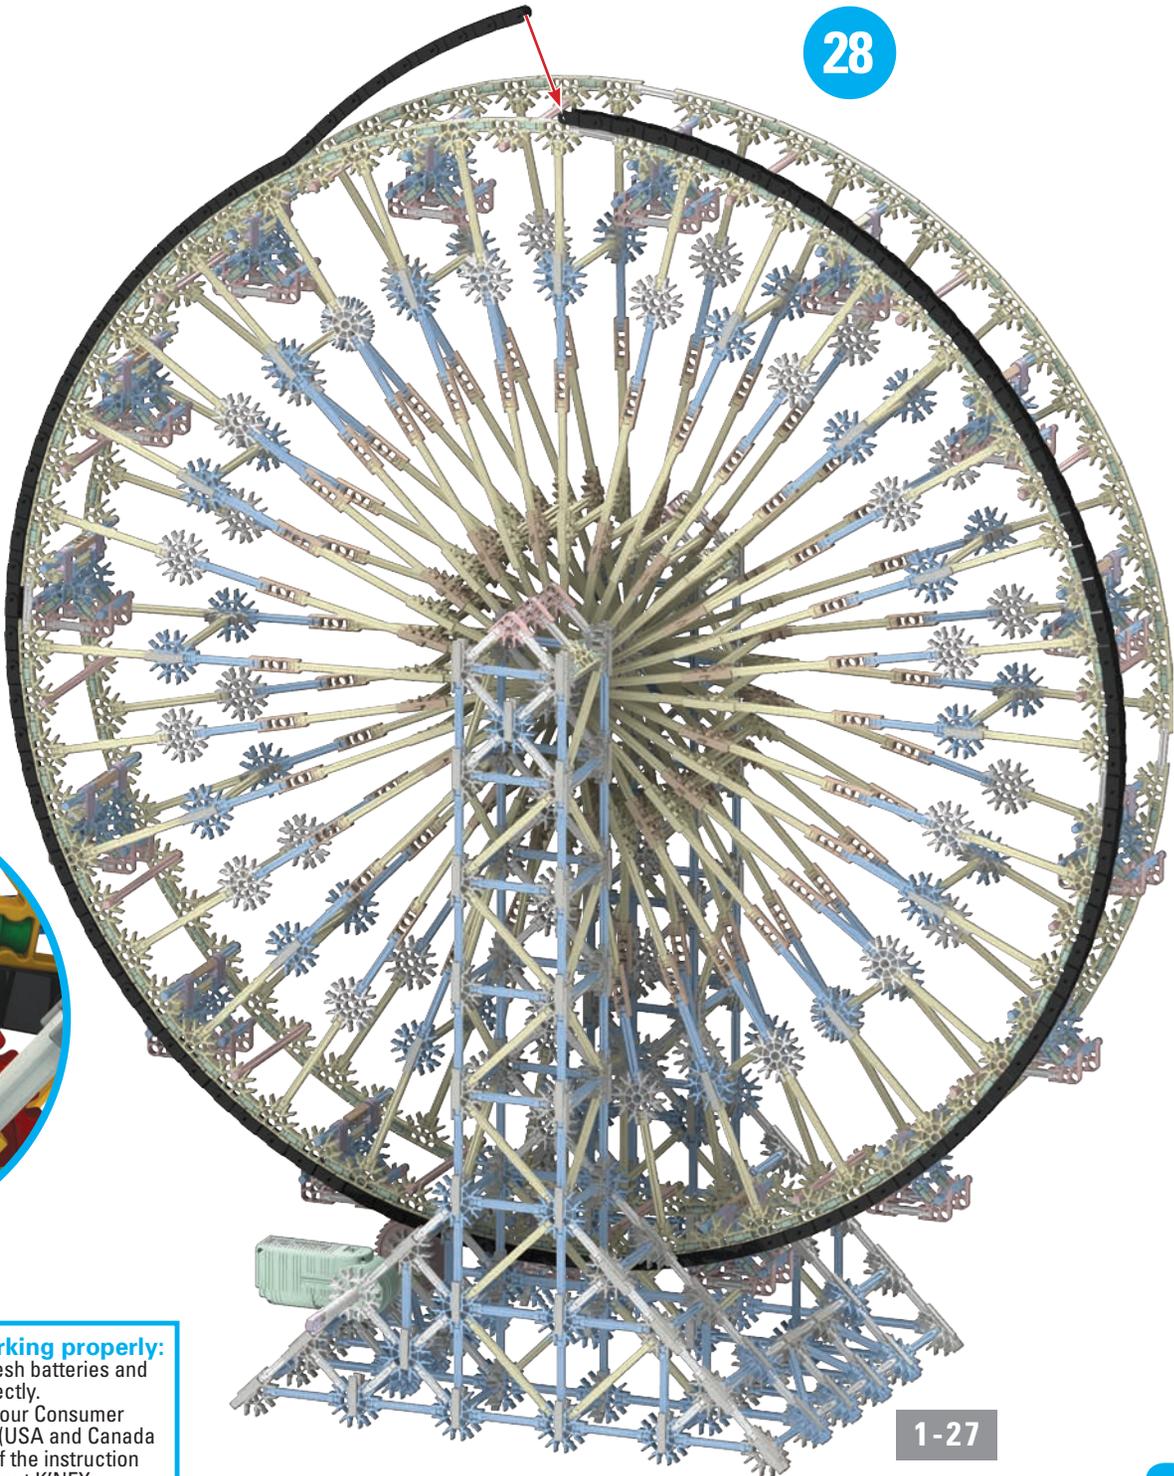

1-27