



# **Tiny TV Classics Instruction Manual**

 


**Top Scenes On  
Tiny Screens!**

## your new tiny tv!

Thank you for purchasing your brand new Tiny TV Classics set! Please use this guide to help you set up your TV and familiarize yourself with the controls on the TV unit and on the controller.

### tv unit and controller

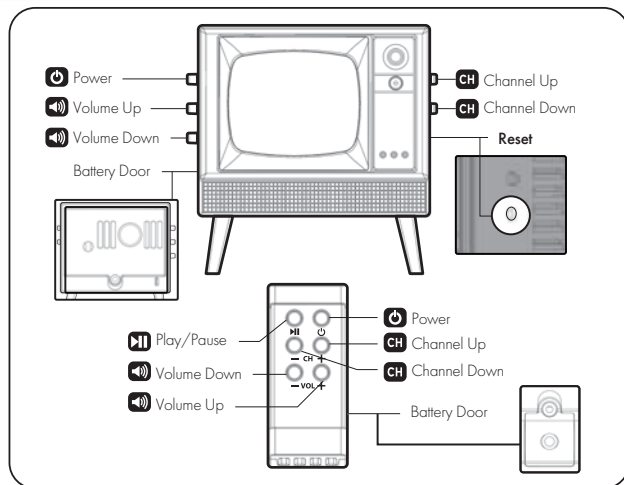


### setting up

No cables necessary! After pulling out the Try-Me tab in the back of the unit, simply press the Power button on the side of the unit to turn the unit on.


\*Please note that you cannot use the control unless the main unit has been powered on first.

## tiny tv surfing

 Press CHANNEL UP or CHANNEL DOWN to flip through the channels, either on the TV unit or with the remote control. Press the VOLUME UP and VOLUME DOWN buttons to adjust the volume, either on the TV unit or with the remote control.

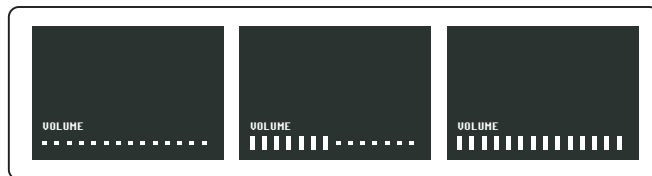

 The TV unit will cycle through channels and loop back to the first channel. After you get to the last channel, the NO SIGNAL screen will appear.

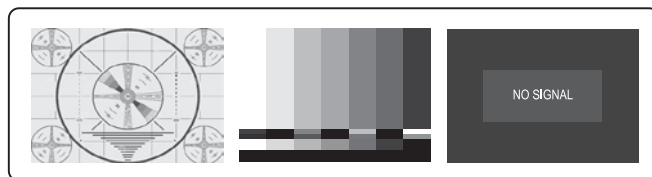

### sleep mode

 
 
After a few minutes, the unit will go into sleep mode to conserve battery power. When in sleep mode, the TV unit can only be woken up either by pressing the POWER button on either the TV unit or the remote control within the first TWO minutes of sleep mode. After that, only the POWER button on the TV unit will work to wake up the TV.

# battery replacement

To replace your batteries, you will need to access the battery door on your unit. This will be located either on the back or on the bottom depending on your TV unit. Using a Phillips/crosshead screwdriver (not included), loosen the screws on the battery door cover (screws stay attached to the cover.) Remove the cover.

**(A) TV Unit:** Insert 3 x 1.5V "AAA" or LR3 size batteries. Alkaline batteries recommended. Replace battery cover and tighten screws.

**(B) Remote Control:** Insert 2 x 1.5V "AG13" or LR44 size batteries. Replace battery door cover and tighten screws.



## battery information + fcc statement

- Non-rechargeable batteries are not to be charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- The supply terminals are not to be short-circuited.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- Dispose of batteries safely.
- Do not dispose of batteries in a fire. Batteries may explode or leak.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) the device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To display the FCC E-labelling on screen, push the power button to restart device.

In case of environmental electrostatic discharge, products may malfunction. In this case, reset by turning off then on again, or press the reset button.



IMPORTED BY:  
K'NEX UK LTD.,  
200 BROOK DRIVE,  
GREEN PARK, READING,  
RG6 2UB, ENGLAND.

K'nex/Basic Fun C/O  
Regional Express GmbH  
Darmstadter Landstr. 116  
60598 Frankfurt,  
Germany.



Basic Fun!, Inc.  
Boca Raton, Florida 33431, USA  
TEL: 1-561-997-8901  
MADE IN CHINA  
CAN ICES-3(B)/NMB-3(B)

**WARNING! Not suitable for children under 3 years. Small Parts. Choking hazard.**

The colors and decorations of products enclosed may sometimes vary from the pictures on the packaging. Please retain this package and instruction sheet for future reference.

**WARNING! Dispose of used batteries immediately. Keep new and used batteries away from children.**

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.