


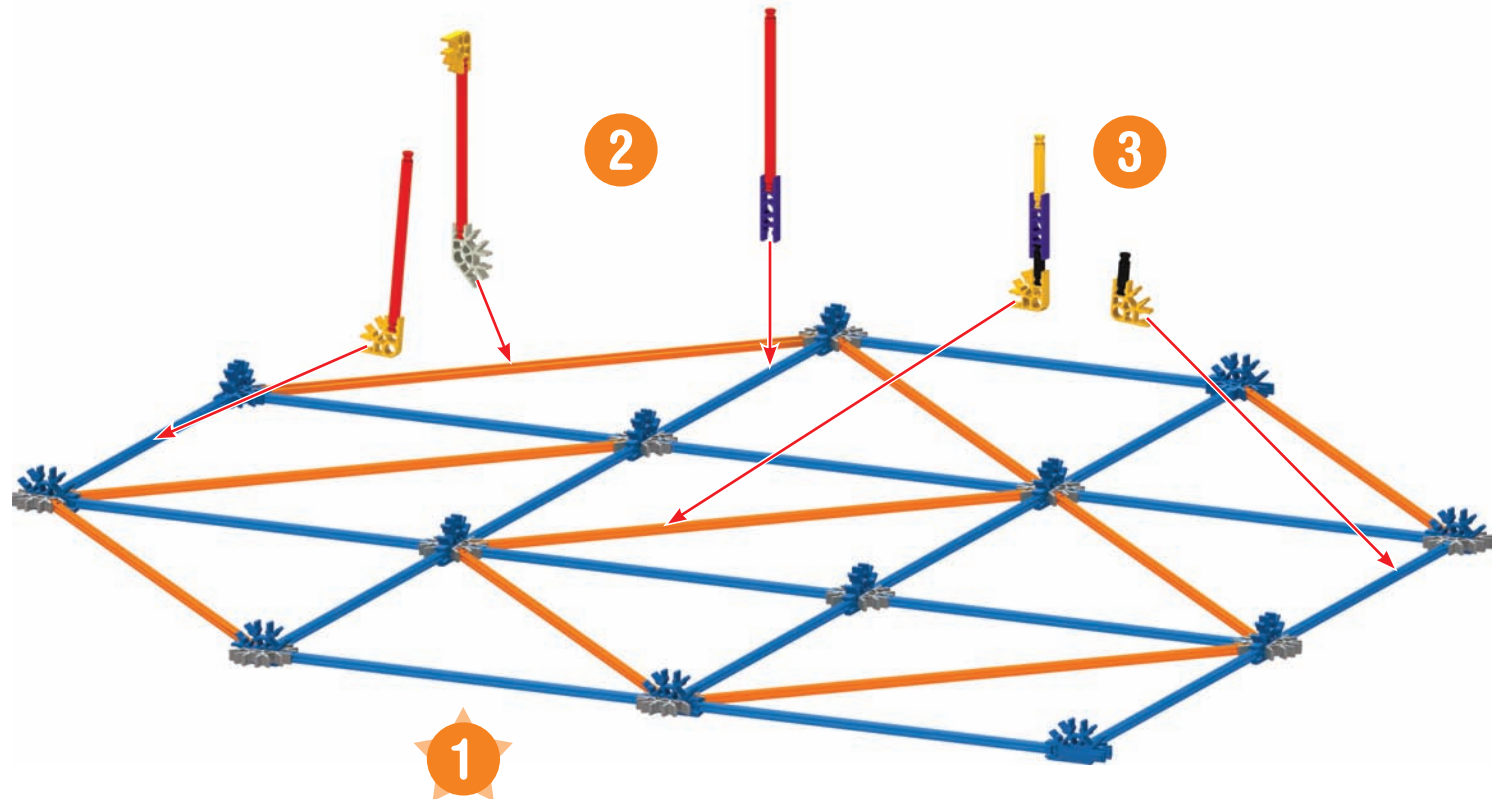
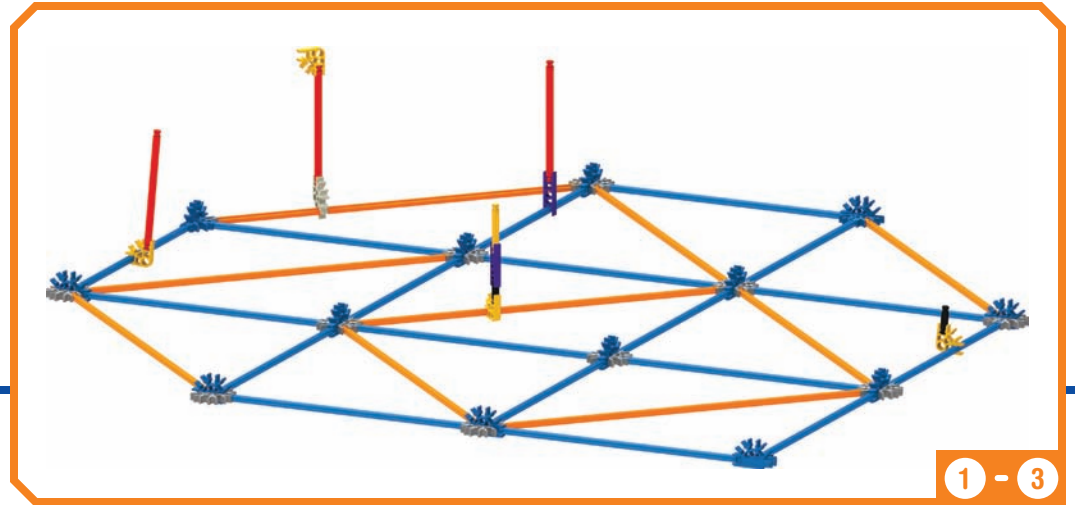
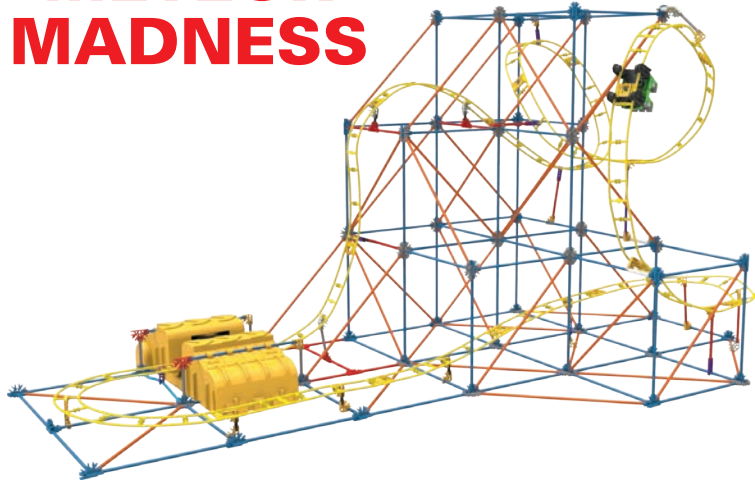
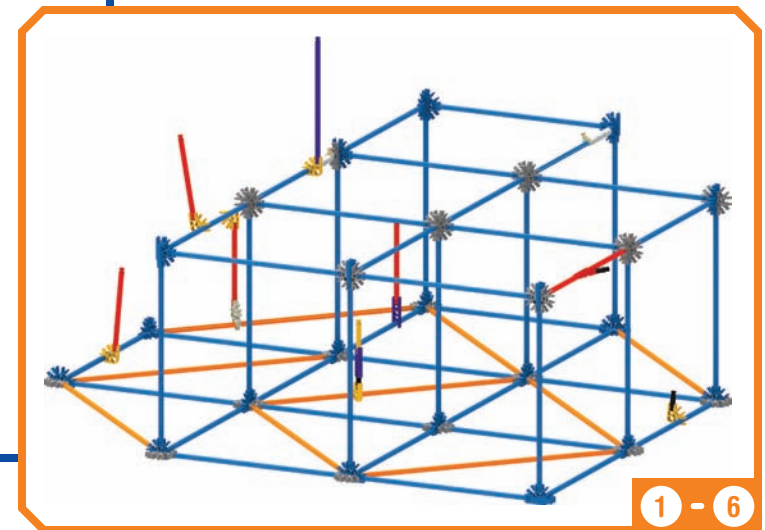


METEOR MADNESS


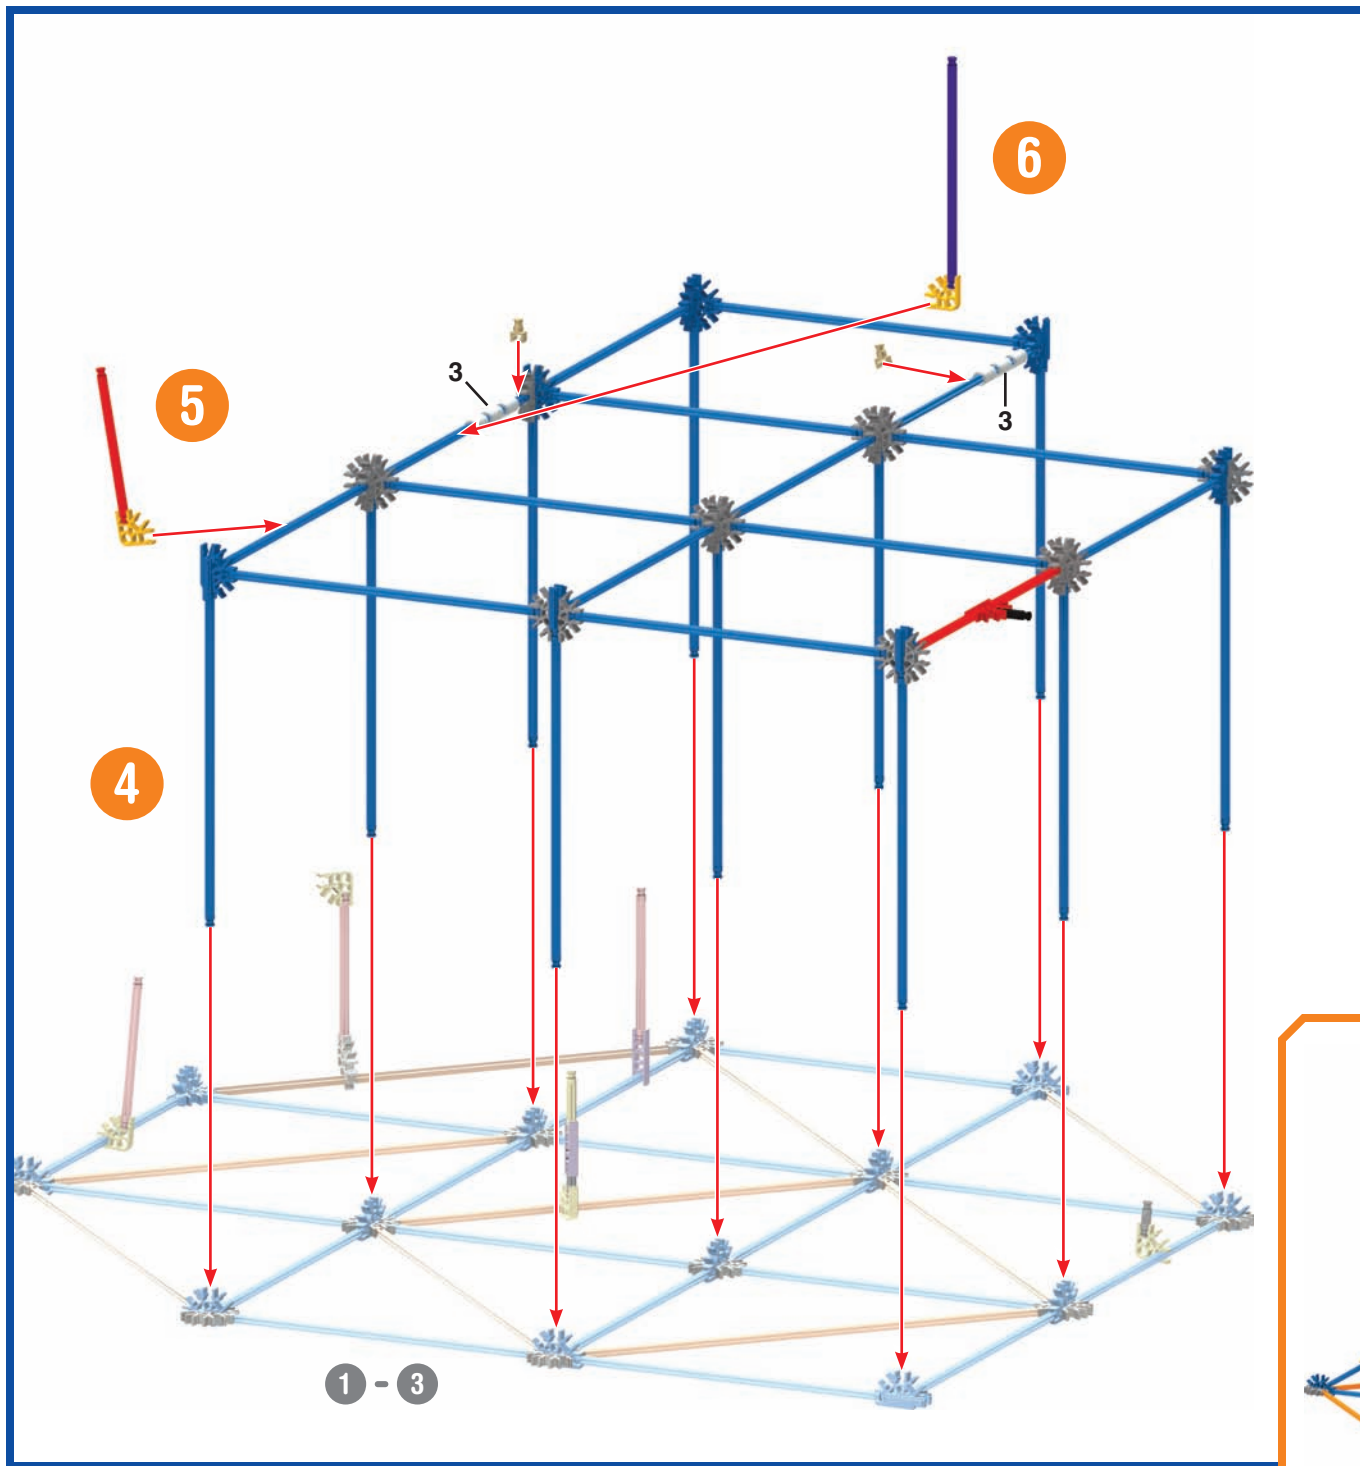



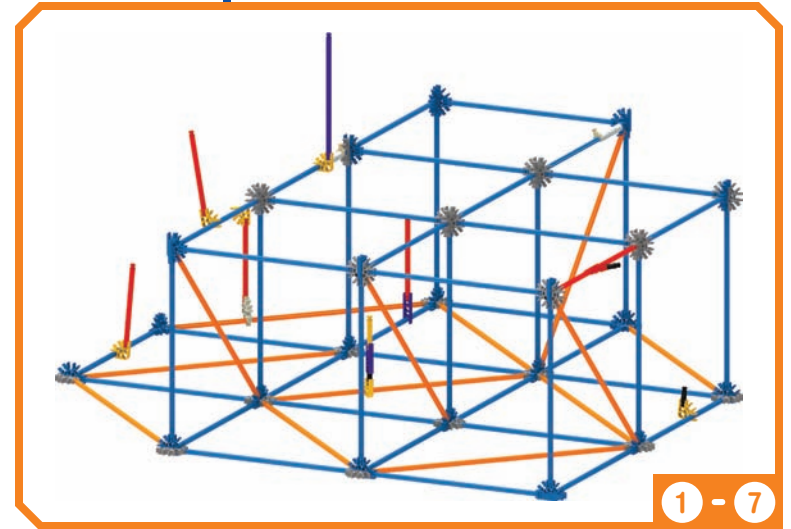


 x4

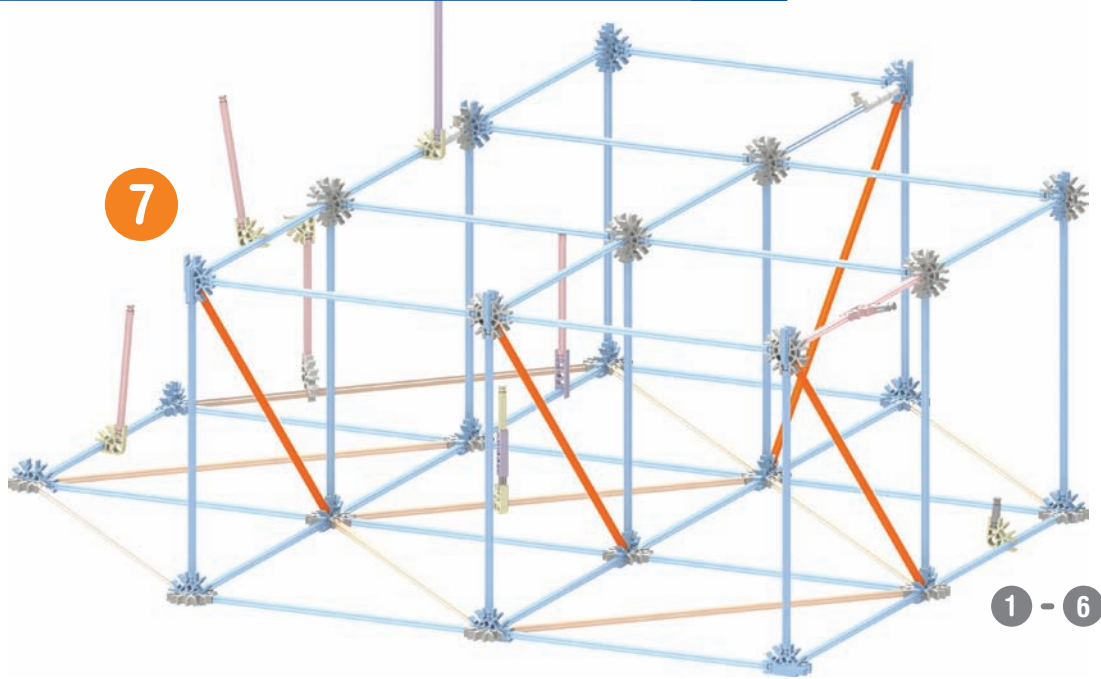

 x5

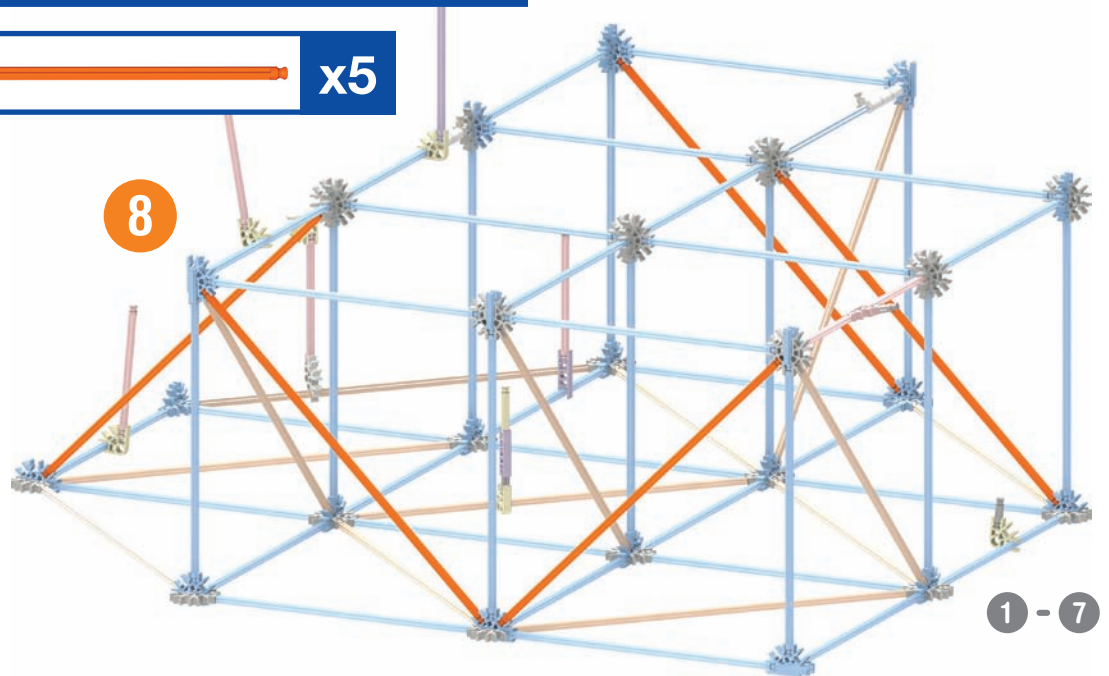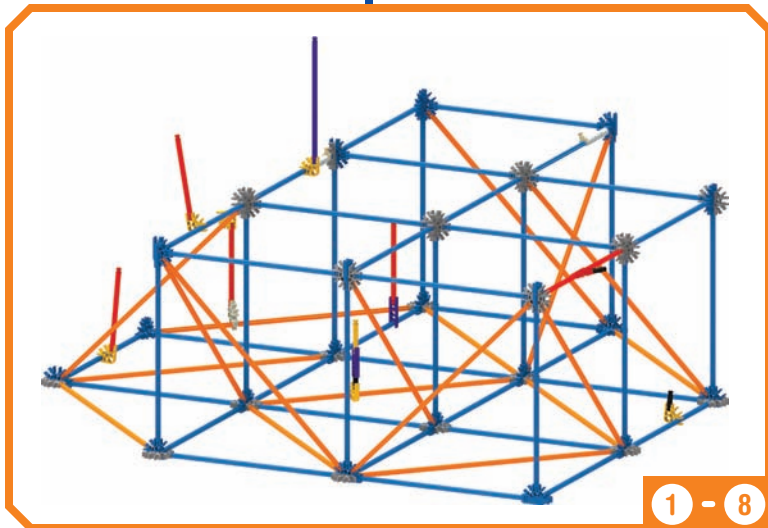

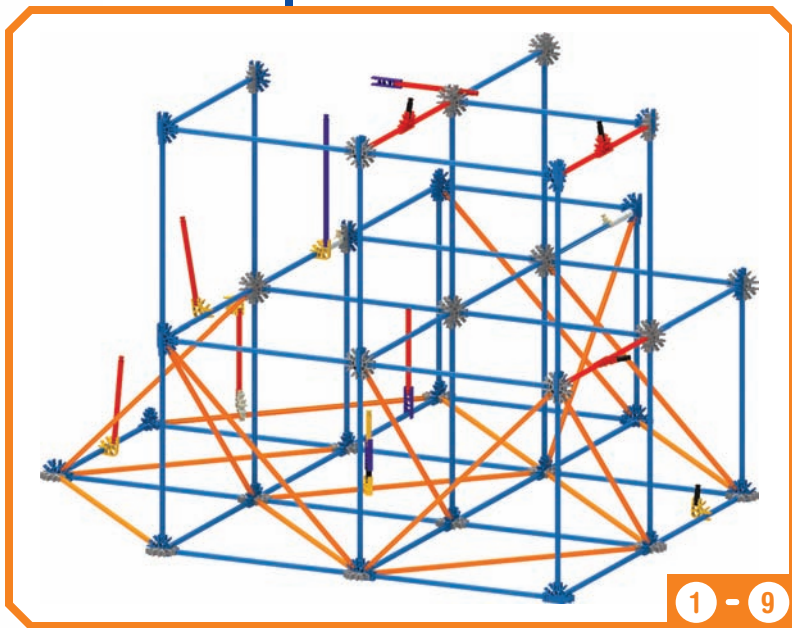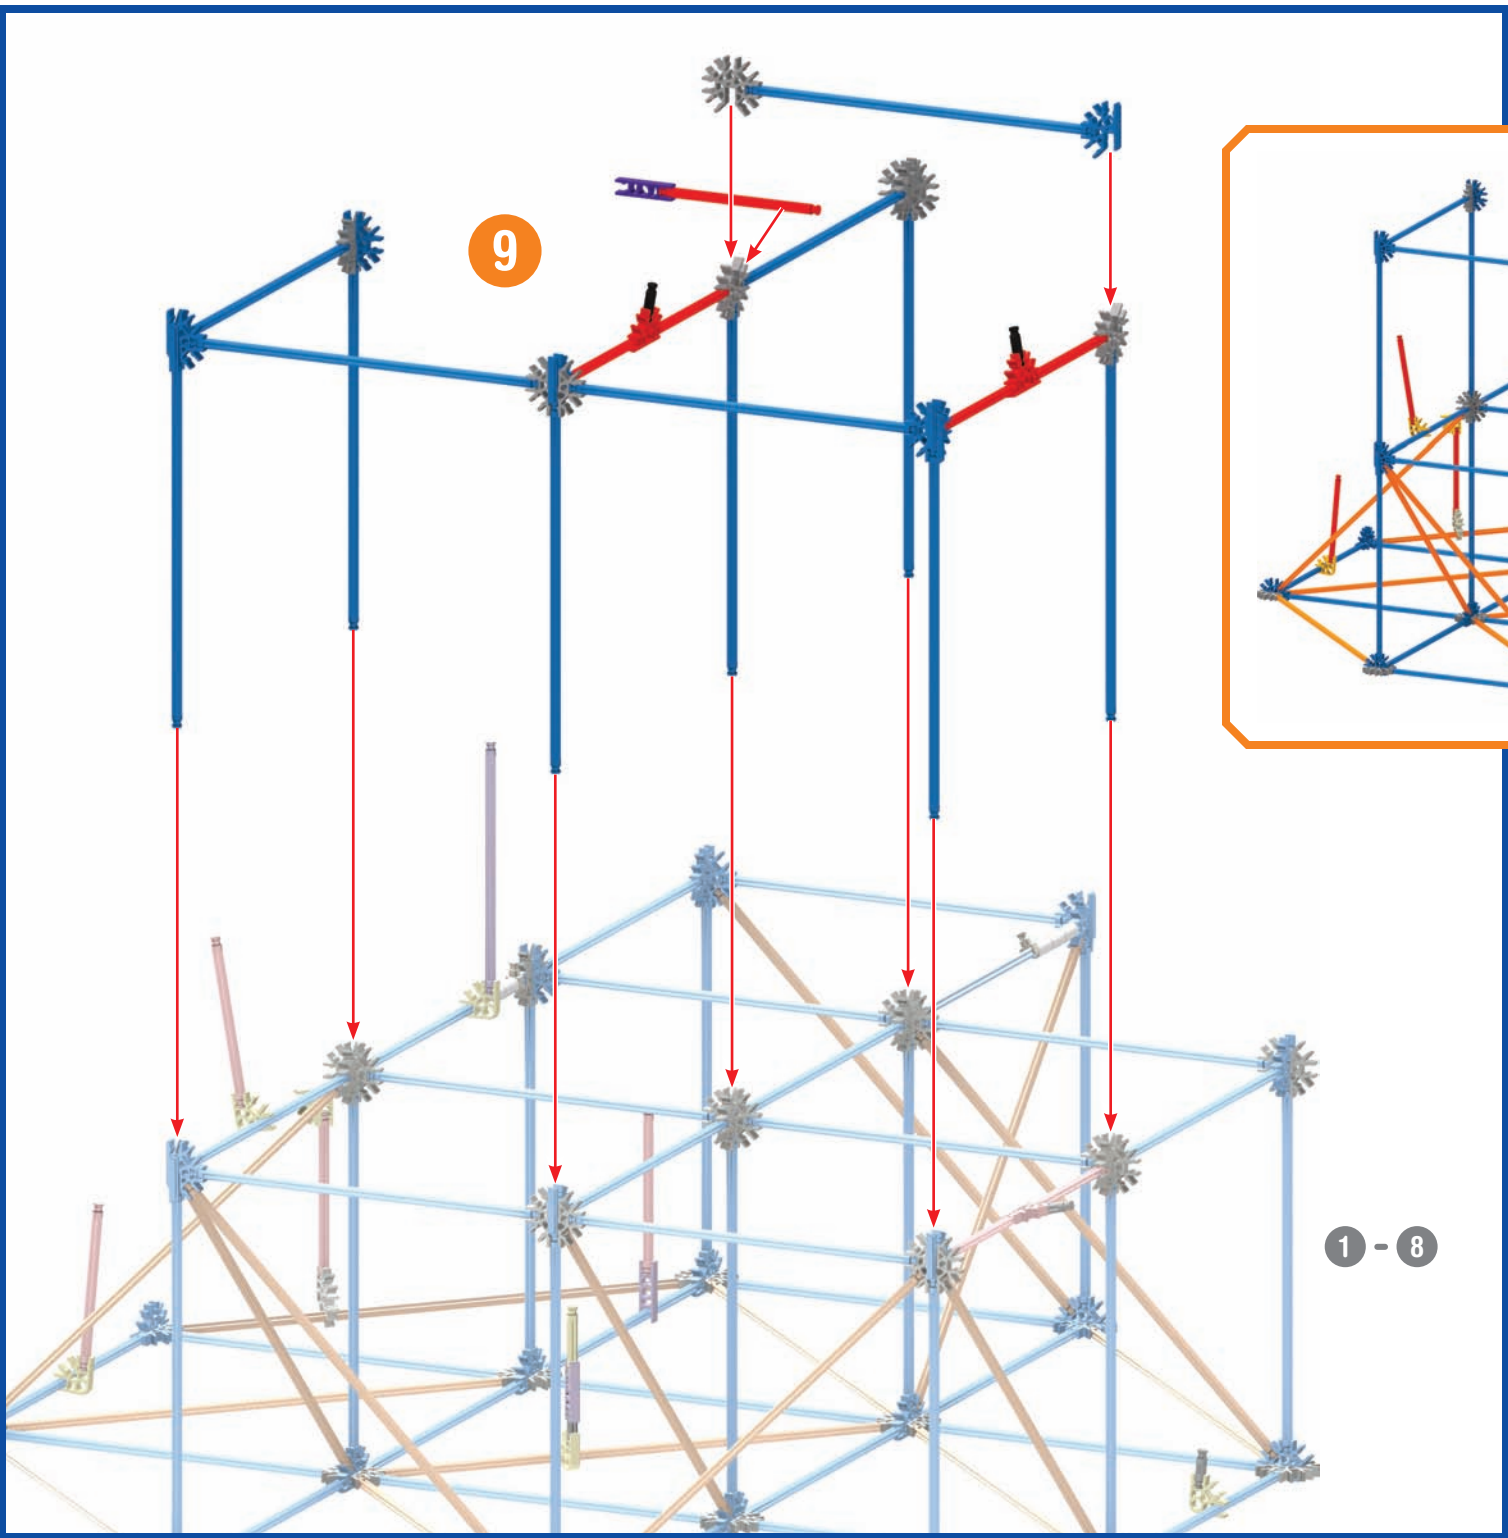




x4

10

1 - 9

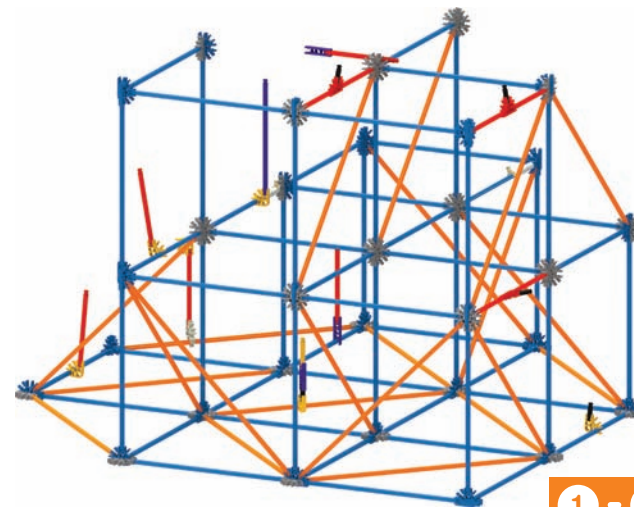

1 - 10






x5

11

1 - 10

1 - 11

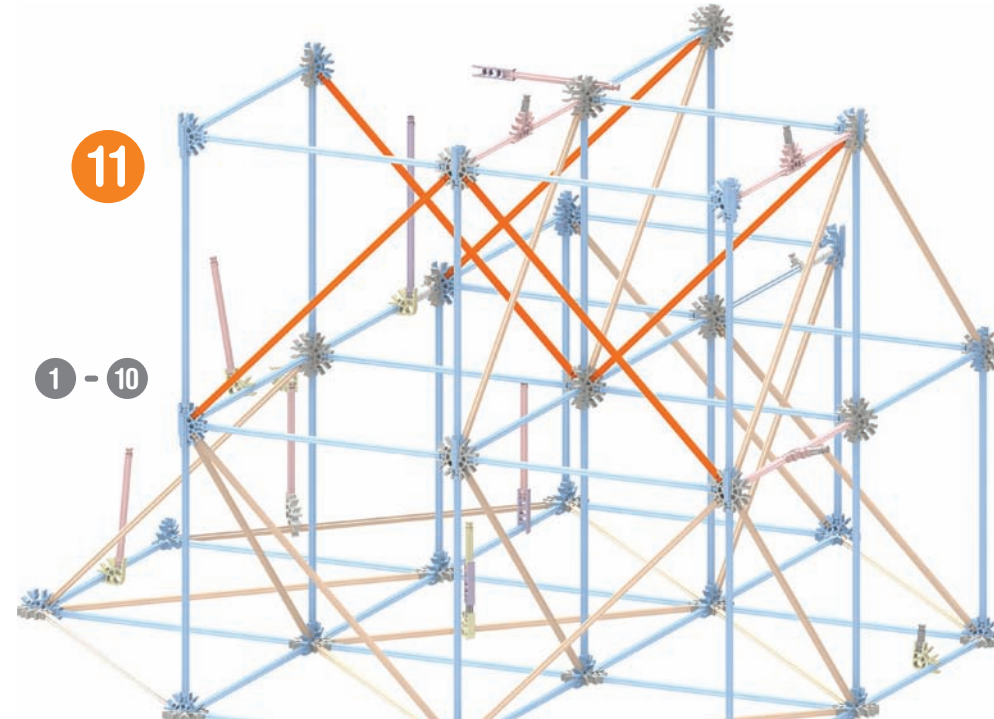

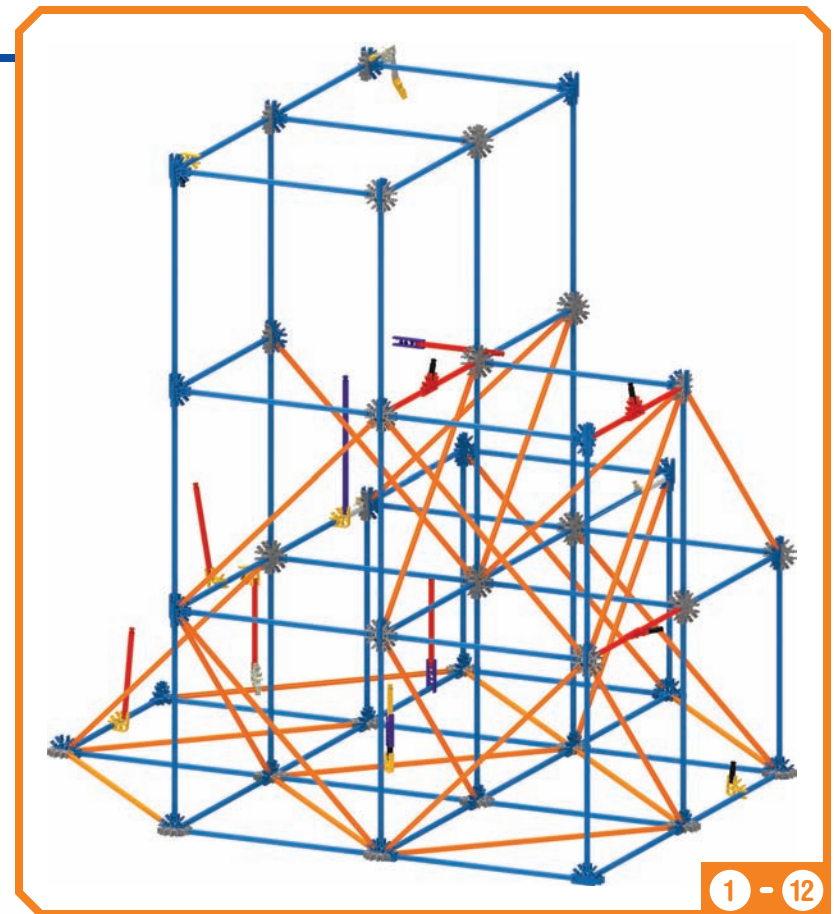
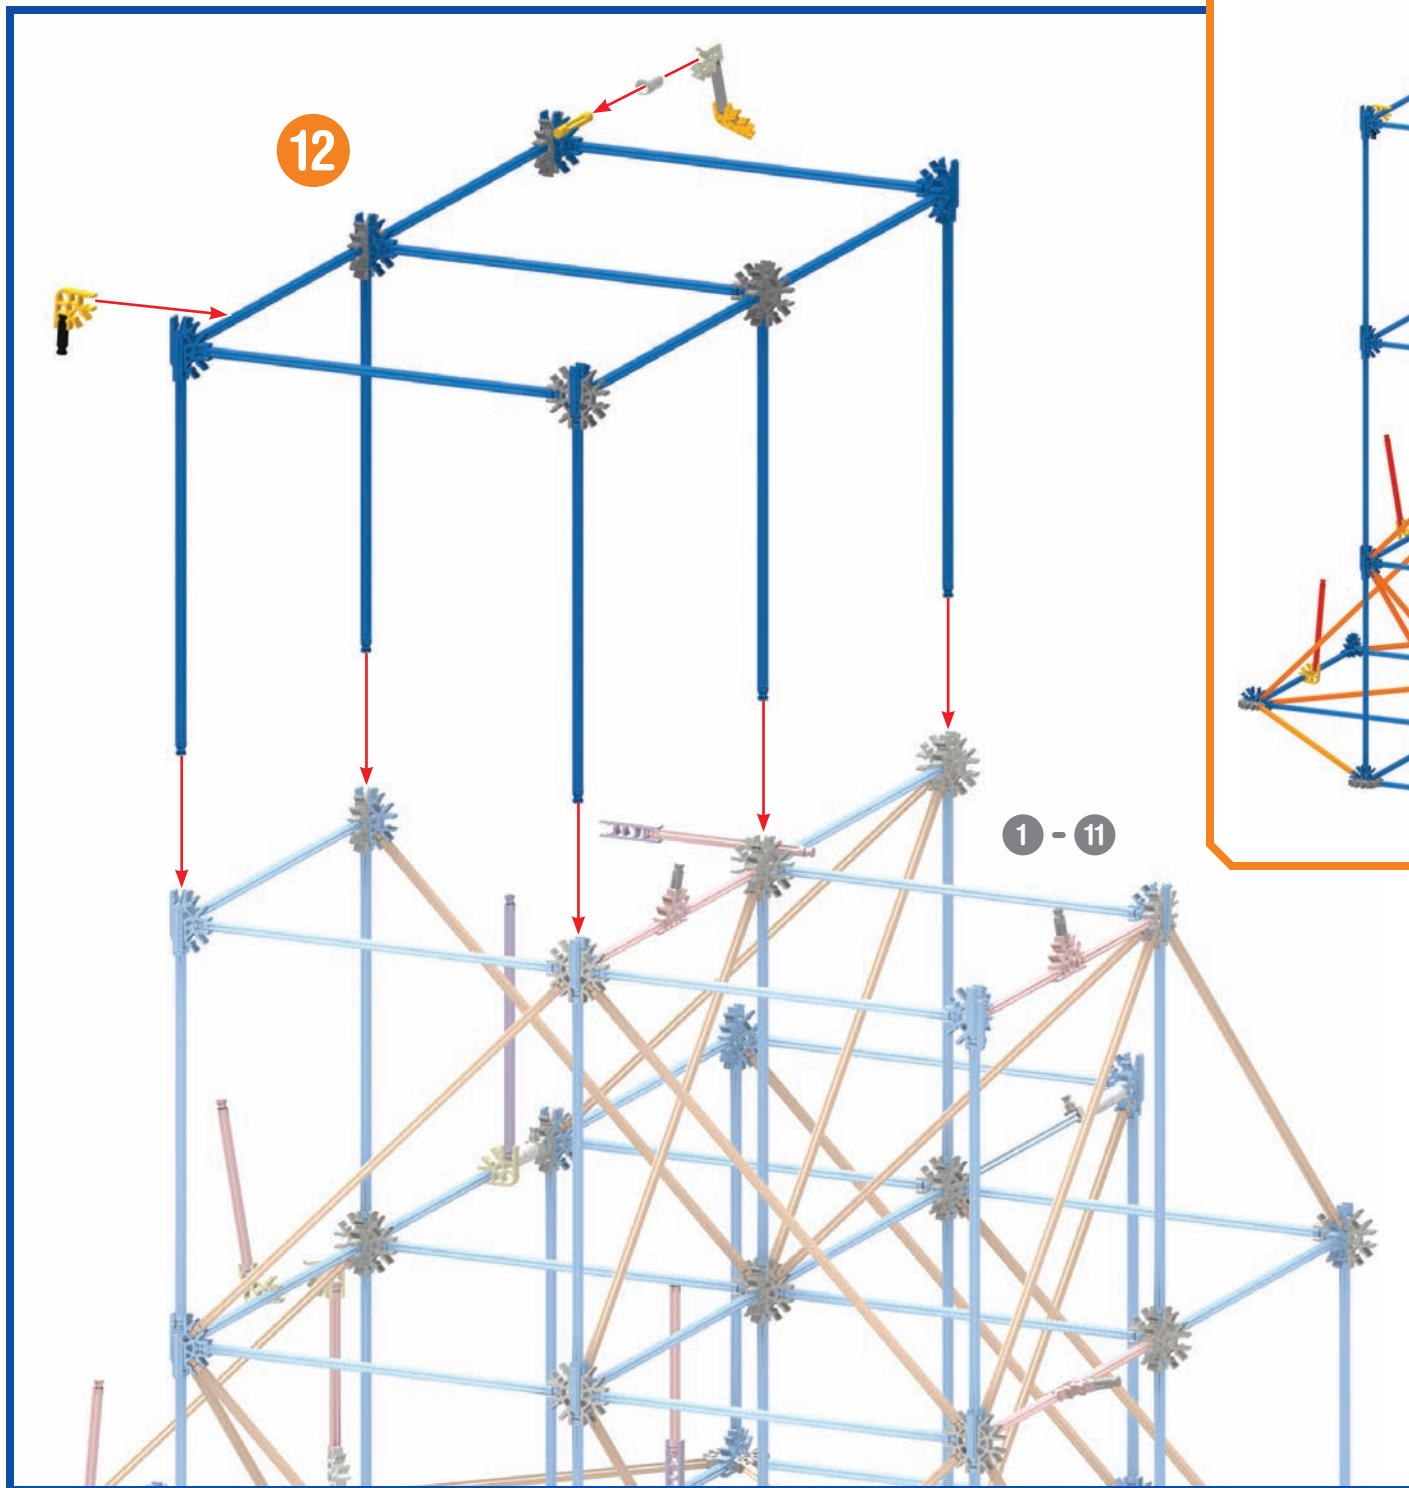




x2

1 - 12

13

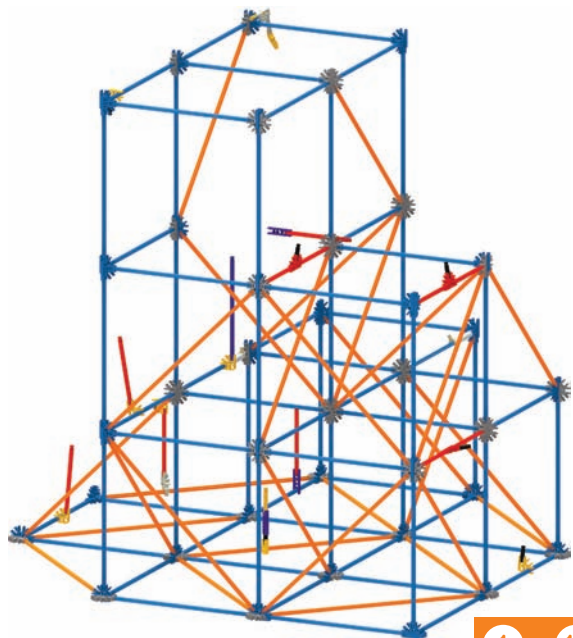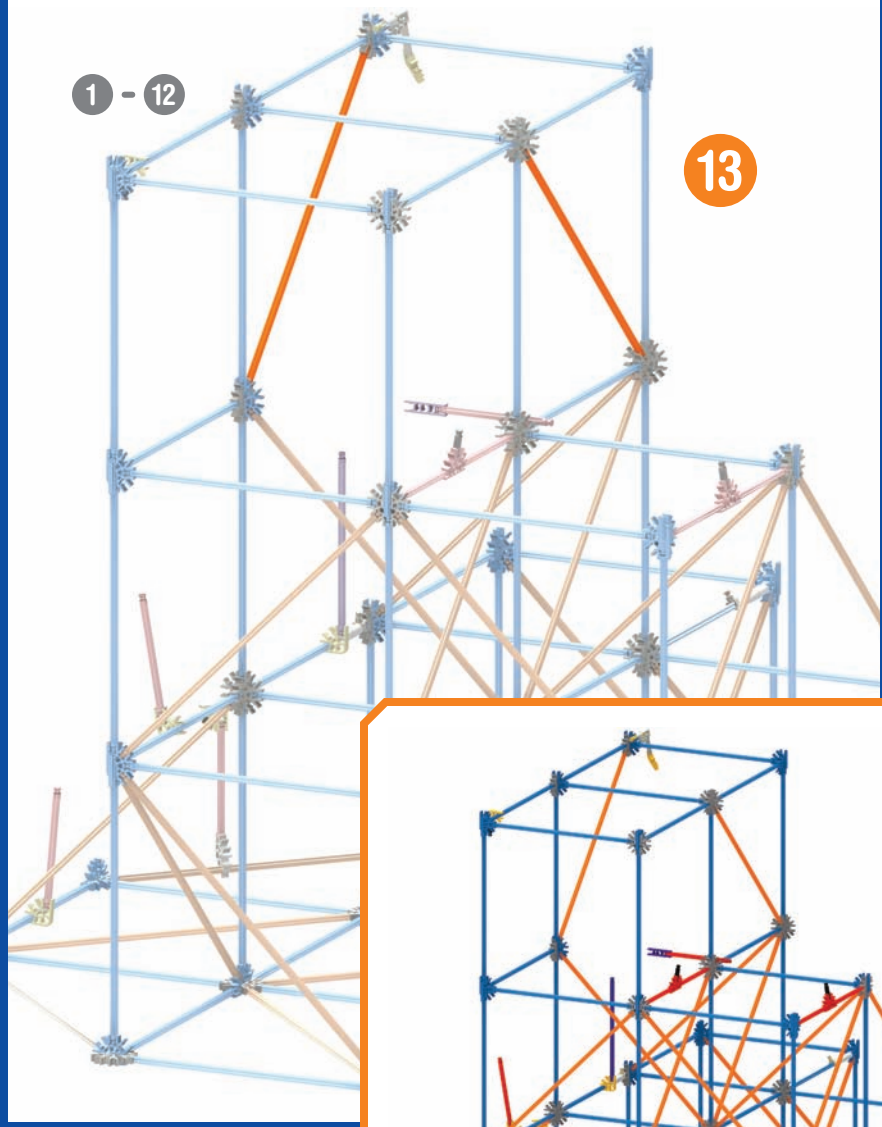



1 - 13




x5



1 - 13

14

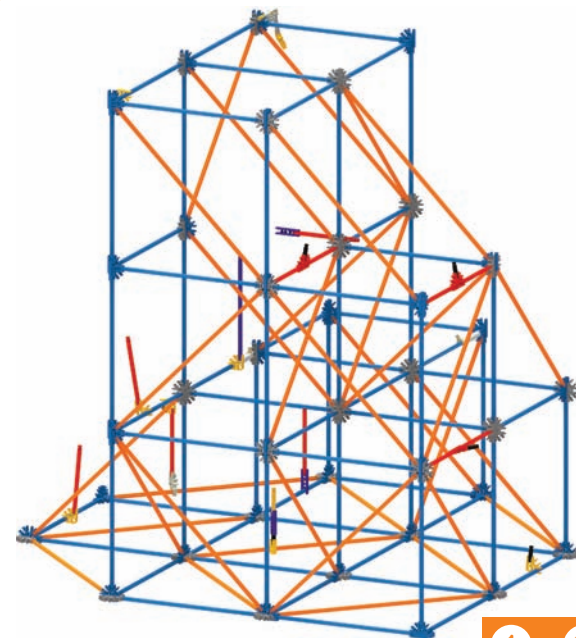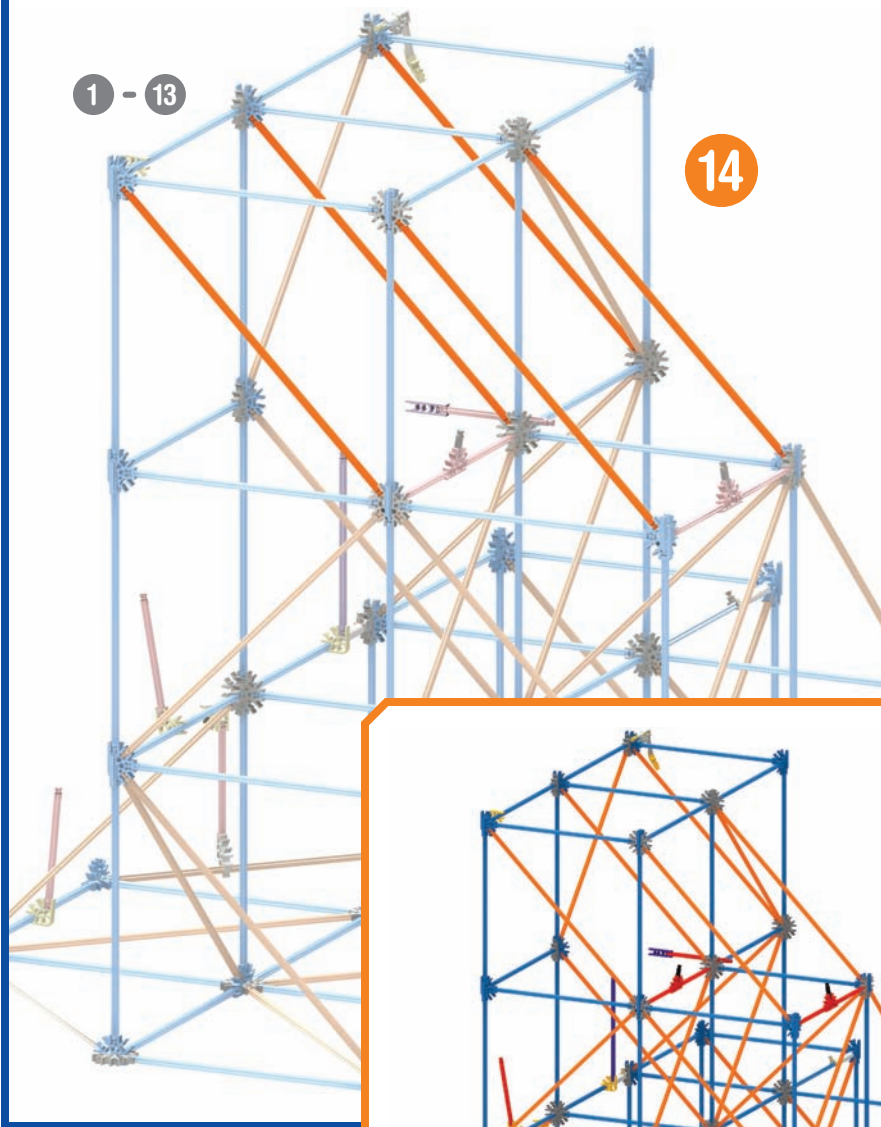

1 - 14

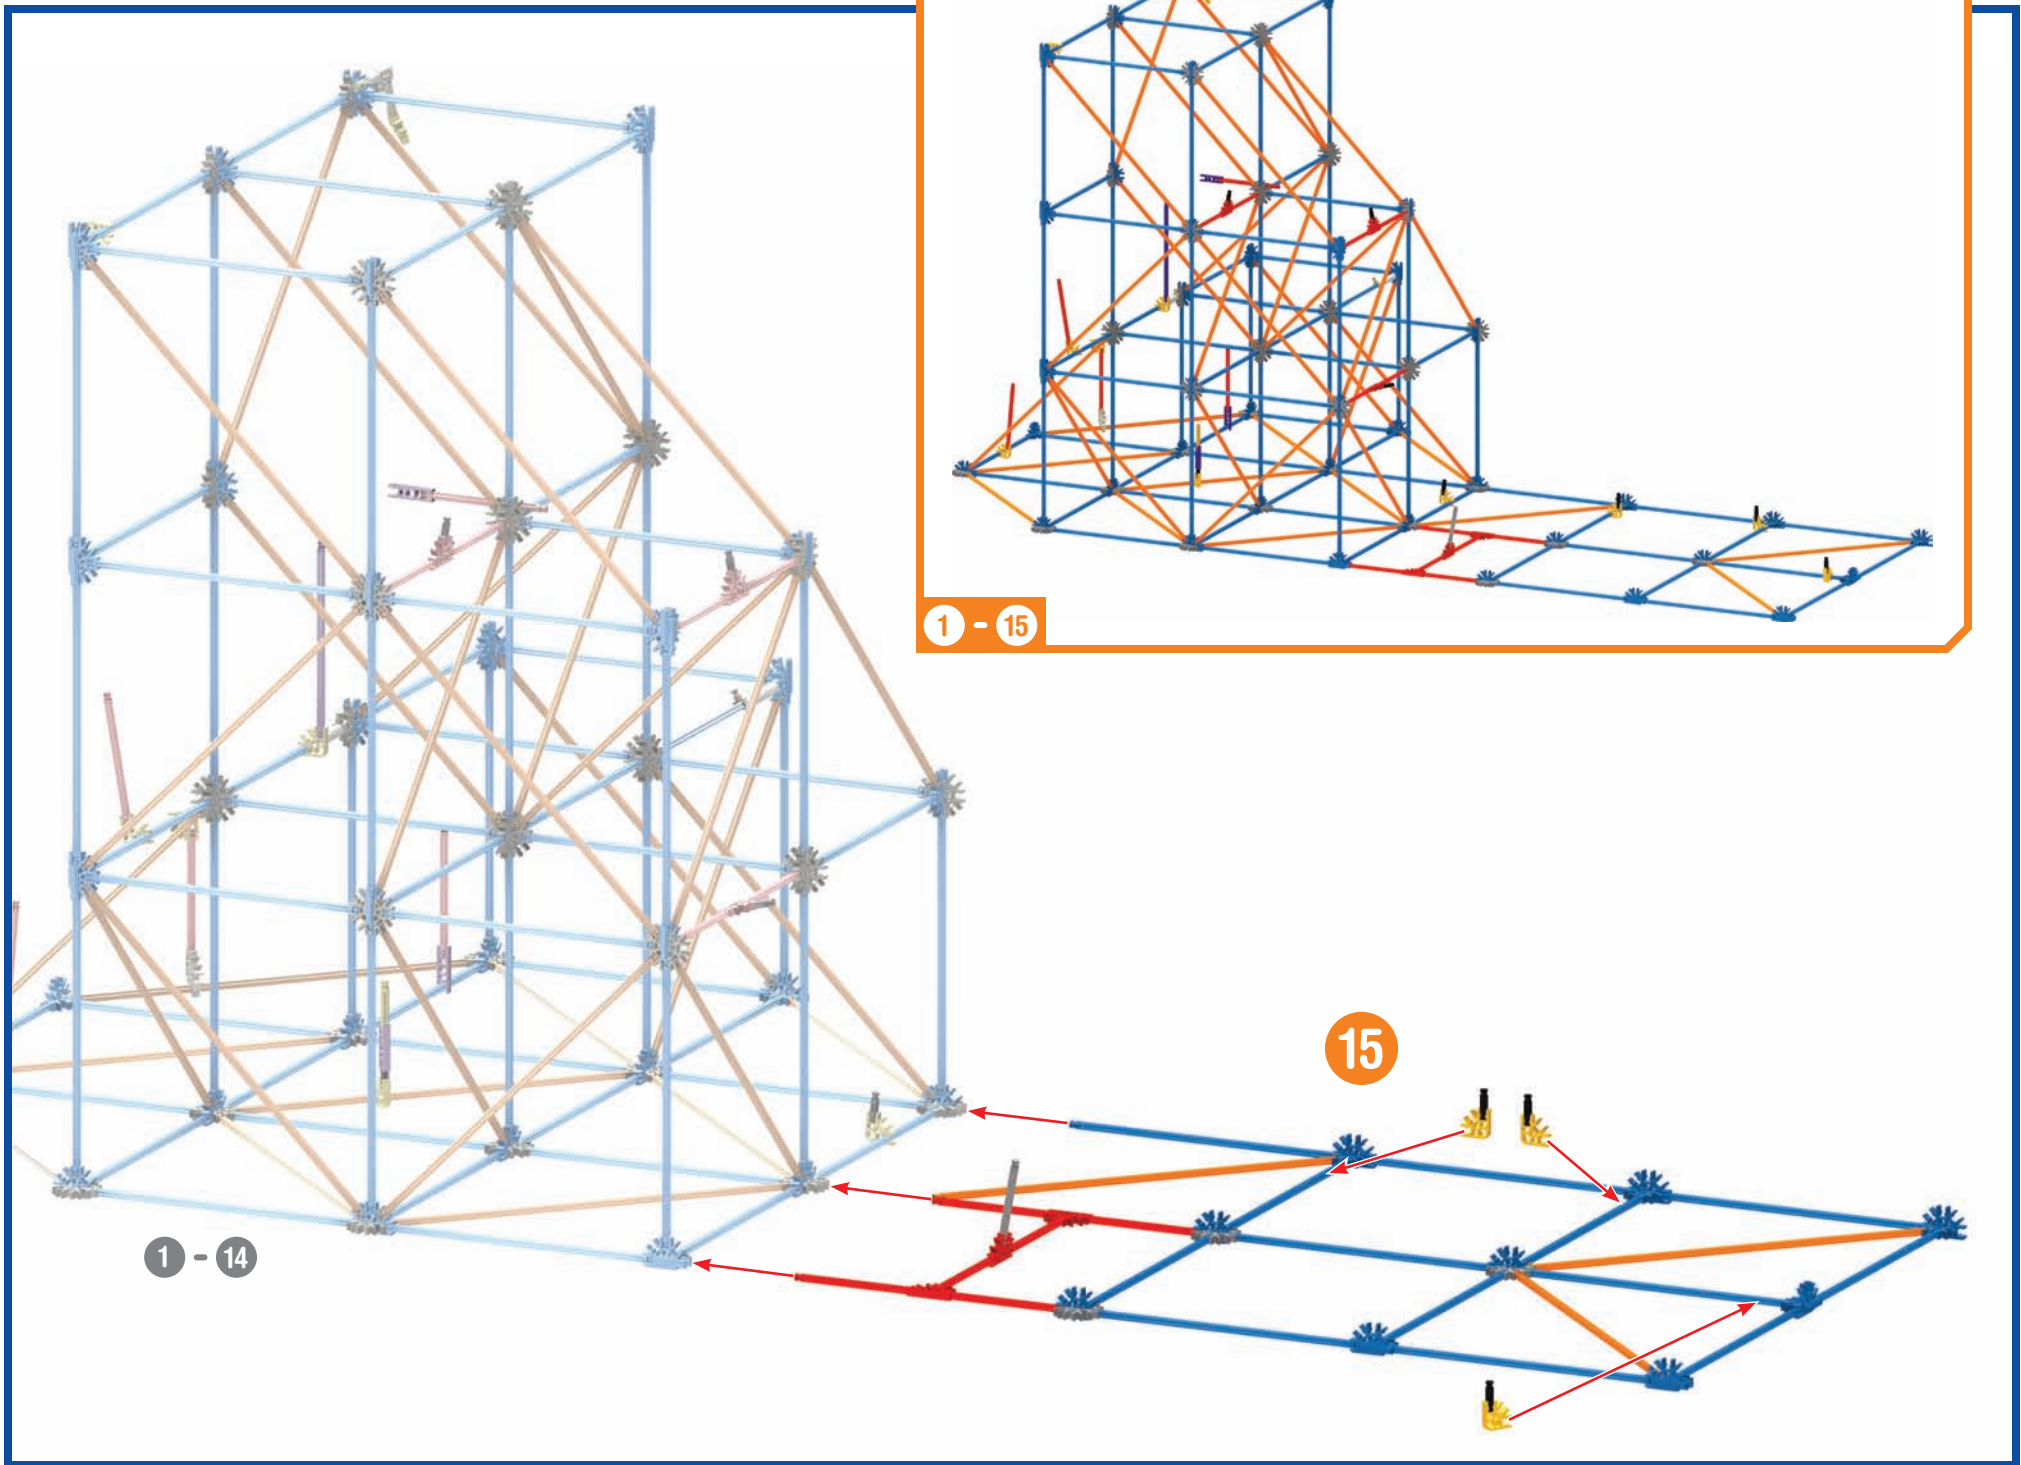

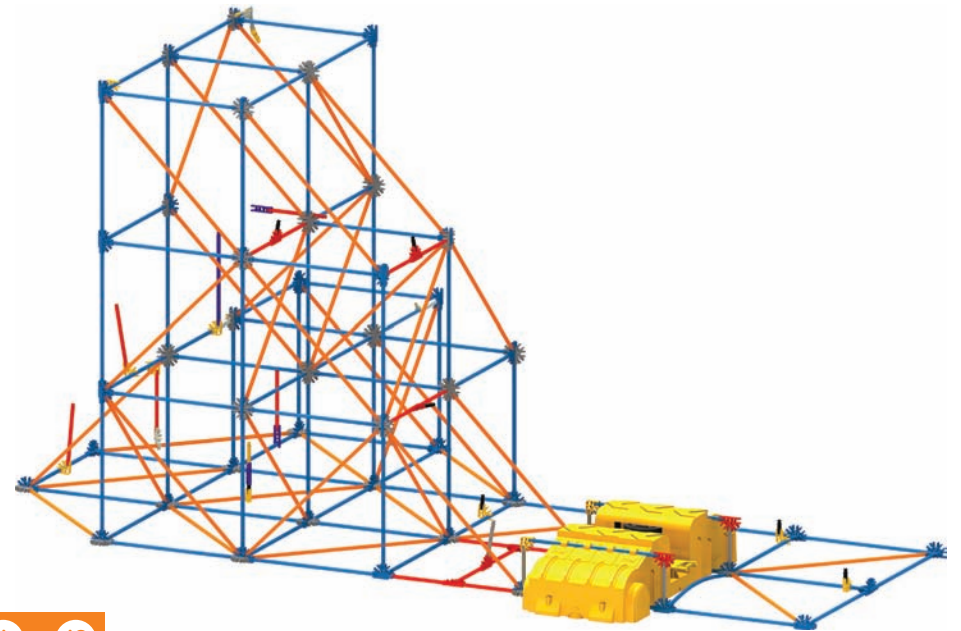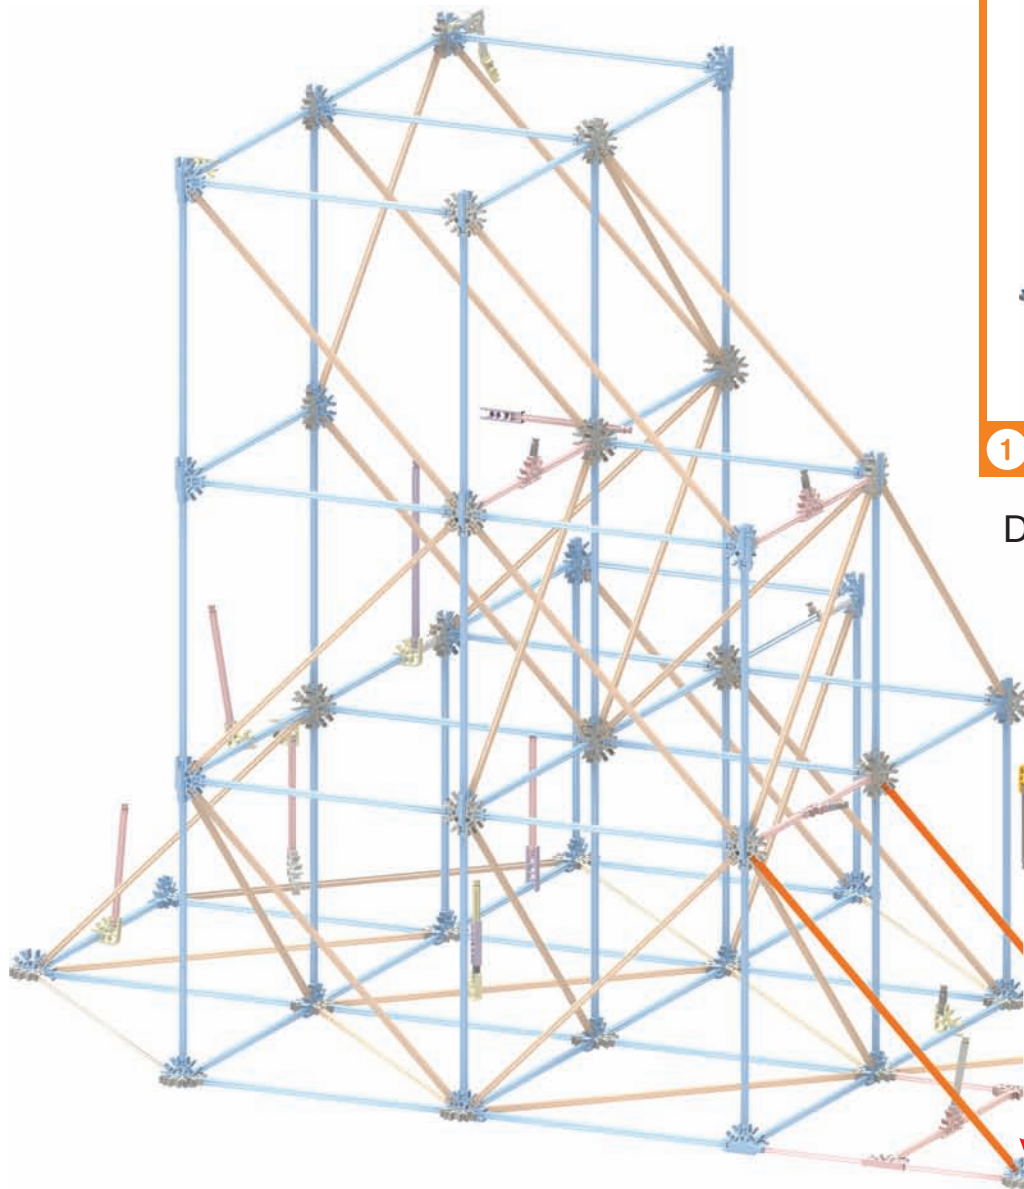


1 - 16

Did you install 3 C (or LR14) batteries in the motor?

16


1 - 15

x2

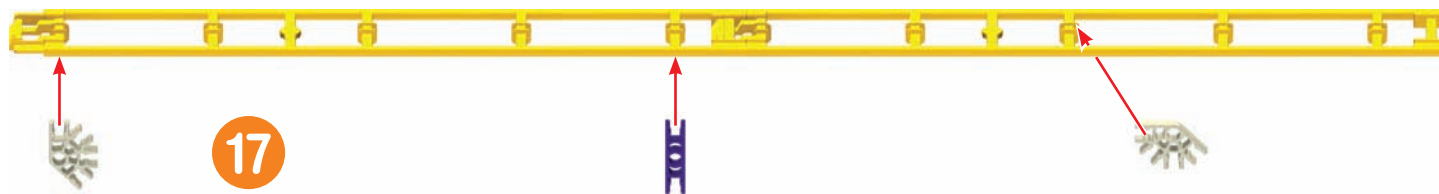


17

Be sure to push the connectors on firmly until they “click”.




Always connect the track top side to top side throughout the build.



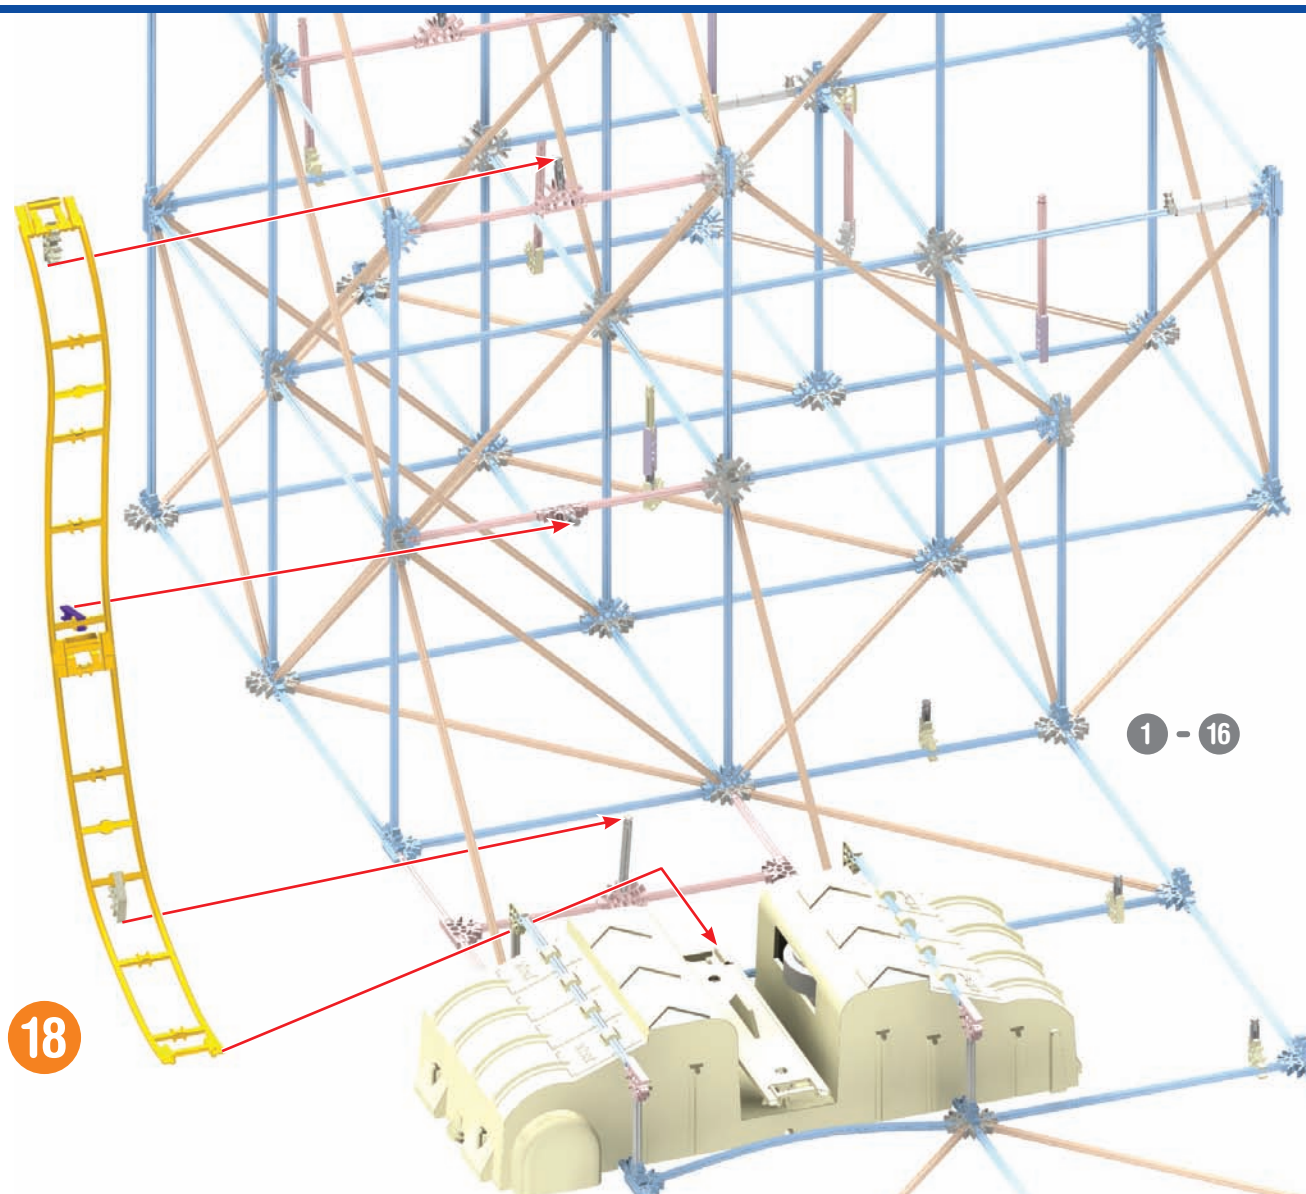





18




1 - 16



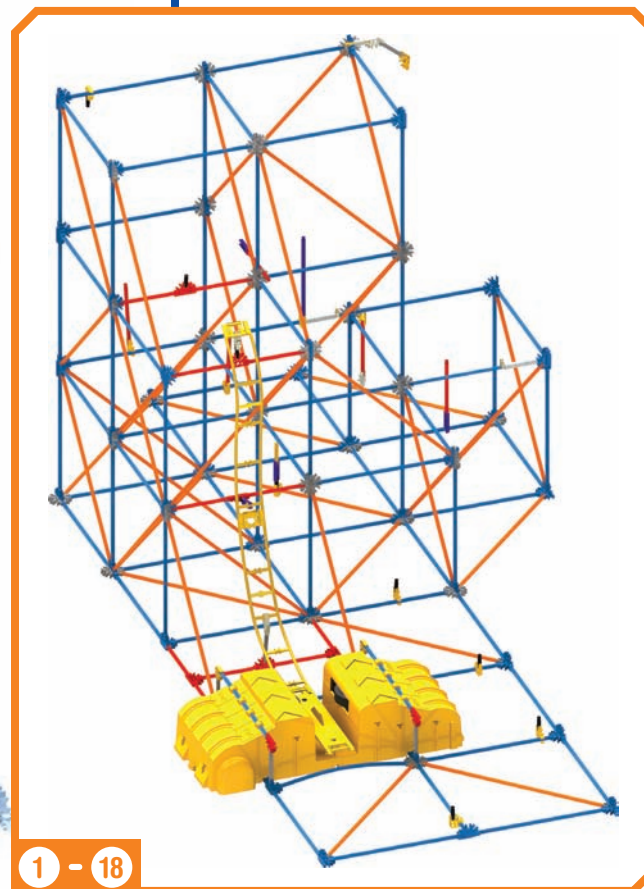


1 - 18

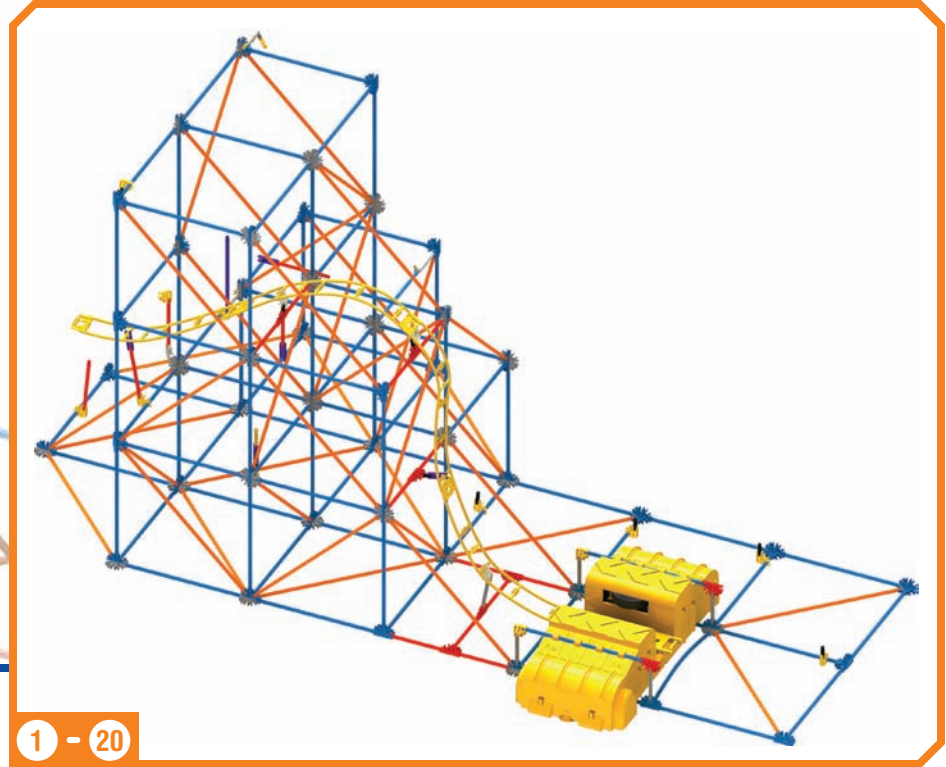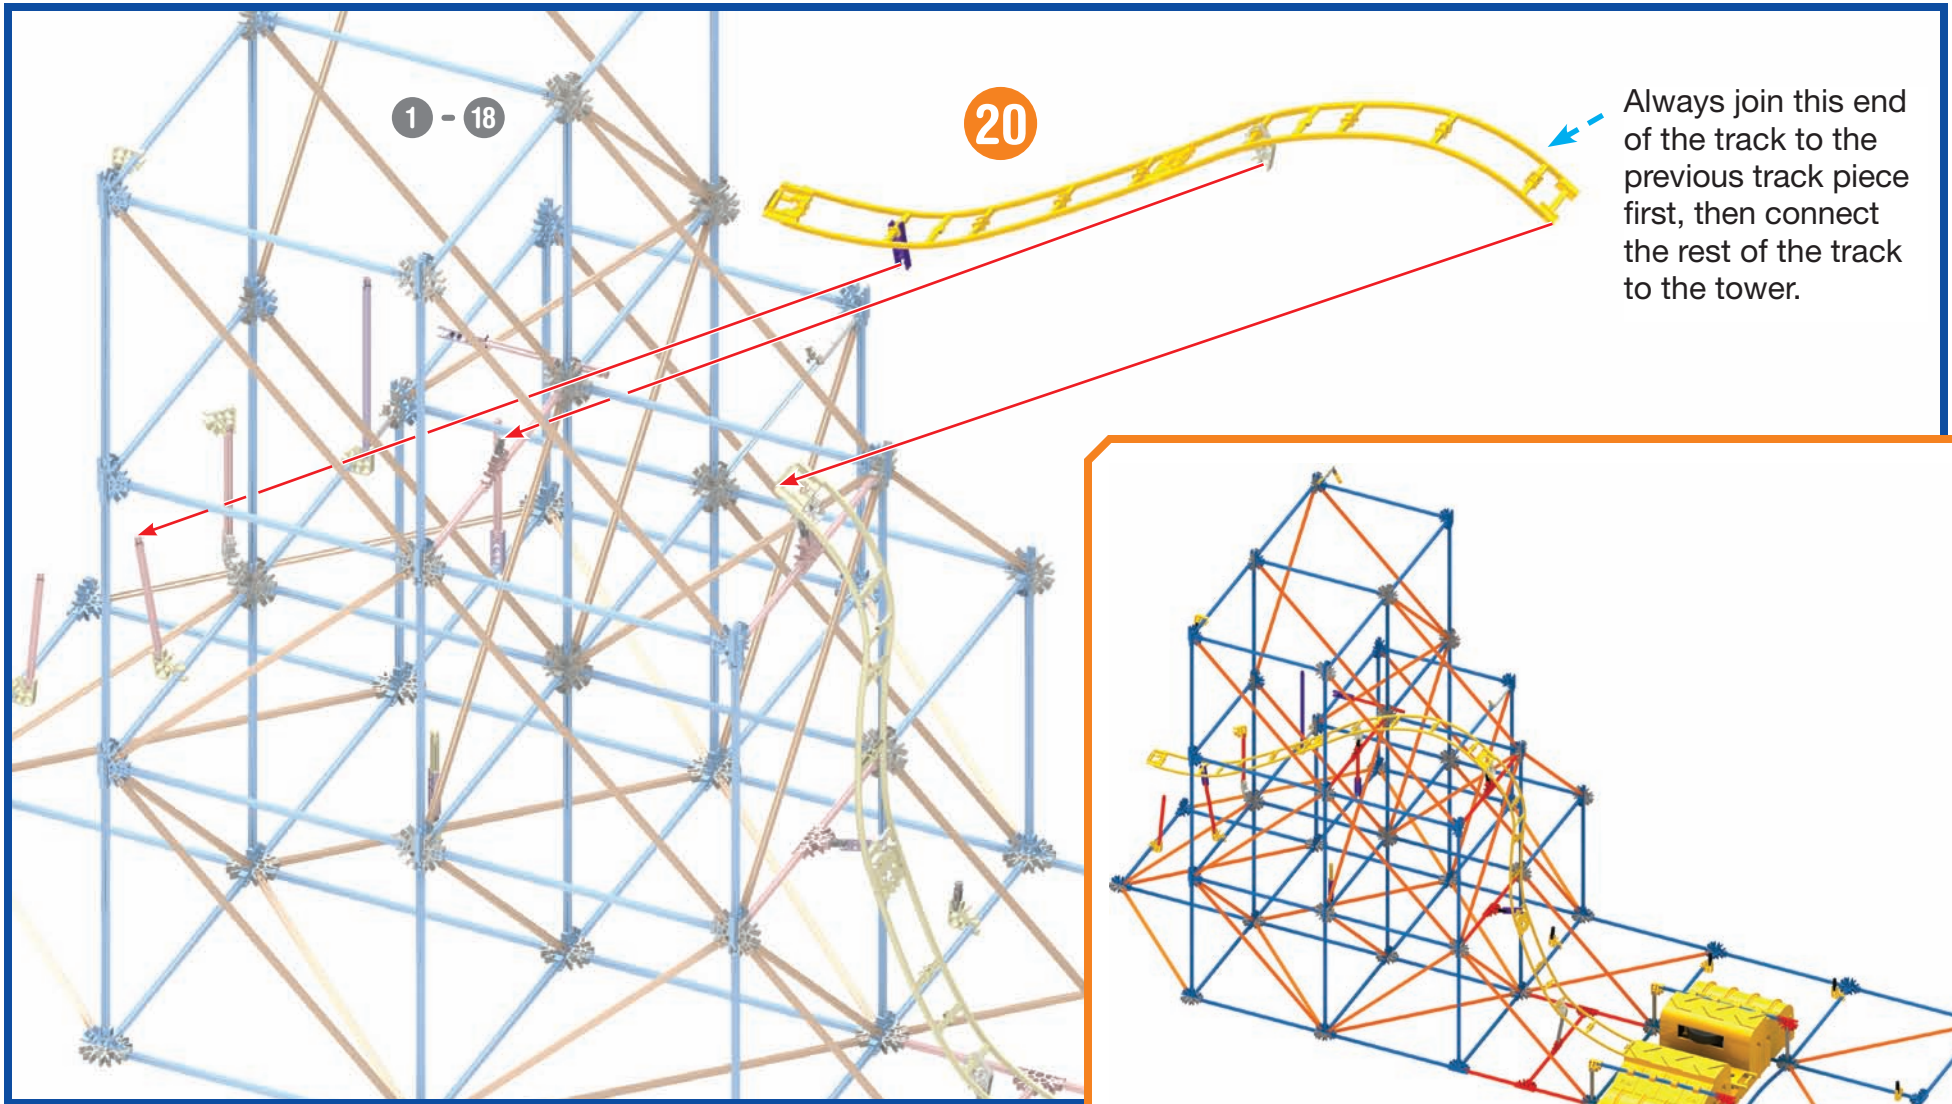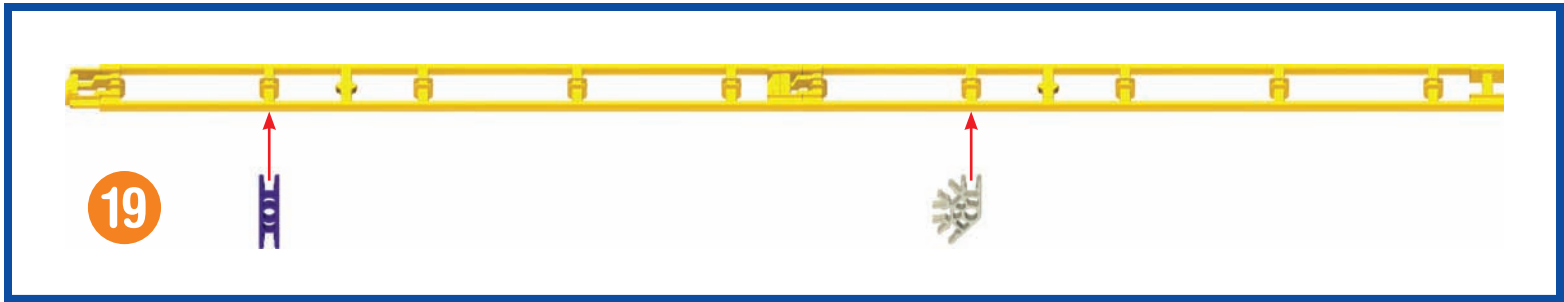

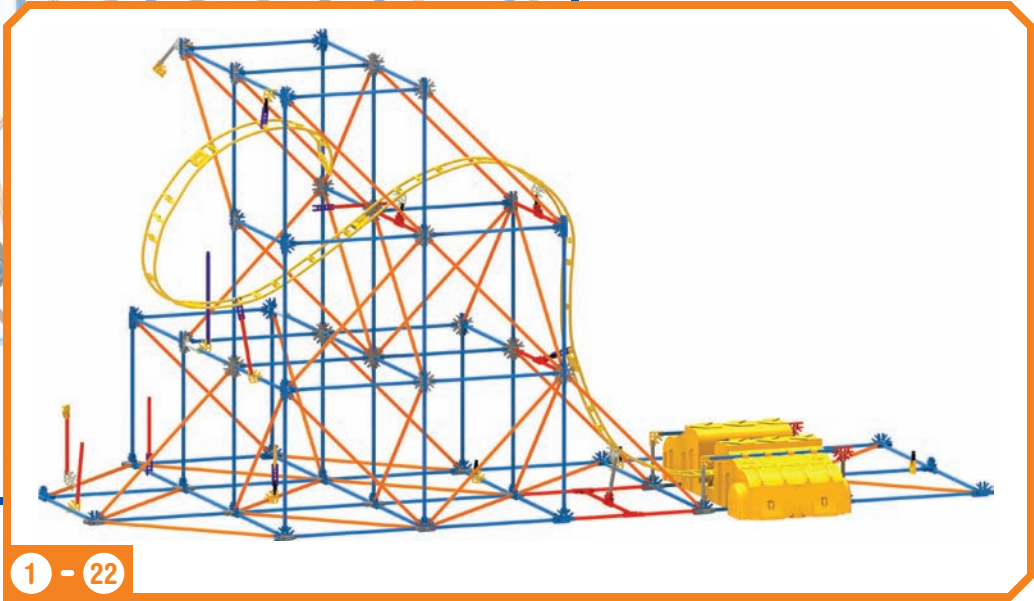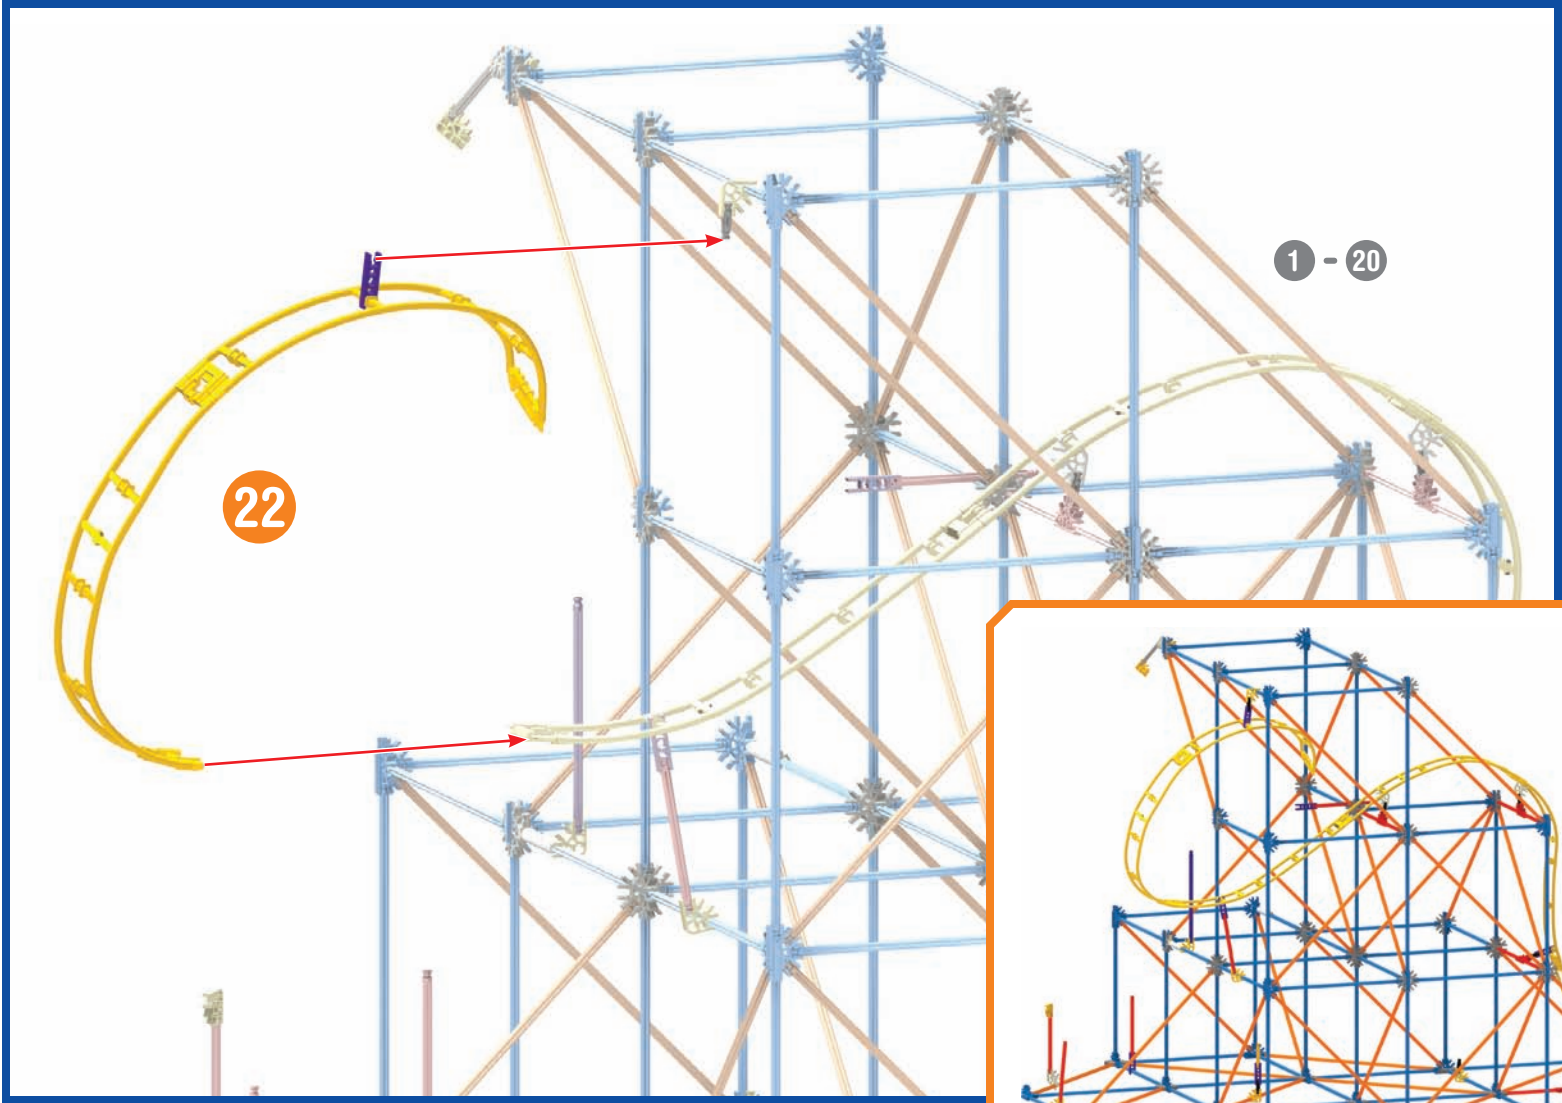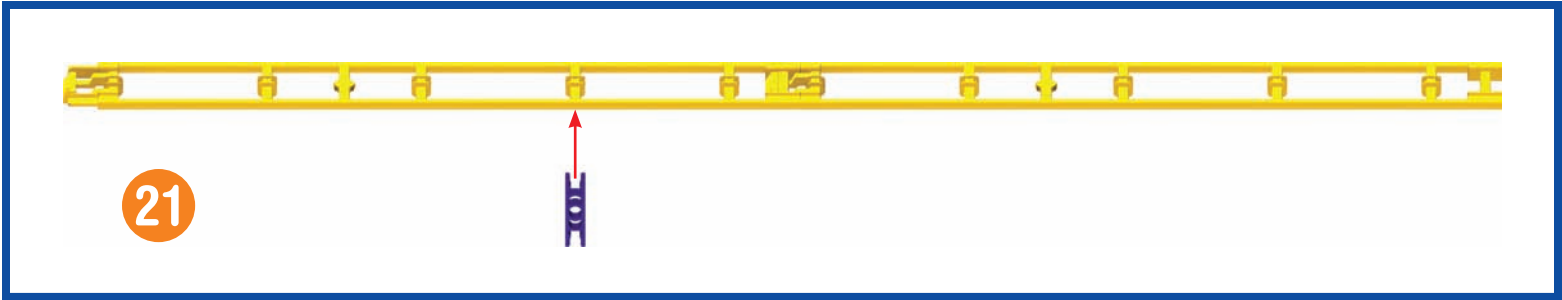


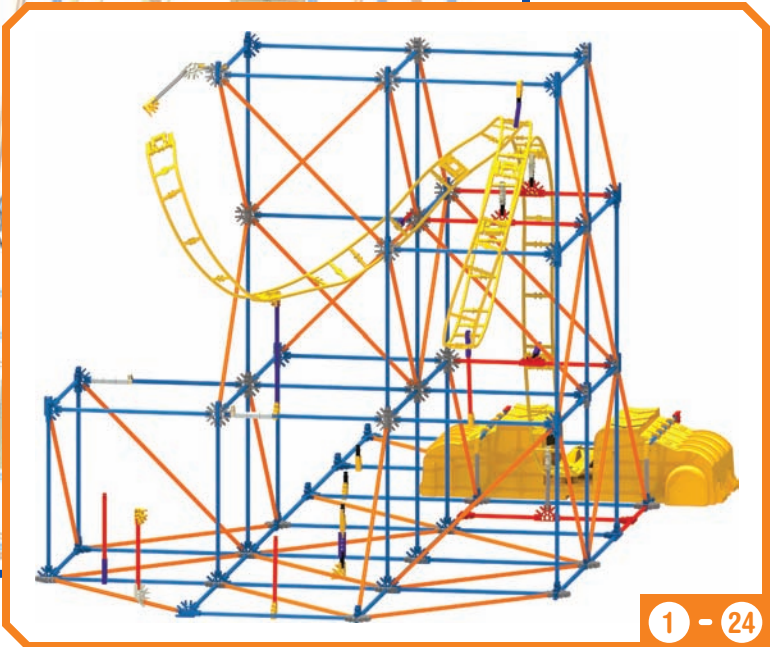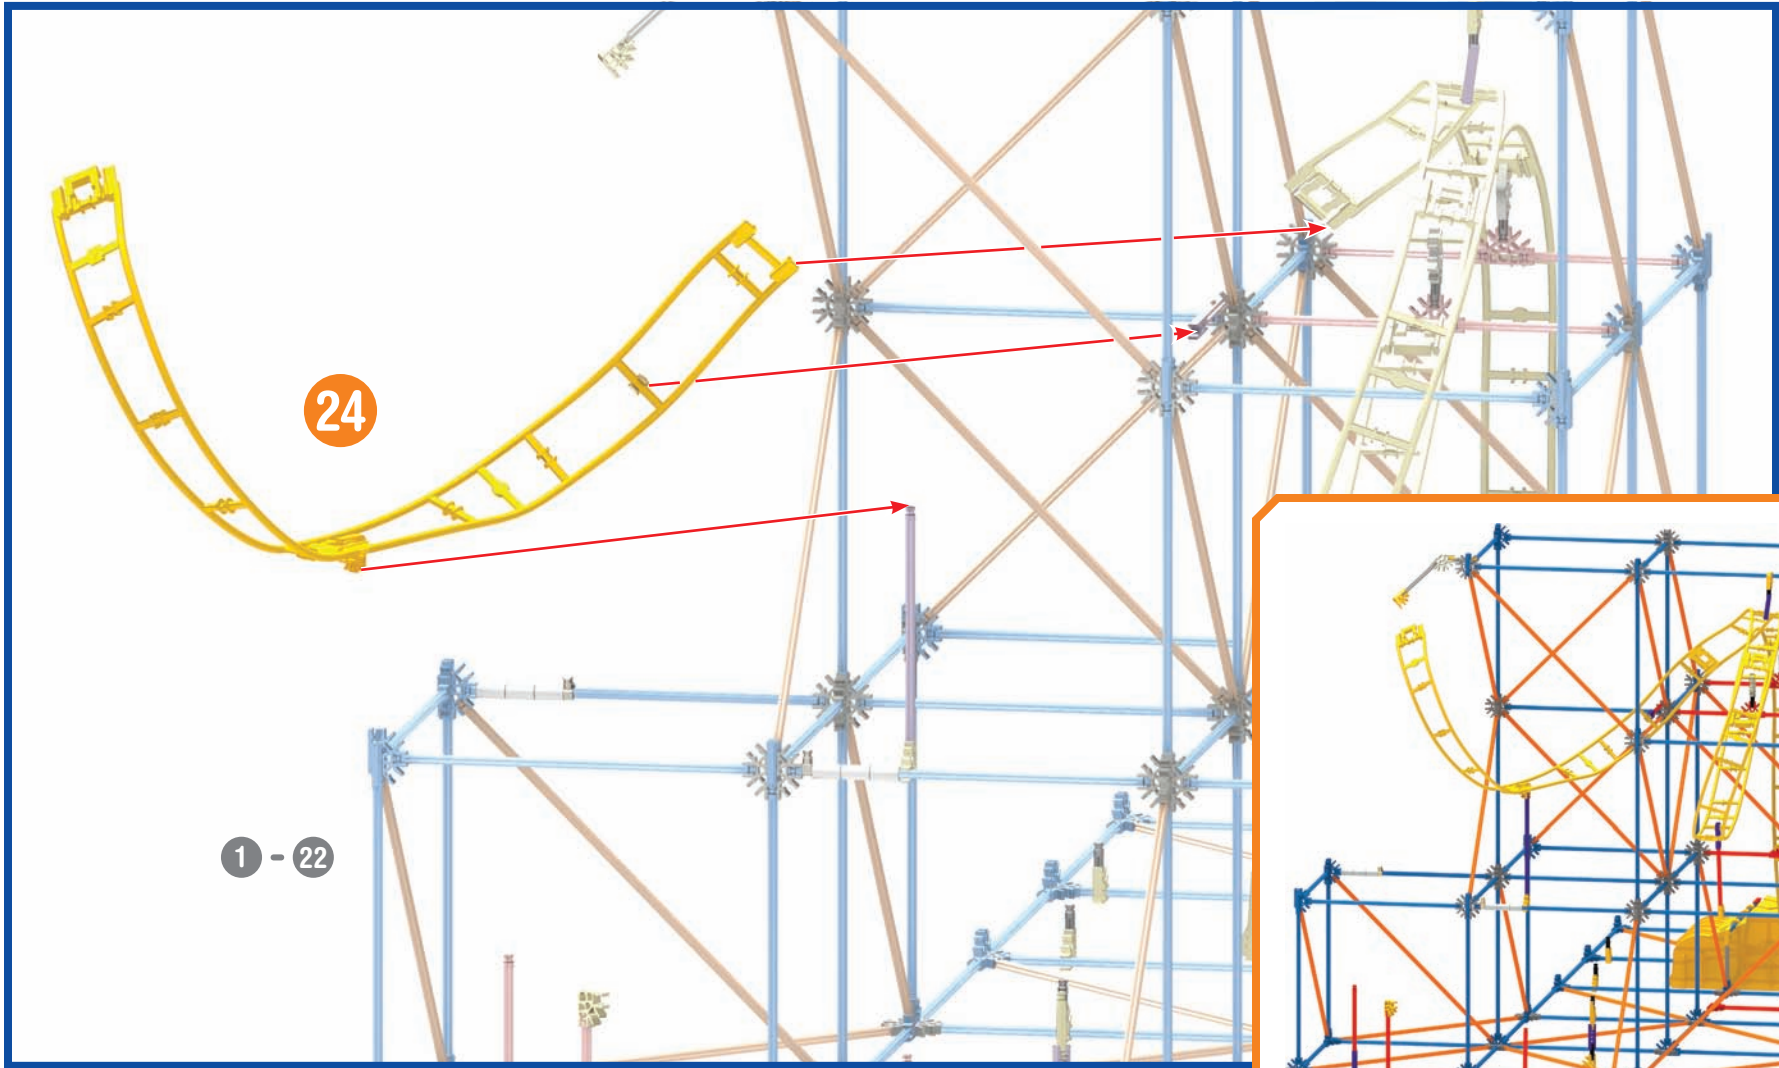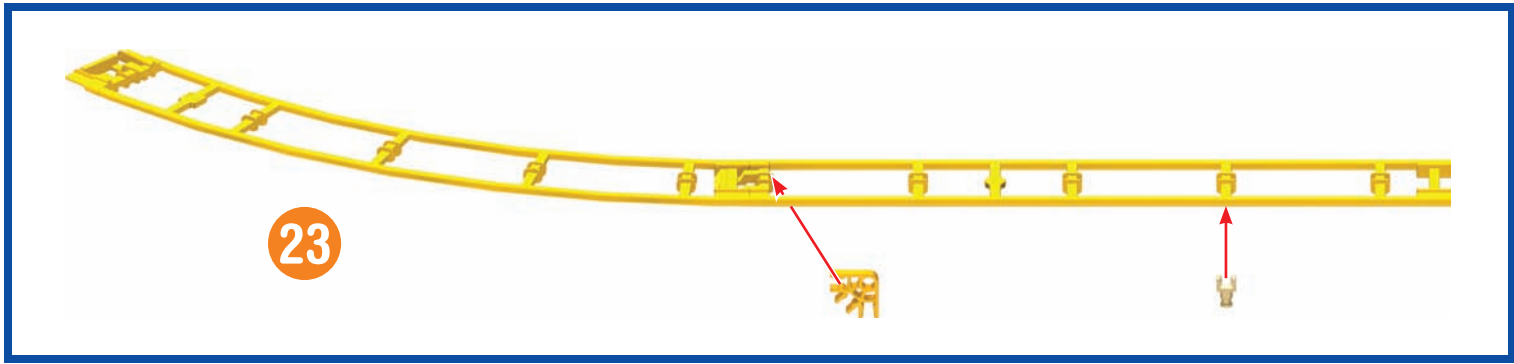

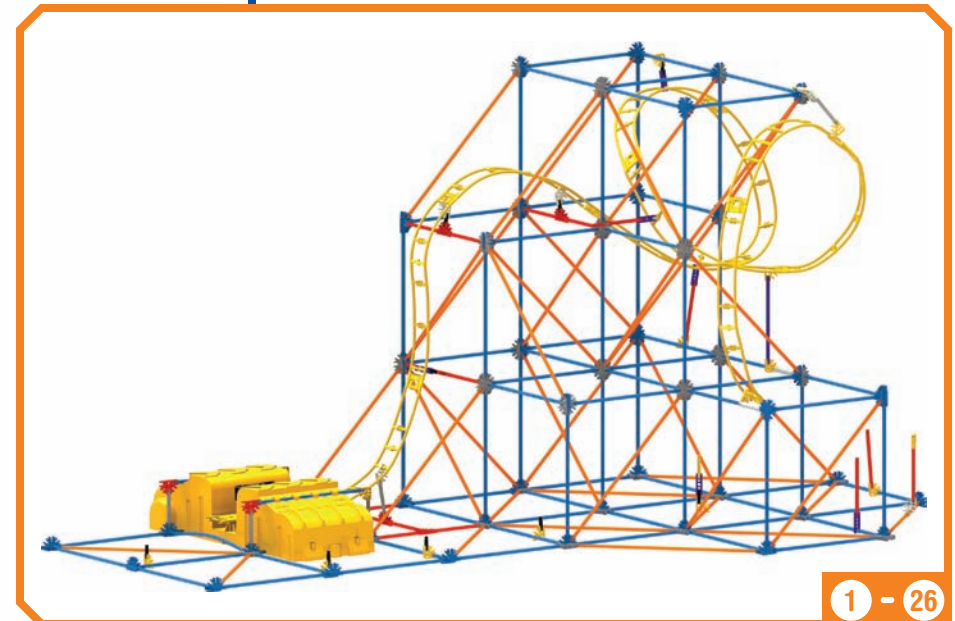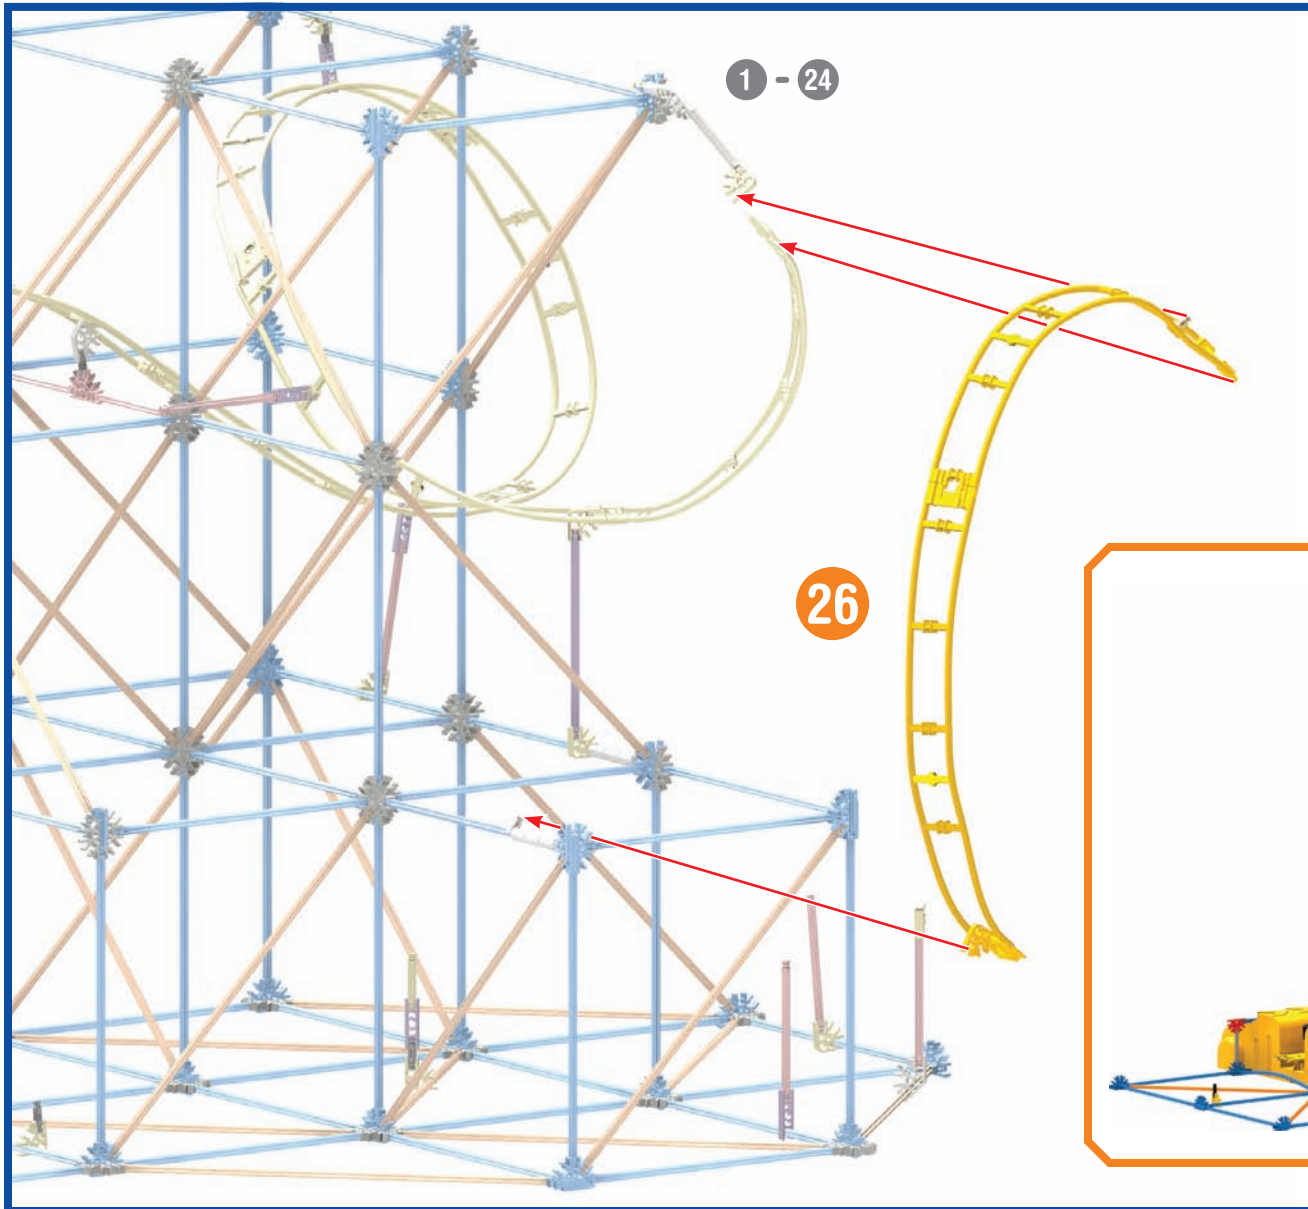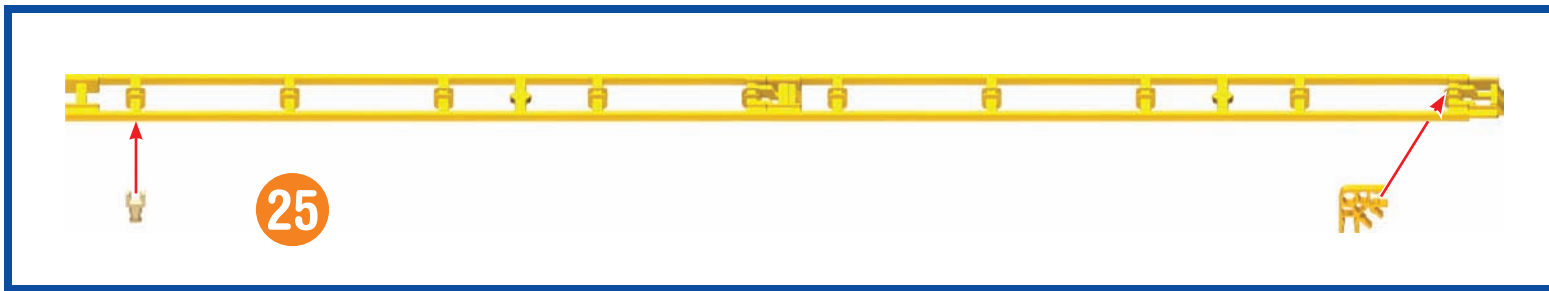




27

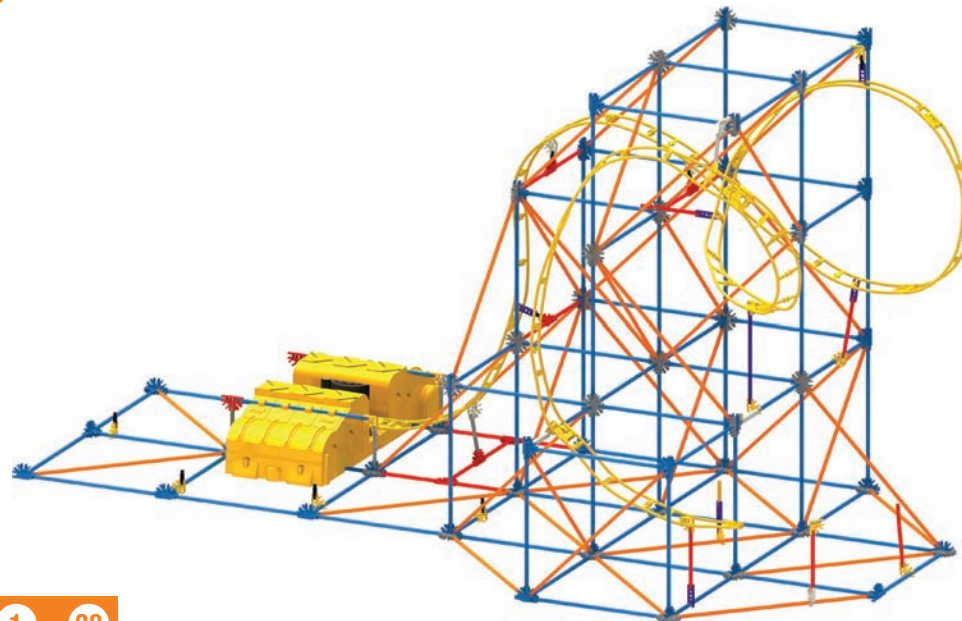




1 - 28



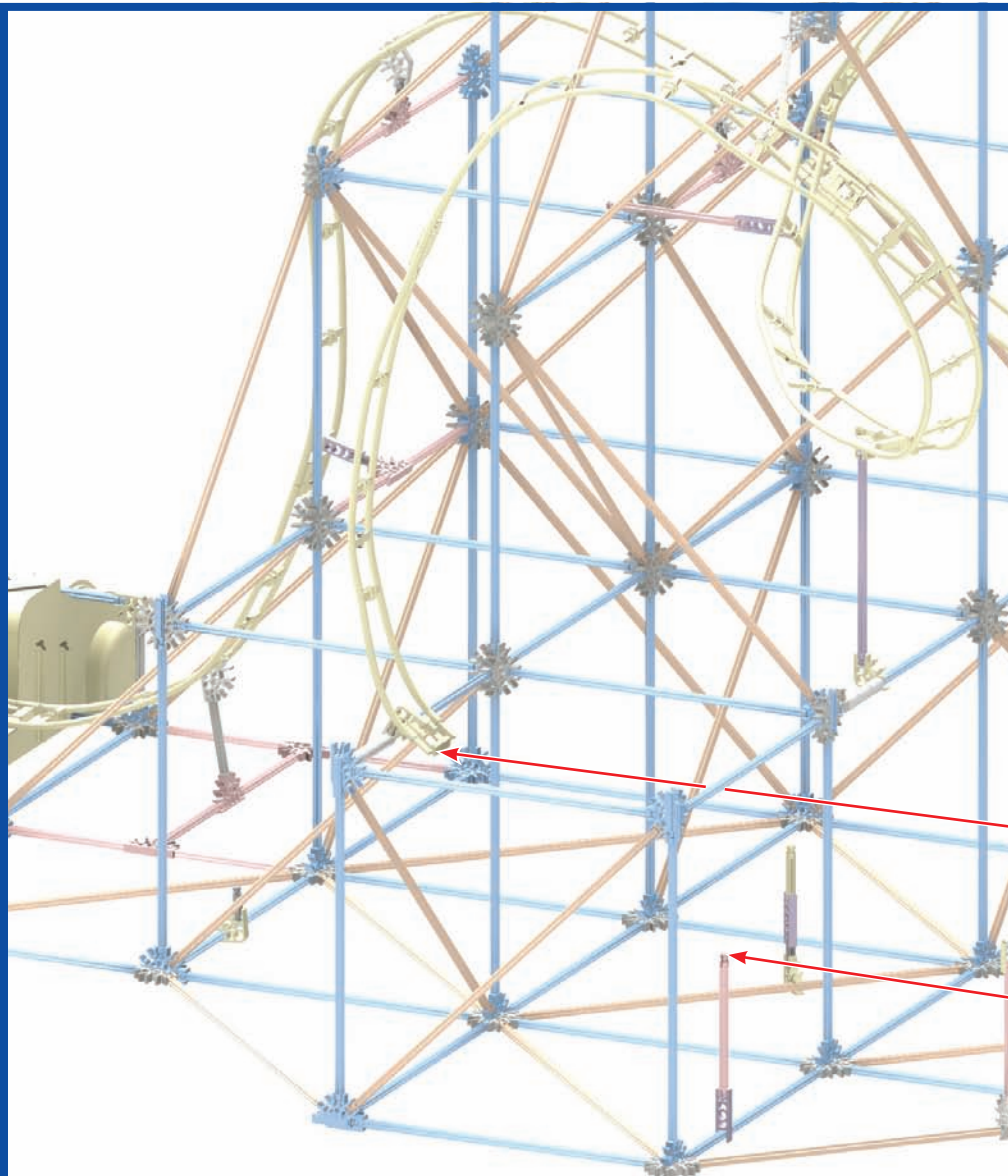





1 - 26






28

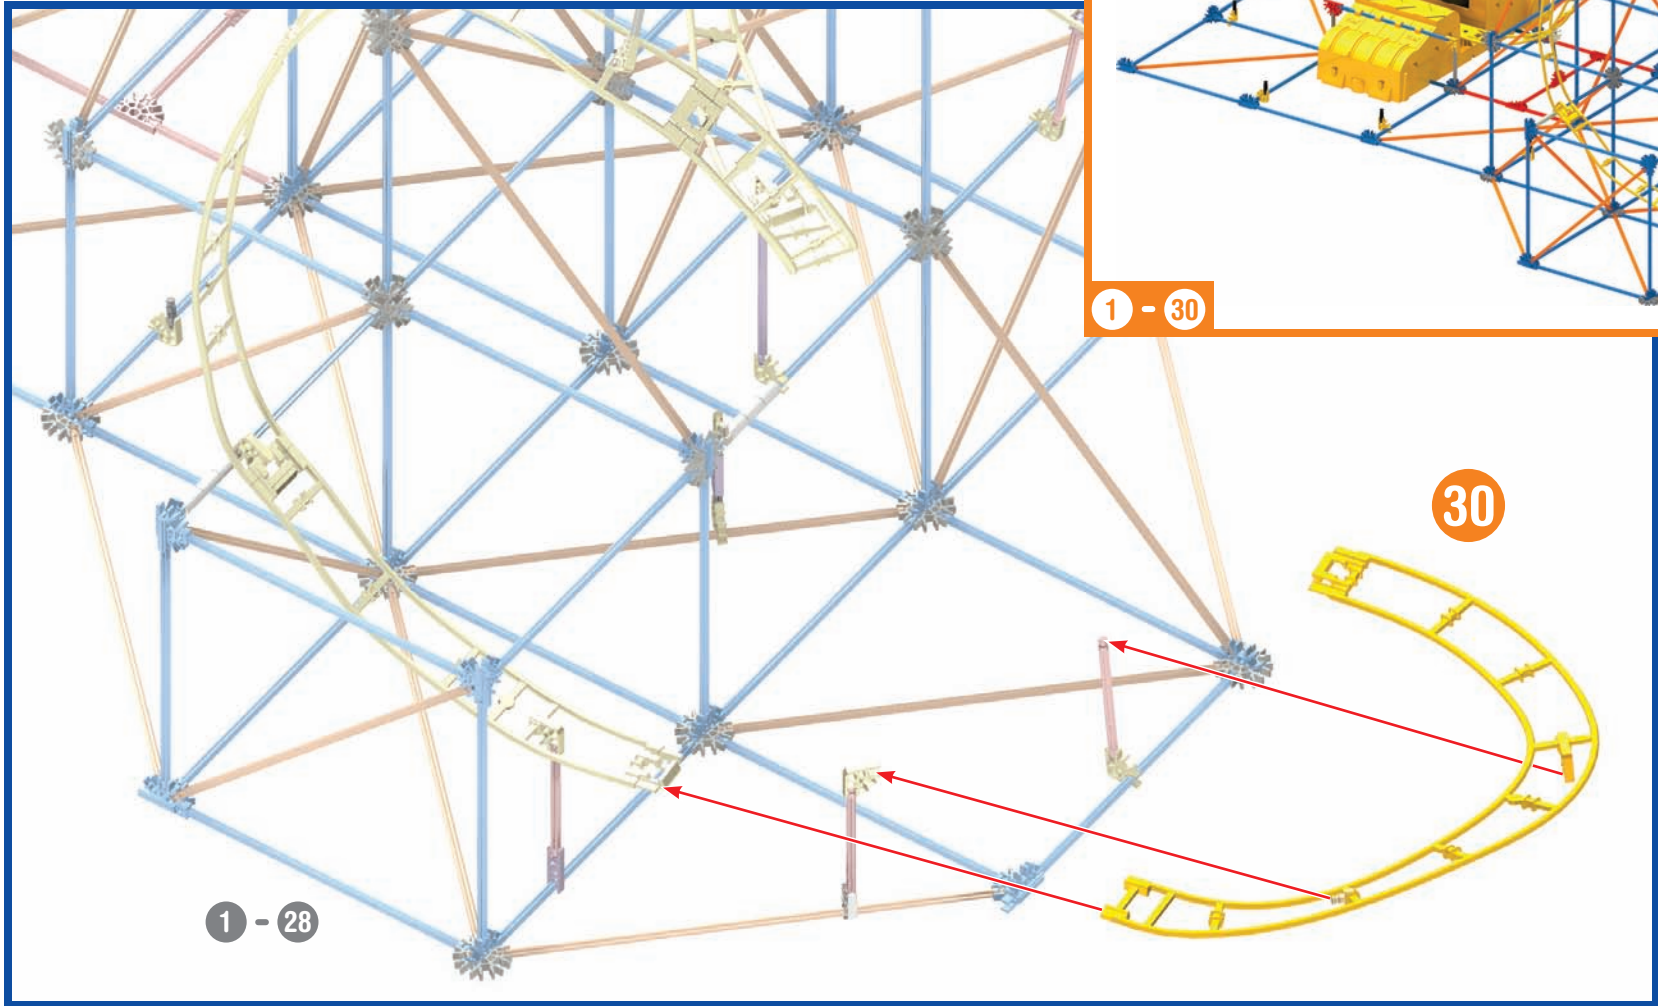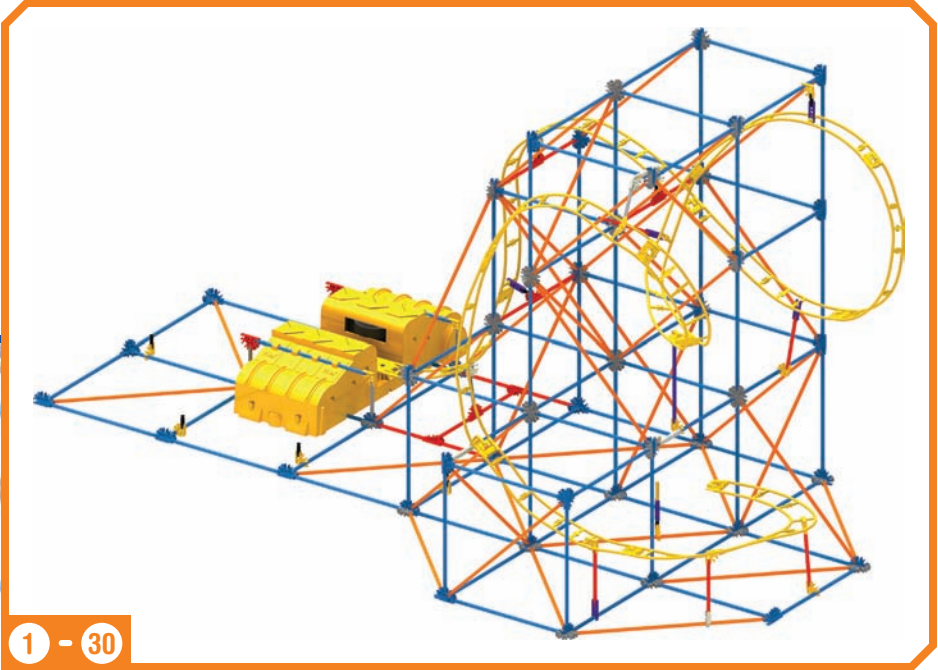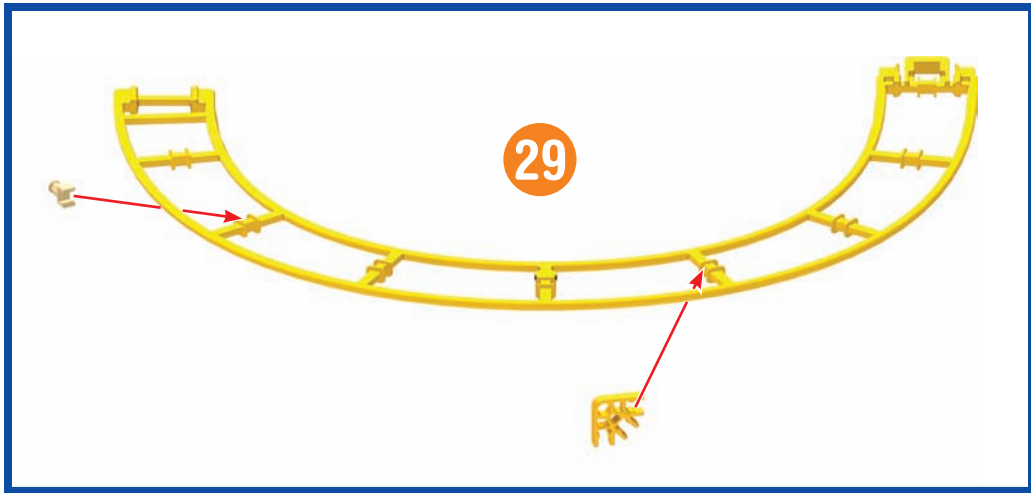


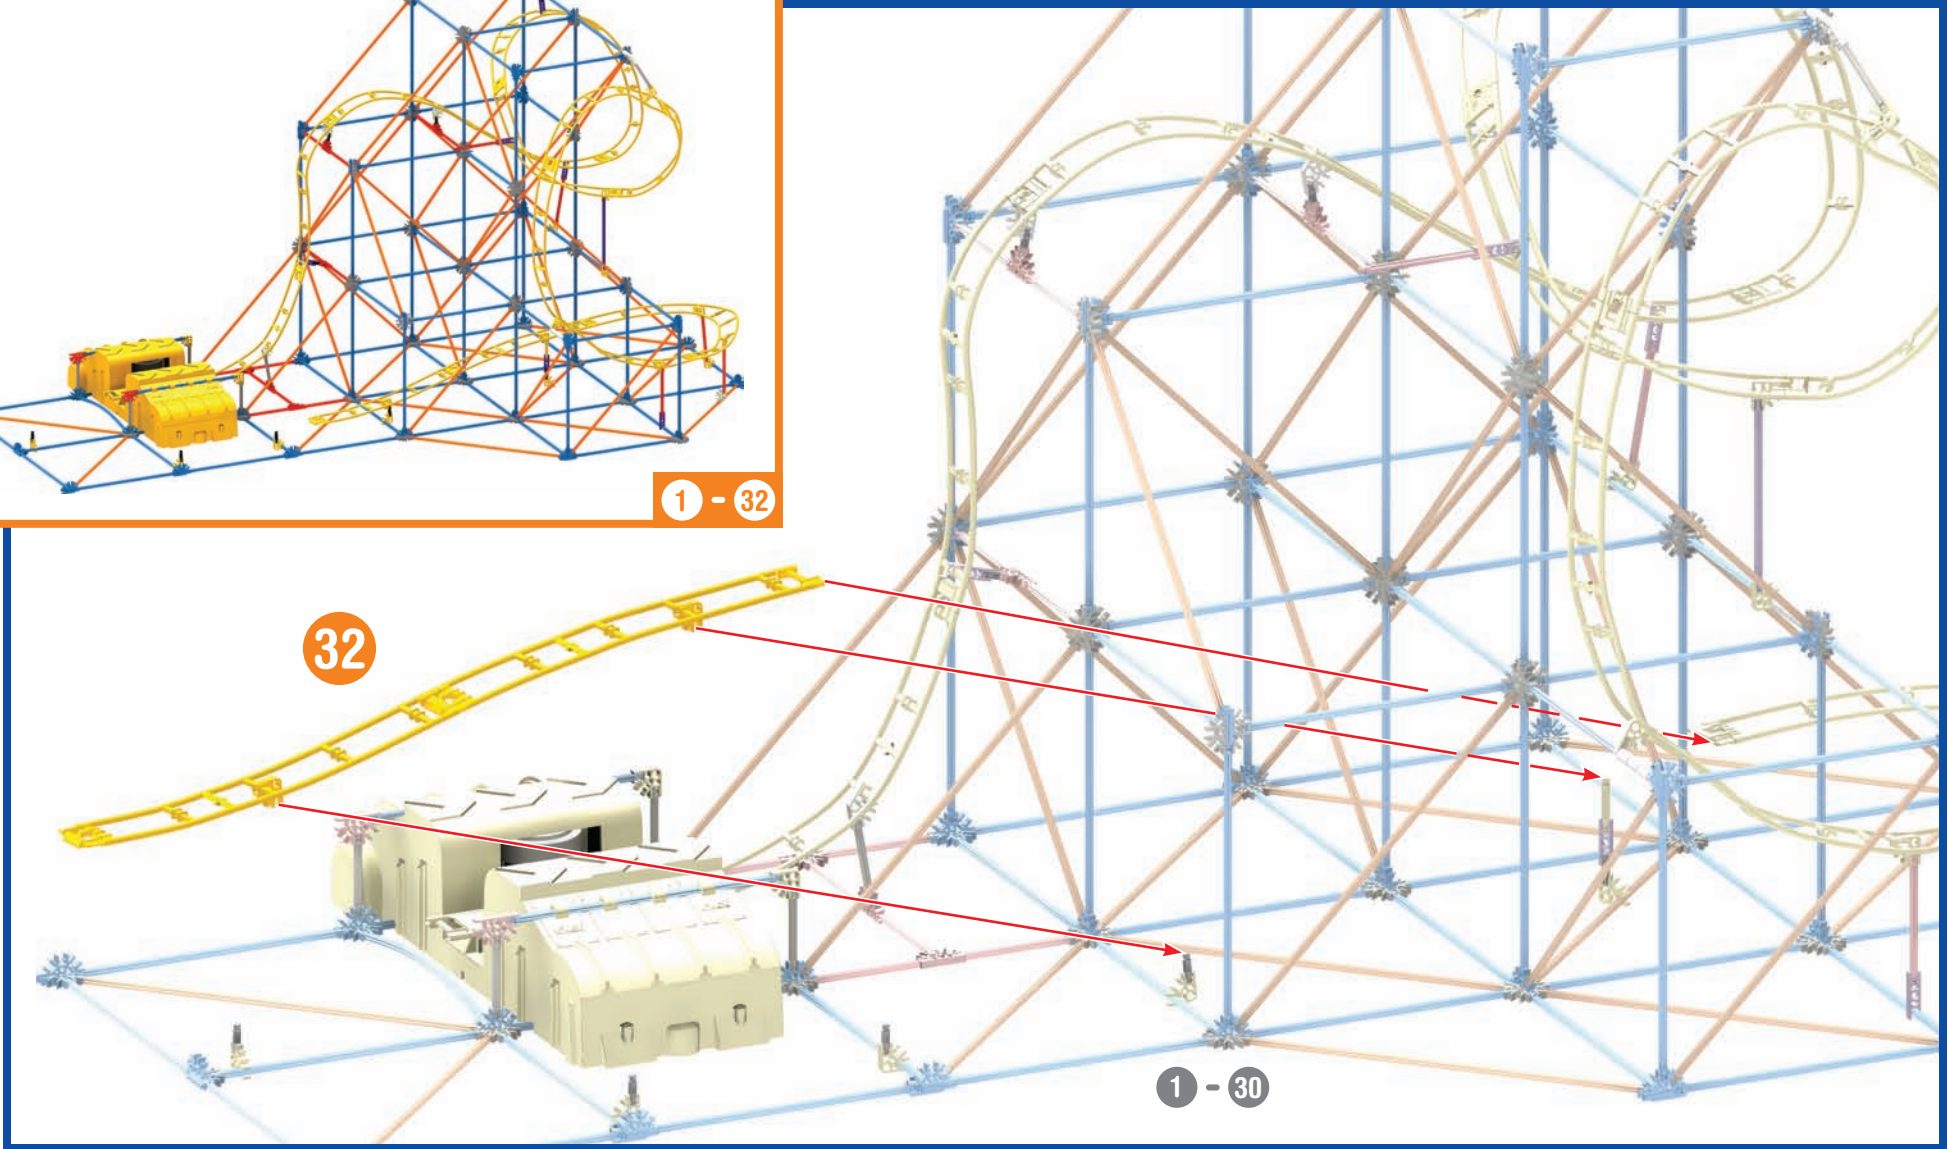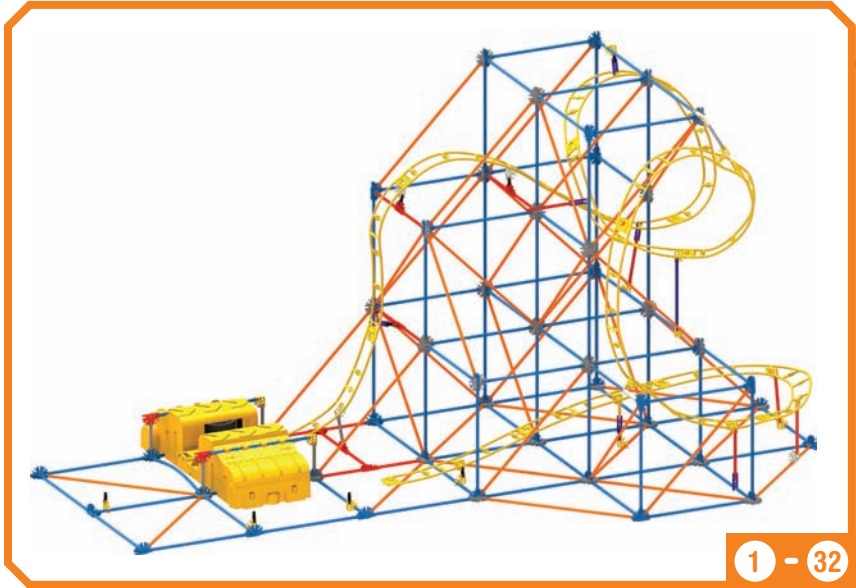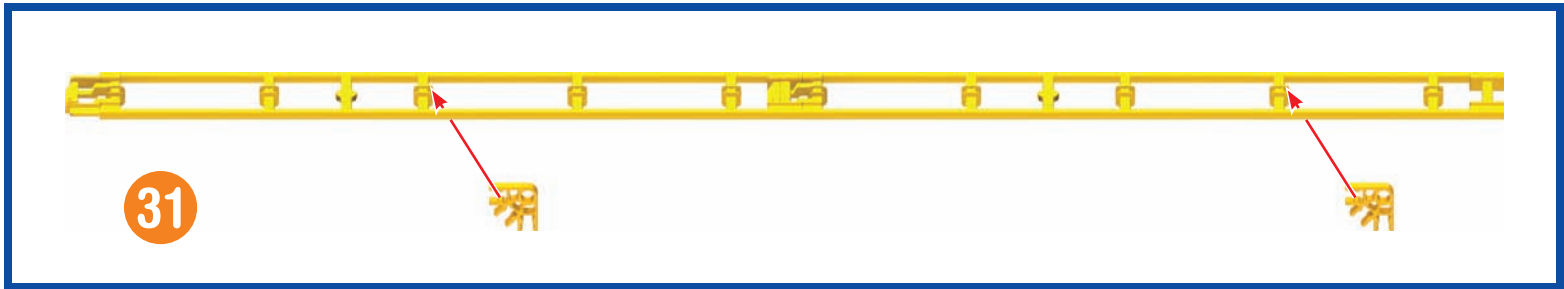

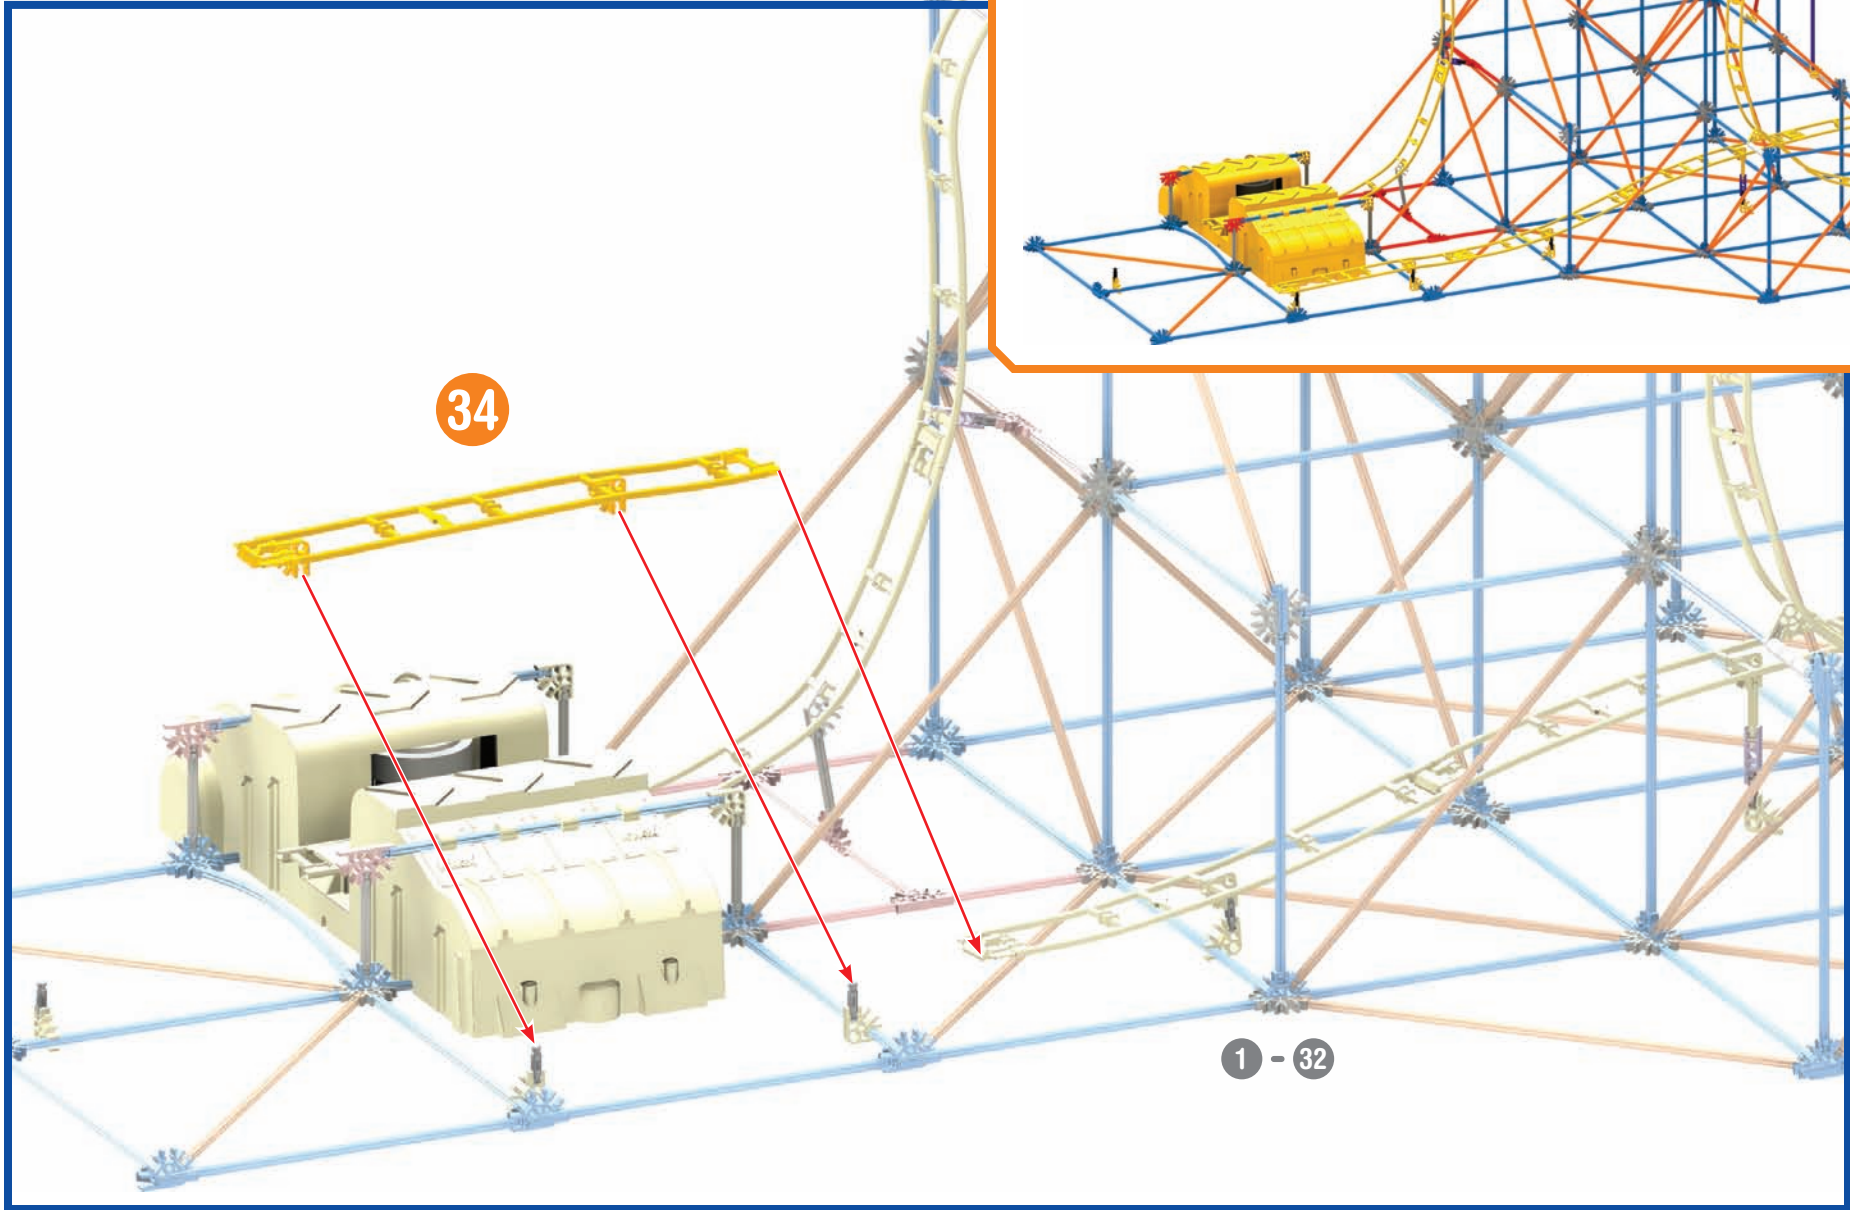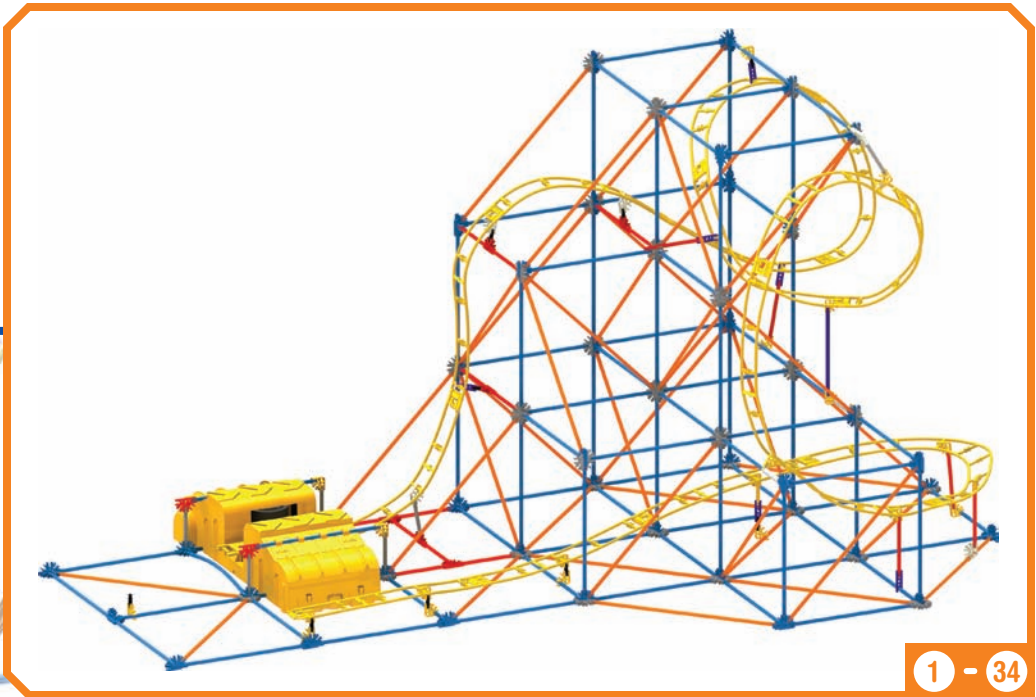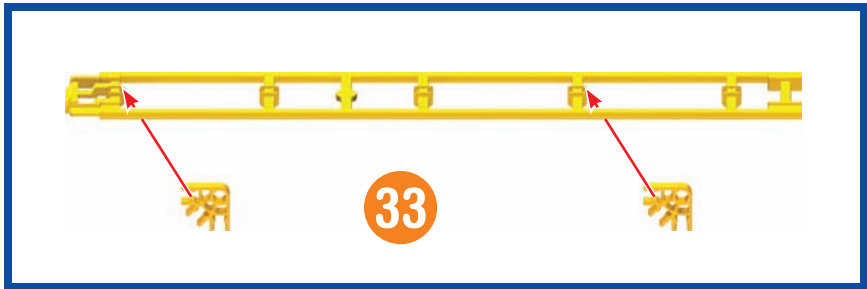

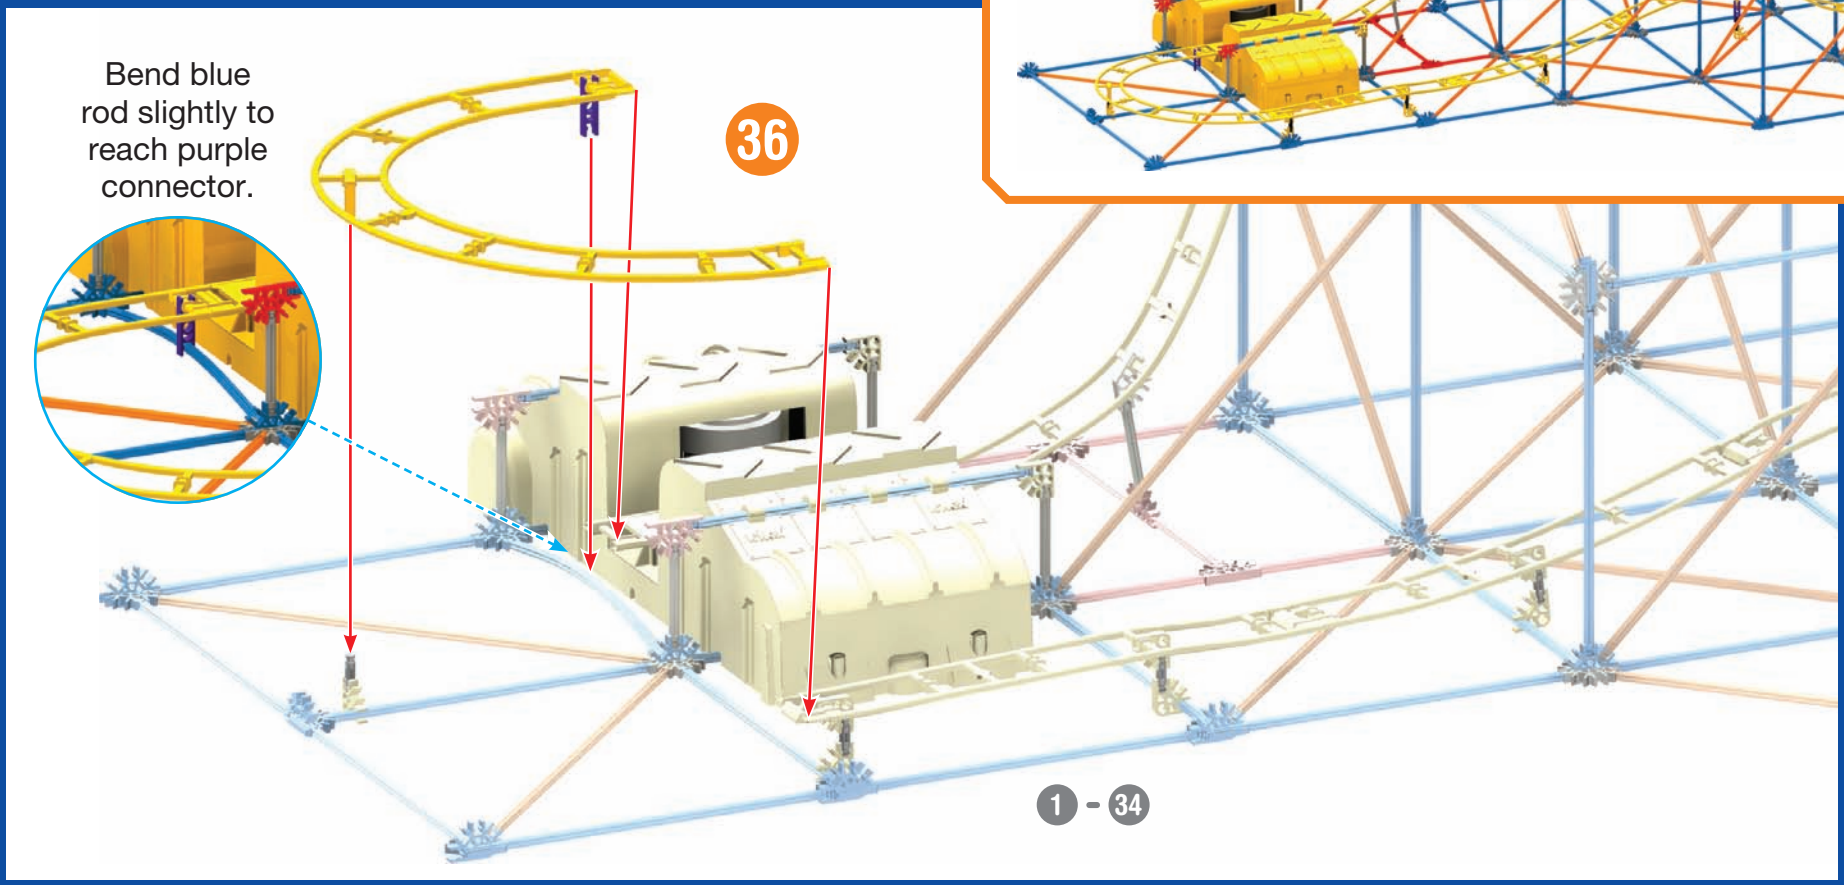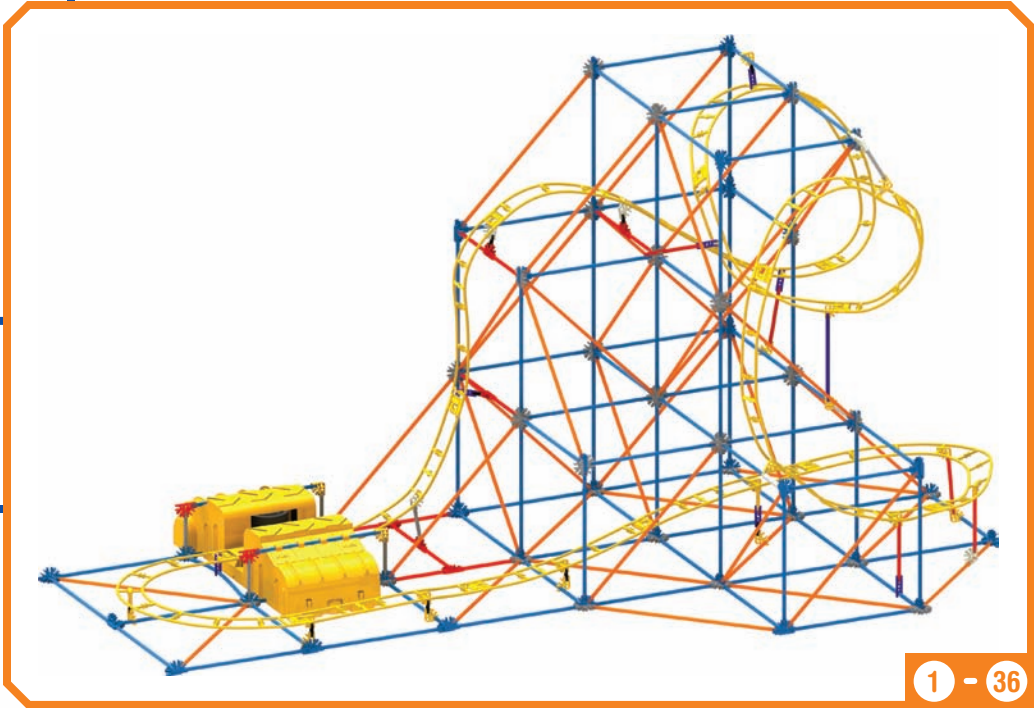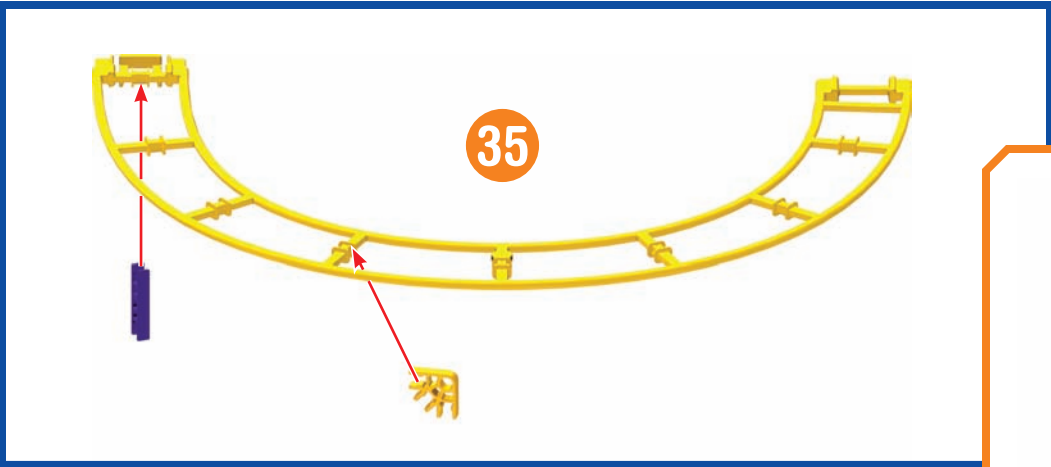

37

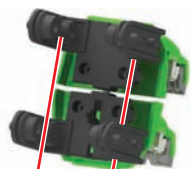


To attach the car, undo a piece of track and then thread the car wheels over the top side of the track. Then join the track pieces together.

If the car gets stuck on the way down, make sure it is not hitting any K'NEX parts.

1 - 36

METEOR MADNESS

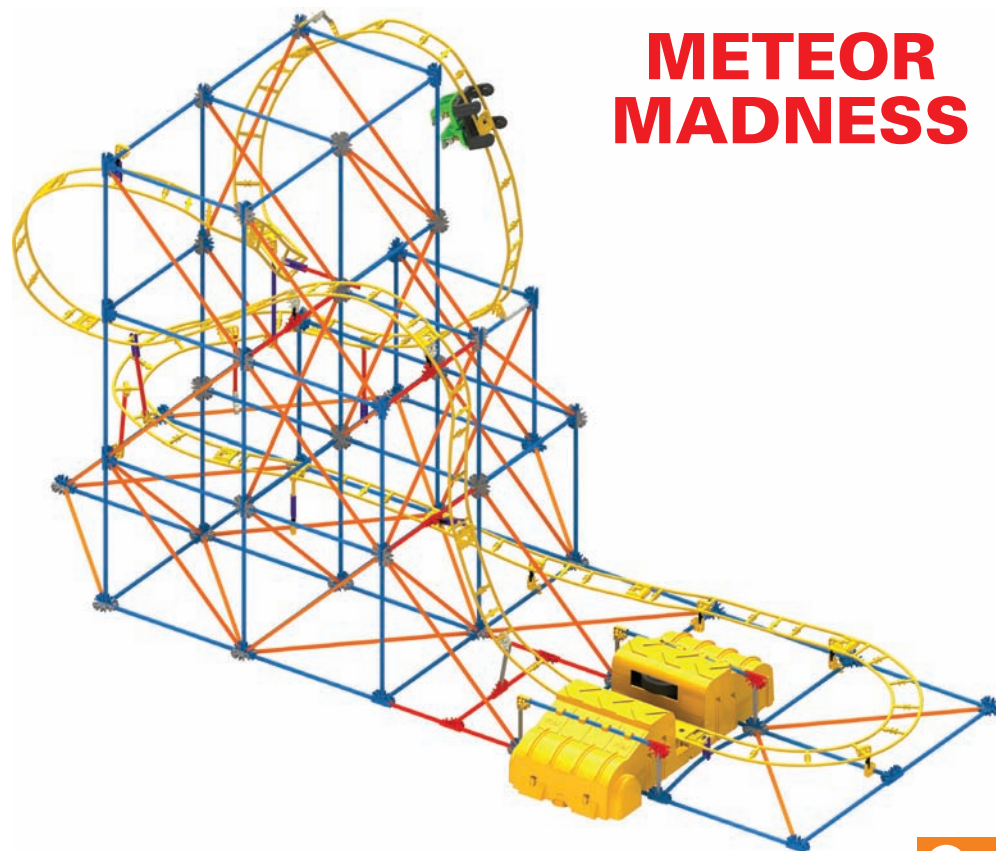

1 - 37